



Leader in
Level Measurement

For Assistance Call 1-800-527-6297
Outside North America + 215-674-1234

Installation and Operating Instructions

ThePoint™ Series Point Level Switch
Auto Calibration or Manual Calibration
Selectable

U.S. and Canada:	1-800-553-9092
24-Hour Service:	1-800-527-6297
International:	+1 215-674-1234
Fax:	+1 215-674-2731
E-mail:	drexelbrook.service@ametek.com
Website:	www.drexelbrook.com

AMETEK Drexelbrook makes no warranty of any kind with regard to the material contained in this manual, including, but not limited to, implied warranties or fitness for a particular purpose. Drexelbrook shall not be liable for errors contained herein or for incidental or consequential damages in connection with the performance or use of material.

© AMETEK Drexelbrook

ThePoint™ Series Point Level Switch Auto Calibration or Manual Calibration Selectable




Register

ThePoint™

and extend your warranty to 24 months

24 Month Warranty Registration at... www.drexelbrook.com

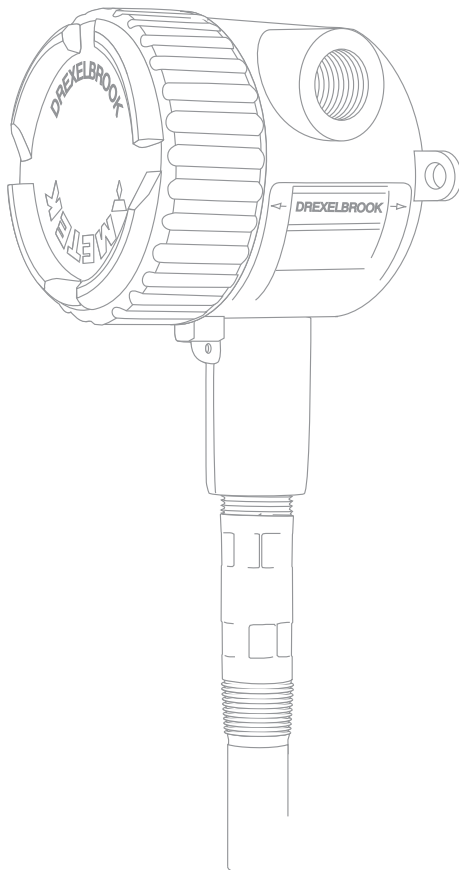

Extend your warranty!

...from 12 months to 24 months by registering your purchase. Please go to www.drexelbrook.com and click on the pull down menu "Contact Us" than "Warranty Registration" and fill out the form.

Contents

Contents


Section 1:	Introduction	1
1.1	System Description	1
1.2	Technology	1
1.3	Model Number	2
1.4	Housing Dimensions	4
Section 2:	Installation	5
2.1	Unpacking	5
2.2	Mounting and Installation Guidelines	5
2.3	Installation of Flush-Mounted Sensing Elements	7
2.4	Input Wiring	8
2.5	Output Wiring – Relay Version	8
2.6	Output and LED Status	9
2.7	Electronic Unit	10
2.8	Spark Protection	11
2.9	Sensing Element Connection	12
2.10	Calibration	14
Section 3:	Troubleshooting	23
3.1	Testing Sensing Element	23
3.2	Testing Electronic Unit	24
3.3	Testing Relay Circuits	25
3.4	Over Range	25
3.5	Under Range	25
3.6	Testing Integral Cable	26
3.7	Testing Remote Cable	26
3.8	Factory Assistance	27
3.9	Field Service	27
3.10	Customer Training	27
3.11	Equipment Return	28
3.12	RF Point Level Troubleshooting Guide	29
Section 4:	Specifications	31
4.1	Approvals Available	32
Section 5:	Control Drawings	33
5.1	FM Control Drawings	33
5.2	CSA Control Drawings	44
5.3	ATEX Control Drawings	51
5.4	TestSafe Control Drawings	56
5.5	Heavy Duty Spark Protection	59
5.6	Adding a Padded Capacitor	61
	Shortening or Lengthening Sensing Element	A1

Section 1

Section 1: Introduction


1.1 System Description

The AMETEK Drexelbrook ThePoint™ Series uses No-Cal™ technology to detect the presence or absence of material without calibration or initiation via setpoint adjustments, push-buttons or magnets.

NOTICE
 *Material to be measured must be below sensor when power is applied.*

Installation is simple and easy. Simply apply power and ThePoint system is ready to detect the presence or absence of material. Since ThePoint instrument does not require calibration or setpoint adjustments, it is capable of operating in non-dedicated tanks regardless of the material being measured.


1.2 Technology

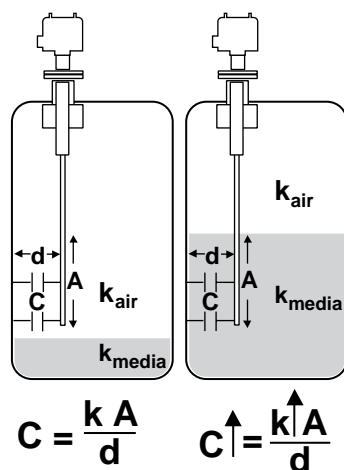

*Figure 1-1
Simple Capacitance
Probe
(Insulating Media)*

In a simple capacitance probe type sensing element, when the level rises and material covers the probe, the capacitance within the circuit between the probe and the media (conductive applications) or the probe and the vessel wall (insulating applications) increases. This is due to the dielectric constant (k) of the material, which causes a bridge mis-balance. The signal is demodulated (rectified), amplified and the output is increased. There are drawbacks, however, especially when there is coating of the probe.

An RF Admittance level transmitter is the next generation. Although similar to the capacitance concept, ThePoint employs a radio frequency signal and adds the Cote-Shield™ circuitry within the Electronics Unit.

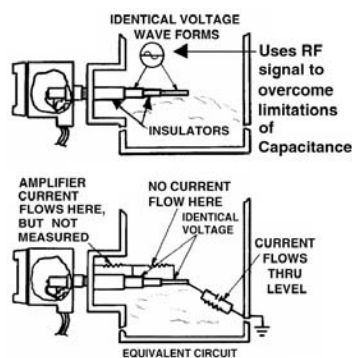

*Figure 1-2
RF Admittance Probe
with Cote-Shield*

This patented Cote-Shield™ circuitry is designed into ThePoint series and enables the instrument to ignore the effect of buildup or material coating on the sensing element. The sensing element is mounted in the vessel and provides a change in RF admittance indicating presence or absence of material. The Cote-Shield™ element of the sensor prevents the transmission of RF current through the coating on the sensing element. The only path to ground available for the RF current is through the material being measured.

The result is an accurate measurement regardless of the amount of coating on the probe, making it by far the most versatile technology, good for very wide range conditions from cryogenics to high temperature, from vacuum to 10,000 psi pressure, and works with all types of materials.

1.3 Model Number



All Calibration modes are built into the standard unit.
Modes can be changed in the field as required (See Section 2.9.9)

Technology					
P	RF Admittance				
Measurement Type					
L	No Calibration, 2 pF Fixed Preload				
P	No Calibration, 0.5 pF Fixed Preload (High Sensitivity)				
M	Manual Calibration				
G	Manual Calibration (High Sensitivity)				
Input					
L	Universal Power Supply 19-250 VAC, 18-200 VDC				
Output					
1	One DPDT Relay, dry contacts, 5A, 120VAC (Min 100 mA / 12 VDC)				
2	One DPDT Relay, gold plated contacts (Max 200 mA / 12 VDC)				
Housing					
0	No Approvals, NEMA 4X/IP66, M20 x 1.5 conduit entries				
1	No Approvals, NEMA 4X/IP66 ¾" NPT conduit entries				
2	CENELEC/ATEX				
3	FM Approved				
4	CSA Approval				
Electronics					
0	Integral	7	Rmt. w/ (25 ft.) Tri-Ax Cable	E	Rmt. w/ (75 ft.) 1st 10ft Hi-Temp. Cbl.
1	Remote, no cable	8	Rmt. w/ (50 ft.) Tri-Ax Cable	F	Rmt. w/ (5 ft.) G.P. Cable
2	Rmt. w/ 3 m (10 ft.) G.P. cable	9	Rmt. w/ (75 ft.) Tri-Ax Cable	G	Rmt. w/ (5 ft.) Tri-Ax Cable
3	Rmt. w/ 7.6 m (25 ft.) G.P. cable	A	Rmt. w/ (10 ft.) Hi-Temp. Cable	H	Rmt. w/ (10 ft.) Tri-Ax Cable
4	Rmt. w/ 10.6 m (35 ft.) G.P. cable	B	Rmt. w/ (25 ft.) 1st 10ft Hi-Temp. Cbl.	J	Rmt. w/ (35 ft.) Tri-Ax Cable
5	Rmt. w/ 15.2 m (50 ft.) G.P. cable	C	Rmt. w/ (35 ft.) 1st 10ft Hi-Temp. Cbl.	K	Rmt. w/ (5 ft.) Hi-Temp. Cable
6	Rmt. w/ 23 m (75 ft.) G.P. cable	D	Rmt. w/ (50 ft.) 1st 10ft Hi-Temp. Cbl.		
Sensing Element					
	Application	Sensing Element	Pressure/Temperature	Wetted Parts	
	00 General purpose	700-1202-001 remote 700-1202-021 integral	13.8 bar @ 232°C (200 PSI @ 450°F)	316SS and PEEK	
	01 Floating roof with cable attachment and brass bottom weight	700-1202-012 remote 700-1202-022 integral	13.8 bar @ 177°C (200 PSI @ 350°F)	316SS, Brass, and PEEK	
	02 General purpose, longer insertion lengths with cable attachment and 316SS bottom weight	700-1202-014 remote 700-1202-024 integral	13.8 bar @ 177°C (200 PSI @ 350°F)	316SS and PEEK	
	03 Proximity	700-1202-018 remote 700-1202-028 integral	13.8 bar @ 232°C (200 PSI @ 450°F)	316SS and PEEK with 76 mm (3) 316SS proximity plate 316SS and PEEK	
	04 General purpose, high temperature and pressure	700-1202-041 remote 700-1202-042 integral	69 bar @ 121°C (1000 PSI @ 250°F) 20.7 bar @ 232°C (300 PSI @ 450°F)	316SS and FDA grade PEEK	
	06 General purpose with FDA approved materials of construction	700-1202-031 remote 700-1202-032 integral	13.8 bar @ 232°C (200 PSI @ 450°F)	316SS and FDA grade PEEK	
	07 General purpose Granular materials	700-1202-010 remote 700-1202-020 integral	13.8 bar @ 232°C (200 PSI @ 450°F)	316SS and PEEK with 7/8 inch dia. 316SS collr	
	09 General purpose Granular materials with FDA approved materials of construction	700-1202-033 remote 700-1202-034 integral	13.8 bar @ 232°C (200 PSI @ 450°F)	316SS and FDA grade PEEK with 7/8 inch dia. 316SS collar	
	10 Corrosive liquids (2)(4)(9)	700-0001-018 remote	3.4 bar @ 149°C (50 PSI @ 300°F)	PFA	
	11 General purpose, higher pressure TFE compatibility required	700-0201-005 remote	69 bar @ 38°C (1000 PSI @ 100°F) 13.8 bar @ 232°C (200 PSI @ 450°F)	316SS and TFE	
	12 Corrosive material, higher pressure	700-0201-005 int/rem Hastelloy C	69 bar @ 38°C (1000 PSI @ 100°F) 13.8 bar @ 232°C (200 PSI @ 450°F)	Hastelloy C and TFE	
	13 Sanitary (3)	700-0201-036 int/rem	69 bar @ 38°C (1000 PSI @ 100°F) 13.8 bar @ 232°C (200 PSI @ 300°F)	316/316L SS and TFE	
	14 General Purpose, low pressure	700-0202-002 int/rem	3.4 bar @ 149°C (50 PSI @ 300°F) 1.4 bar @ 232°C (20 PSI @ 450°F)	316SS and TFE	
	15 Heavy duty, agitated tanks or material with high bulk density (1)	700-0202-043 remote	69 bar @ 38°C (1000 PSI @ 100°F) 13.8 bar @ 232°C (200 PSI @ 450°F)	316SS and TFE	
	16 High Integrity Seal for Hazardous Materials	700-0002-360 int/rem	34.5 bar @ 149°C (500 PSI @ 300°F)	PFA	
	17 Sanitary (3) lowpressure	700-0202-036 int/rem	3.4 bar @ 149°C (50 PSI @ 300°F)	316SS and TFE	
	18 Corrosive material, higher pressure with waterlike viscosity (4)	700-0001-022 int/rem	69 bar @ 38°C (1000 PSI @ 100°F) 34.5 bar @ 149°C (500 PSI @ 300°F)	TFE	
	19 Interface Measurement	700-0002-023 int/rem	69 bar @ 38°C (1000 PSI @ 100°F) 34.5 bar @ 149°C (500 PSI @ 300°F)	316SS and TFE	
	20 Miniature Pilot Plant Sensor (1)(7)	700-0209-002 remote	6.9 bar @ 121°C (100 PSI @ 250°F) 0 bar @ 232°C (0 PSI @ 450°F)	316 SS and TFE	

Continued on Next Page

1.3 Model Number (continued)

Fly Ash Precipitators, Baghouse, and Economizers (1) (6)			
Application	Sensing Element	Pressure/Temperature	Wetted Parts
31 No hopper Installation	700-0029-001 remote	0.1 bar @ 260°C (2 PSI @ 500°F)	316SS and TFE
32 Hopper Installation up to 200mm (8 inches)	700-0029-002 remote	0.1 bar @ 260°C (2 PSI @ 500°F)	316SS and TFE
33 Hopper Installation up to 250mm (10 inches)	700-0029-003 remote	0.1 bar @ 260°C (2 PSI @ 500°F)	316SS and TFE
34 Hopper Installation up to 330mm (13 inches)	700-0029-004 remote	0.1 bar @ 260°C (2 PSI @ 500°F)	316SS and TFE
35 Hopper Installation up to 400mm (16 inches)	700-0029-005 remote	0.1 bar @ 260°C (2 PSI @ 500°F)	316SS and TFE
Plugged Chute Detection (1) (5)			
Application	Sensing Element	Pressure/Temperature	Wetted Parts
50 Flush Mount Sensor 305mm ² (12 inches ²) heavy duty	700-0207-001 remote	0.1 bar @ 82°C (1 PSI @ 180°F)	304 SS and Polyurethane
51 Flush Mount Sensor 305mm ² (12 inches ²) higher temperature	700-0207-002 remote	0.1 bar @ 149°C (1 PSI @ 300°F)	304 SS and TFE
52 Flush Mount Sensor 305mm ² (12 inches ²) with curved radius 153, 229, 305 mm (6, 9, or 12 inches)	700-0207-003 remote	0.1 bar @ 82°C (1 PSI @ 180°F)	304 SS and Neoprene
53 Flush Mount Sensor 305mm ² (12 inches ²) extra heavy duty	700-0207-004 remote	0.1 bar @ 82°C (1 PSI @ 180°F)	410 SS and UHMW Polyethylene
55 Flush Mount Sensor 203mm ² (8 inches ²) heavy duty	700-0207-006 remote	0.1 bar @ 82°C (1 PSI @ 180°F)	304 SS and Polyurethane
High Pressure / High Temperature			
60 High Pressure & Temp.	700-0204-038 remote	137.9 bar @ 93°C (2000 PSI @ 200°F) 68.9 bar @ 260°C (1000 PSI @ 500°F)	316SS and Ceramic
61 High Temperature	700-0204-002 remote	0 bar @ 816°C (0 PSI @ 1500°F)	316SS and Ceramic
62 High Pressure & Temp.	700-0204-048 remote	275.8 bar @ 316°C (4000 PSI @ 600°F)	316SS
ZZ Sensing Element Not Listed			

Mounting Type (See separate Mounting Chart for first three digits)

	IL	CSL		IL	CSL
xxx1	457 mm (18")	152 mm (6")	xxxG	457 mm (18")	0 mm (0")
xxx2	305 mm (12")	152 mm (6")	xxxH	914 mm (36")	254 mm (10")
xxxA	152 mm (6")	51 mm (2")	xxxJ	914 mm (36")	0 mm (0")
xxxB	305 mm (12")	51 mm (2")	xxxK	1219 mm (48")	254 mm (10")
xxxC	305 mm (12")	89 mm (3.5")	xxxL	1524 mm (60")	254 mm (10")
xxxD	457 mm (18")	51 mm (2")	P00X	IL/CSL Other	
xxxE	457 mm (18")	89 mm (3.5")	A1BX	IL/CSL factory set for Fly Ash	
xxxF	457 mm (18")	254 mm (10")	xxxZ	Other	



Not all mounting options available with all sensing elements

- Notes:** CSL (Cote-Shield Length) should extend through Nozzle + Typical "Wall Buildup" + 2 Inches
- (1) Available with remote electronics only
 - (2) Use A1P mounting option
 - (3) Choose only sanitary mounting options
 - (4) Available with 0-inch CSL only
 - (5) Use P00X mounting option
 - (6) Use A1B mounting option
 - (7) Use A8B mounting option (¼-inch NPT)
 - (8) Choose from flange mounting only
 - (9) FM approved with remote electronics only

NPT Threads

A1B	¾"NPT	316SS
A1C	¾"NPT	Hastelloy C
A1P	¾"NPT	PFA

A2B	1"NPT	316SS
A2C	1"NPT	Hastelloy C

Sanitary TriClamps

C2B	1"TriClamp	316SS	C4B	2"TriClamp	316SS
C3B	1½"TriClamp	316SS			



DIN Flanges

E01	25 mm	16 bar	RF 316/316L SS	E02	25 mm	16 bar	RF CS
EP1	25 mm	40 bar	RF 316/316L SS	EP2	25 mm	40 bar	RF CS
EQ1	50 mm	16 bar	RF 316/316L SS	EQ2	50 mm	16 bar	RF CS
ER1	50 mm	40 bar	RF 316/316L SS	ER2	50 mm	40 bar	RF CS
ES1	80 mm	16 bar	RF 316/316L SS	ES2	80 mm	16 bar	RF CS
ET1	80 mm	40 bar	RF 316/316L SS	ET2	80 mm	40 bar	RF CS
EU1	100 mm	16 bar	RF 316/316L SS	EU2	100 mm	16 bar	RF CS
EV1	100 mm	40 bar	RF 316/316L SS	EV2	100 mm	40 bar	RF CS
EW1	150 mm	16 bar	RF 316/316L SS	EW2	150 mm	16 bar	RF CS
EX1	150 mm	40 bar	RF 316/316L SS	EX2	150 mm	40 bar	RF CS

ANSI Flanges

DA1	1"	150#	RF 316/316L SS	DA2	1"	150#	RF CS
DB1	1½"	150#	RF 316/316L SS	DB2	1½"	150#	RF CS
DC1	2"	150#	RF 316/316L SS	DC2	2"	150#	RF CS
DD1	2½"	150#	RF 316/316L SS	DD2	2½"	150#	RF CS
DE1	1"	300#	RF 316/316L SS	DE2	1"	300#	RF CS
DF1	1½"	300#	RF 316/316L SS	DF2	1½"	300#	RF CS
DG1	2"	300#	RF 316/316L SS	DG2	2"	300#	RF CS
DH1	2½"	300#	RF 316/316L SS	DH2	2½"	300#	RF CS
DI1	3"	150#	RF 316/316L SS	DI2	3"	150#	RF CS
DJ1	3"	300#	RF 316/316L SS	DJ2	3"	300#	RF CS
DK1	4"	150#	RF 316/316L SS	DK2	4"	150#	RF CS
DL1	4"	300#	RF 316/316L SS	DL2	4"	300#	RF CS
DM1	6"	150#	RF 316/316L SS	DM2	6"	150#	RF CS
DN1	6"	300#	RF 316/316L SS	DN2	6"	300#	RF CS

1.4 Housing Dimensions

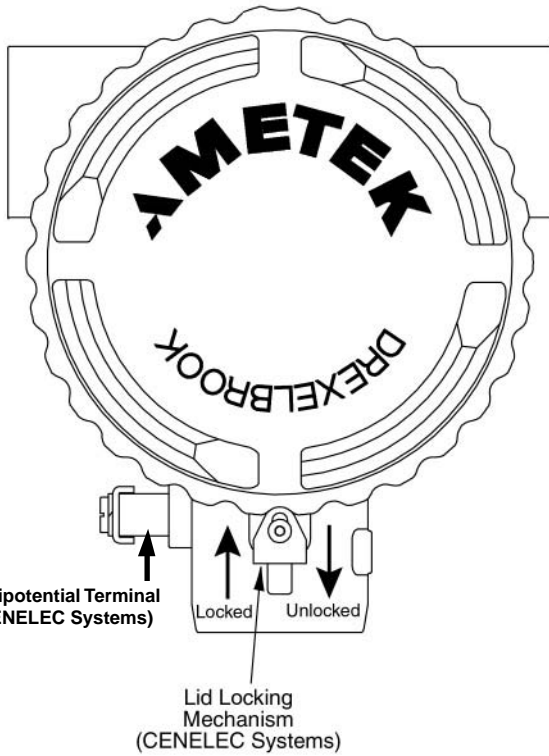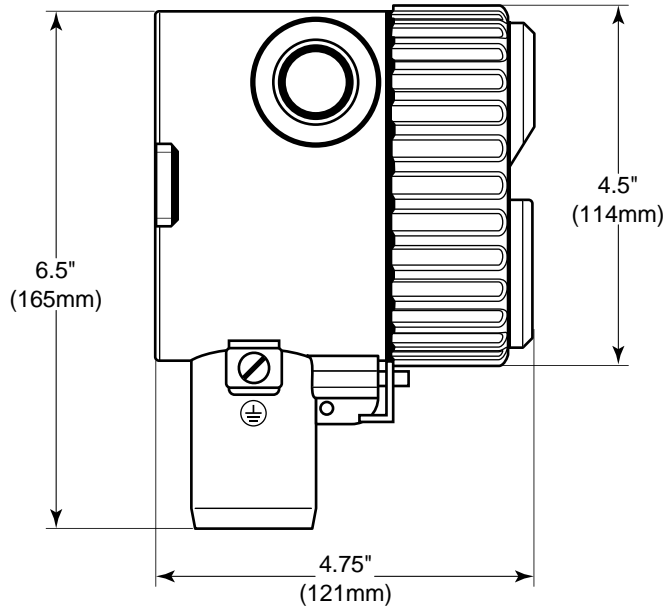

AMETEK
 DREXELBROOK
 205 KEITH VALLEY RD.
 HORSHAM, PA 19044 U.S.A.
 +1-215-674-1234
 WWW.DREXELBROOK.COM

ThePoint™ PXTX 2 -INTEGRAL SERIES
 MODEL NUMBER LOCATED INSIDE HOUSING

SERIAL NO.: ACR-XXXXXX
 INPUT VOLTAGE: 13-30 VDC
 POWER: 1W
 ENCLOSURE TYPE: IP 66
 -30°C ≤ Tamb ≤ +70°C
 YEAR OF MANUFACTURE: SEE INSIDE

Ui = 30V
 Ii = 140mA
 Pi = 1W
 Ci = 0
 Li = 159uH

II 1 GD EEx ia IIC T5...T2
 T90°C NEMKO 04 ATEX 1233X
 INSTALL PER 420-0004-221-CD

⚠ **WARNING** DO NOT OPEN WHEN AN EXPLOSIVE GAS/DUST ATMOSPHERE MAY BE PRESENT
 REFERENCE INSTRUCTION MANUAL FOR LIVE MAINTENANCE PROCEDURES

⚡ POSSIBLE SHOCK HAZARD WITH COVER REMOVED

DREXELBROOK

270-0101-837

AMETEK
 DREXELBROOK
 205 KEITH VALLEY RD.
 HORSHAM, PA 19044 U.S.A.
 +1-215-674-1234
 WWW.DREXELBROOK.COM

ThePoint™ PXTX 2 -REMOTE SERIES
 MODEL NUMBER LOCATED INSIDE HOUSING

SERIAL NO.: ABI-XXXXXX
 INPUT VOLTAGE: 18-200 VDC 19-250 VAC
 FREQUENCY: 50-60Hz
 POWER: 2W
 ENCLOSURE TYPE: IP 66
 -30°C ≤ Tamb ≤ +70°C
 YEAR OF MANUFACTURE: SEE INSIDE

II 1/2 GD EEx [ia] IIC T5, T90°C
 NEMKO 03 ATEX 1409
 INSTALL PER 420-0004-186-CD

⚠ **WARNING** DO NOT OPEN WHEN AN EXPLOSIVE GAS/DUST ATMOSPHERE MAY BE PRESENT
 REFERENCE INSTRUCTION MANUAL FOR LIVE MAINTENANCE PROCEDURES

⚡ POSSIBLE SHOCK HAZARD WITH COVER REMOVED

DREXELBROOK


Figure 1-3
 Compartment Housing Detail

Section 2: Installation

2.1 Unpacking

Carefully remove the contents of the shipping carton and check each item against the packing list before destroying any packing material. If there is any shortage or damage, immediately report it to the factory at 1-800-527-6297 (US and Canada or + 215-674-1234 (International).

2.2 Mounting and Installation Guidelines

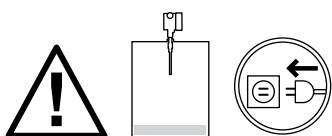

CAUTION:


ThePoint instrument must be powered after it is installed in the application and with material below the sensing element.

ThePoint instrument can be mounted vertically or horizontally or at an angle. Mounting location should be as free as possible from vibration, corrosive atmospheres, and any possibility of mechanical damage. Ambient temperatures at electronics should be between -30 to 70° C (-22 to 158° F).




NOTE:

To reduce possibility of damage caused by water in conduit, install drip loop and breather drain in conduit to purge any accumulating moisture as shown in Figure 2-1.

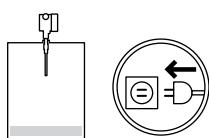


After system is installed and level is below sensing element, apply power. ThePoint series instrument does not require any calibration or setpoint adjustments and is ready to detect change in level.

WRONG
Allows Moisture Infiltration

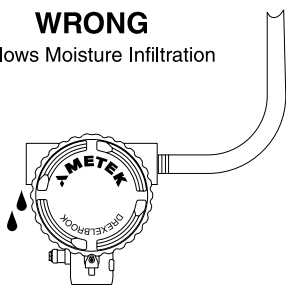

CORRECT

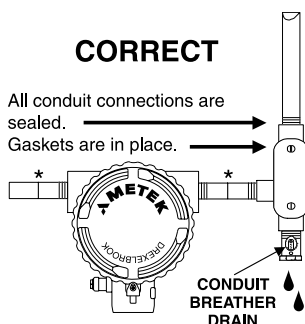


If properly installed, the green LED will light when power is applied. Neither the green nor red LED should be flashing. If either of the LEDs are flashing, refer to, *Section 4, Troubleshooting.*

Use only cable supplied by
AMETEK Drexelbrook




Cable fittings supplied are weather-resistant. They are NOT certified as explosion proof (XP) or flameproof (d) unless they are specifically marked.

WRONG
Allows Moisture Infiltration

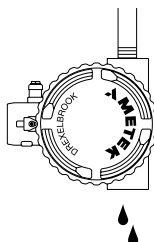


CORRECT

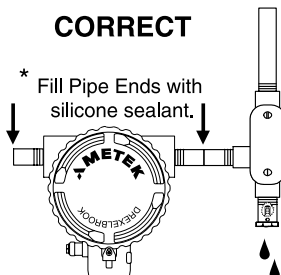

*Figure 2-1
Recommended Conduit Connection*

2.2 Mounting and Installation Guidelines (continued)

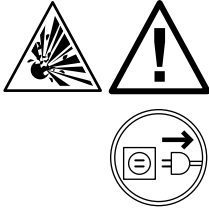

WARNING:

ThePoint equipment is rated explosion proof. When installing in explosion hazardous areas [rated “potentially hazardous” (EU) or “hazardous classified” (USA)] observe all national and local regulations as well as specifications in the certificate.

Mount sensing element using the following installation guidelines. *Refer to Figure 2-2.*

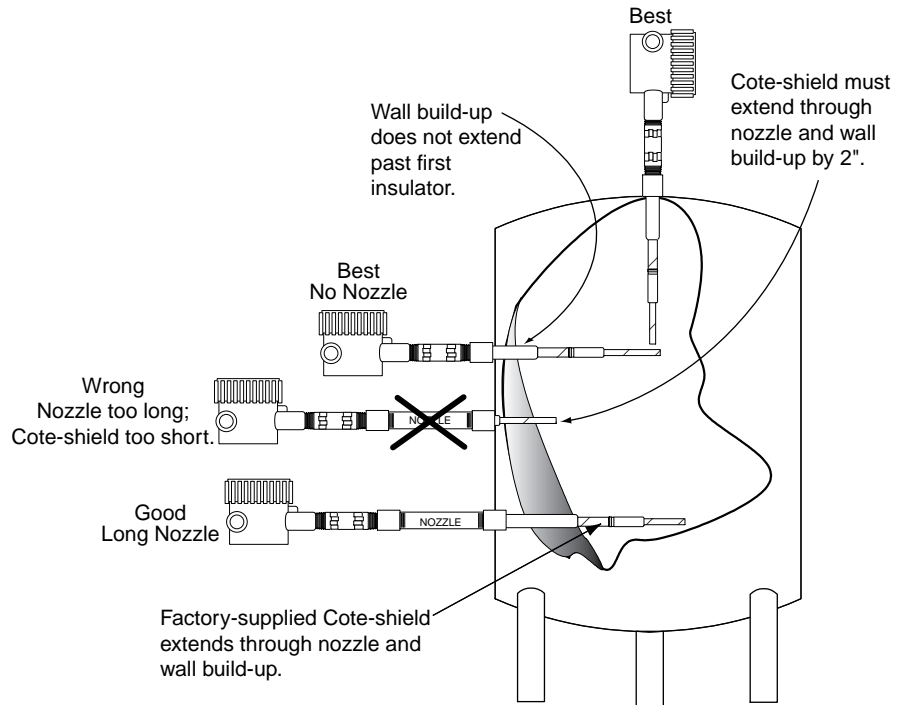


Figure 2-2
Installation Considerations

- When installing ThePoint instrument, ambient temperature at electronics must not exceed 70°C (158°F).
- When installing flange-mounted sensing elements, keep mating surfaces and bolts free of paint and corrosion to ensure proper electrical contact with vessel. Avoid using excessive amounts of Teflon™ tape when installing threaded sensing elements.
- Install systems with threaded NPT connection via wrench flats on the process connection ONLY.
- Locate sensing element to avoid enhancing electrostatic discharge from process medium, as is good practice with any thermowell, displacer, or sampler. This includes correct bonding to tank or silo wall.
- If installation area is rated explosion proof and requires conduit seal fittings, they should be used in accordance with company standards and local codes.




2.2 Mounting and Installation Guidelines (continued)

- Mounting sensing element inside a pipe is not recommended.
- Do not mount a Cote-Shield sensing element through a nozzle that exceeds length of first insulator.
- Ensure that there are no obstructions or agitator blades to interfere with sensing element.
- Rigid sensing elements can be mounted at any angle.

2.3 Installation of Flush-Mounted Sensing Elements

These instructions apply to all flush on/off sensing elements, models 700-0207-001, 700-0207-002, 700-0207-003, 700-0207-004, 700-0207-006. These systems will sense presence of material (no flow or plugged chute) and absence of material (flow or empty chute) at the sensing element. The Flush Sensing Element will ignore free falling material.

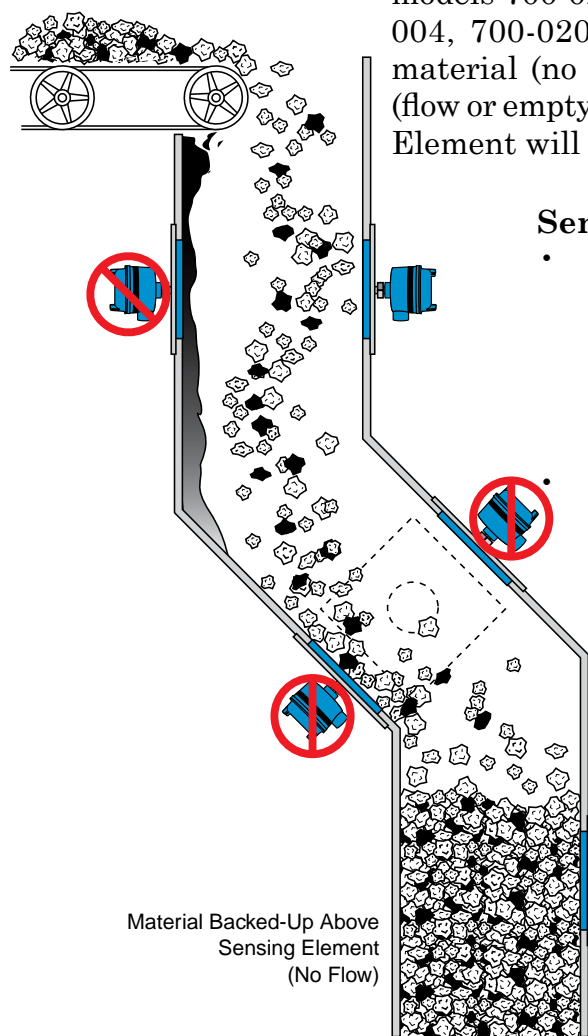

Sensing Element at the Top of a Chute.

- The flush sensing element should be mounted **In The Flow Stream**. These sensing elements are designed and built to withstand the impact of coal, rock, wood, chips, etc. This location is important to prevent excessive build up of material on the face of the sensing element. Excessive build up, typically consisting of wet and/or sticky fines, can occur if the sensing element is protected from falling material.


Sensing Element in an angle chute.

- Do not mount on the top or bottom.
- Best mounted on either side

Sensing Element at the Bottom

- Mount on any side.
- Low-Level sensors can be used to detect a plug or to insure that a seal is present (chute is full at this point).


2.4 Input Wiring

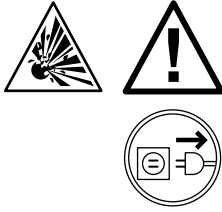

WARNING:


If ThePoint instrument is located in a hazardous environment, do not open enclosure cover or make/break any electrical connections without first disconnecting electrical power at the source. Ensure that wiring, electrical fittings and conduit connections conform to electrical codes for the specific location and hazard level.

ThePoint instrument uses a universal power supply and can be operated from any source between 19 to 250 VAC or 18 to 200 VDC. The universal power supply automatically detects input voltage regardless of polarity and does not require jumper changes. *See Figure 2-3.*

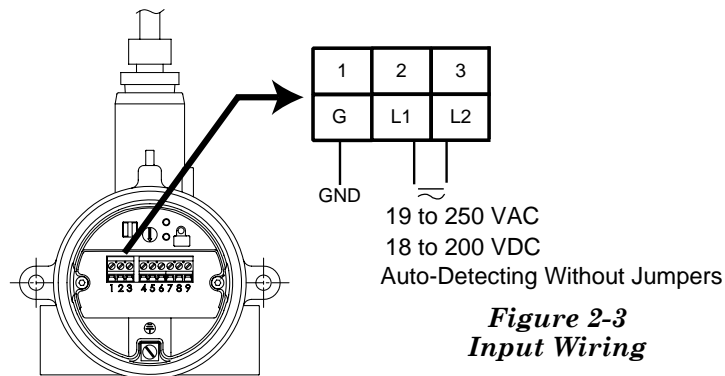

2.5 Output Wiring – Relay Version

ThePoint series instrument is supplied with two sets of contacts using one 5A DPDT alarm relay. *See Figure 2-4.*

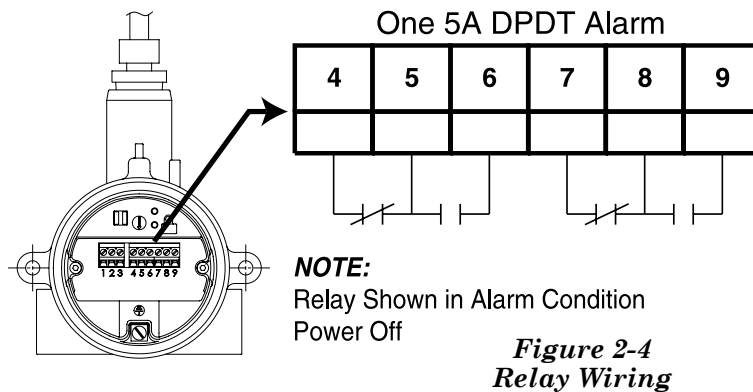

IMPORTANT

Ground Must be Provided for Proper Operation and Safety.

2.6 Output and LED Status

There are two status LEDs located on top of Electronic Unit. The green LED is used to indicate that unit has power. The red LED is used to indicate condition of the relay. See *Figure 2-6*.









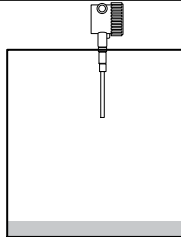
Tank Condition	Relay Status
 <p>High Level FailSafe Tank Empty</p>	 <p>Power GREEN LED On Relay 1 RED LED Off</p>
 <p>High Level FailSafe Tank Full</p>	 <p>Power GREEN LED On Relay 1 RED LED On</p>
 <p>Low Level FailSafe Tank Empty</p>	 <p>Power GREEN LED On Relay 1 RED LED On</p>
 <p>Low Level FailSafe Tank Full</p>	 <p>Power GREEN LED On Relay 1 RED LED Off</p>

Figure 2-5
Output and LED Status
Note: Relays Shown as Powered State

2.7 Electronic Unit

Remove housing lid to access status LEDs, time delay adjustment, and configuration jumpers. *See Figure 2-6.*

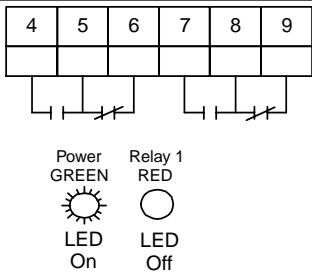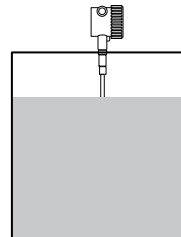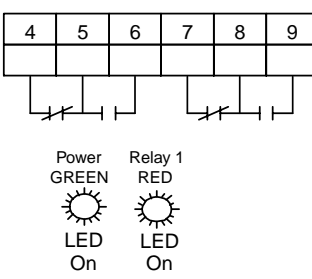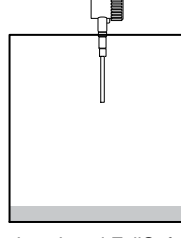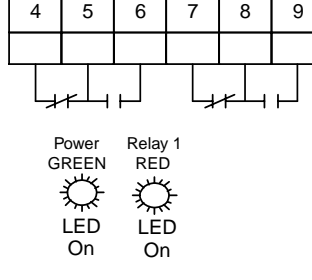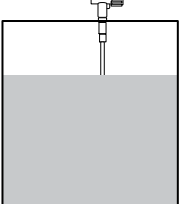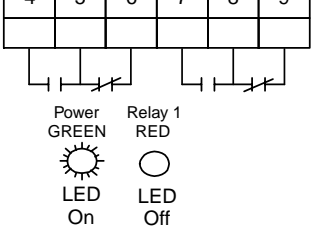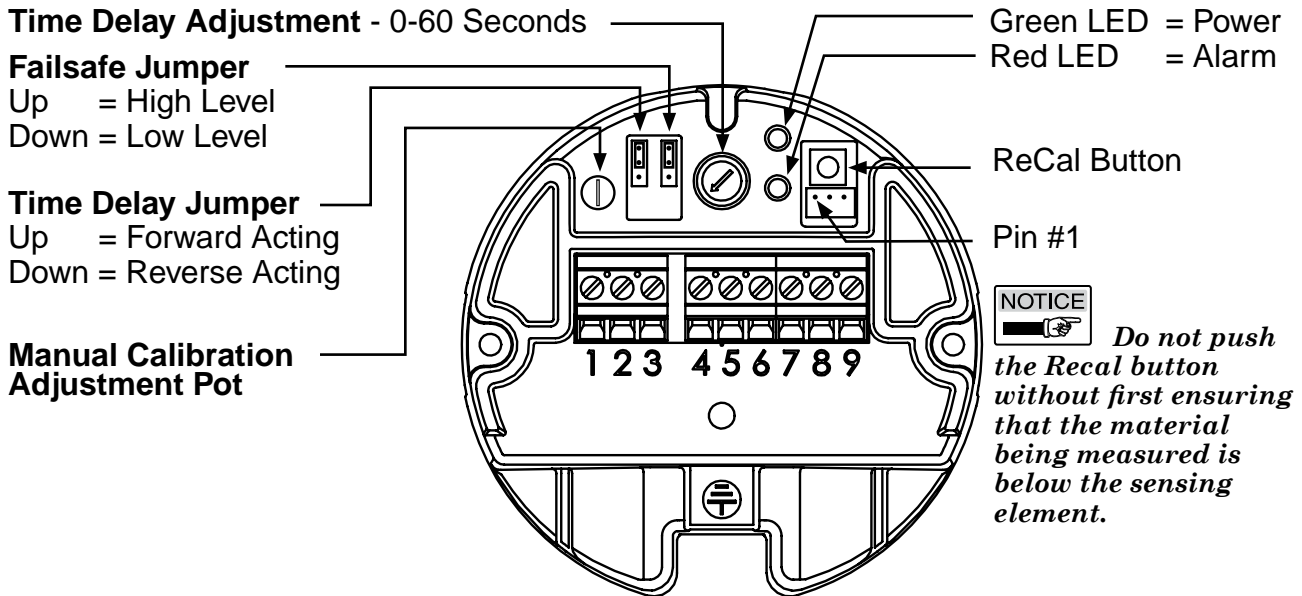

*Figure 2-6
Electronic Unit Adjustments*

2.7.1 Time Delay

TIME DELAY adjustment is used to avoid an oscillating relay output due to agitation or waves in the vessel. The time delay adjustment can be field adjusted from 0 to 60 seconds. Unit is shipped with time delay setting at zero seconds.



The Time Delay adjustment is a 270-Degree turn pot and is at zero seconds when in the full counter-clockwise position. Do not force the pot past the stop or damage will occur.


2.7.2 Time Delay Action

TIME DELAY ACTION describes whether the relay contacts are delayed from going into the alarm state or recovering from an alarm state.


- **FWD:** delays system from coming out of alarm.
- **REV:** delays system from going into alarm.
- The instrument is supplied with time delay action set in forward mode (**FWD**) position.
- Time delay action is field-selectable using a jumper located on top of Electronic Unit. *See Figure 2-6.*

2.7.3 Failsafe

FAILSAFE describes the level condition that causes the output relay to de-energize, and also the state of the relay upon loss of power.



- **High Level Failsafe (HLFS).** The relay will de-energize when level is high, indicating high level upon loss of power. (N.O. contacts open and N.C. contacts closed)



- **Low Level Failsafe (LLFS).** The relay will de-energize when level is low, indicating low level upon loss of power. (N.O. contacts open and N.C. contacts closed)

- Instrument is supplied with failsafe jumper set in high level (HLFS) position.
- Failsafe is field-selectable using a jumper located on top of Electronic Unit. *See Figure 2-6.*

2.7.4 ReCal Button, Memory Reset

If system is powered on the bench prior to installation, or moved from one tank to another, **RECAL** is necessary to allow software to capture the air capacitance generated by sensing element in tank.

Merely press the **ReCal Button** for 5 Seconds (shown in Figure 2-6). Both LED's flash for 60 seconds before reset occurs. [Remove power from the system while the LED's are flashing and reset will occur immediately].



Do not push the Recal button without first ensuring that the material being measured is below the sensing element.

The system is now ready for installation.

2.8 Spark Protection

Applications involving insulating granulars and insulating liquids may produce a static discharge that can damage the electronics. The RF series instrument is supplied with integral heavy-duty spark protection to prevent static discharges from damaging the electronic circuits.

2.9 Sensing Element Connection

Sensing element connects to the rear side of the circuit board and is factory-installed.



The sensing element is sealed to the housing and cannot be removed without permanent damage.

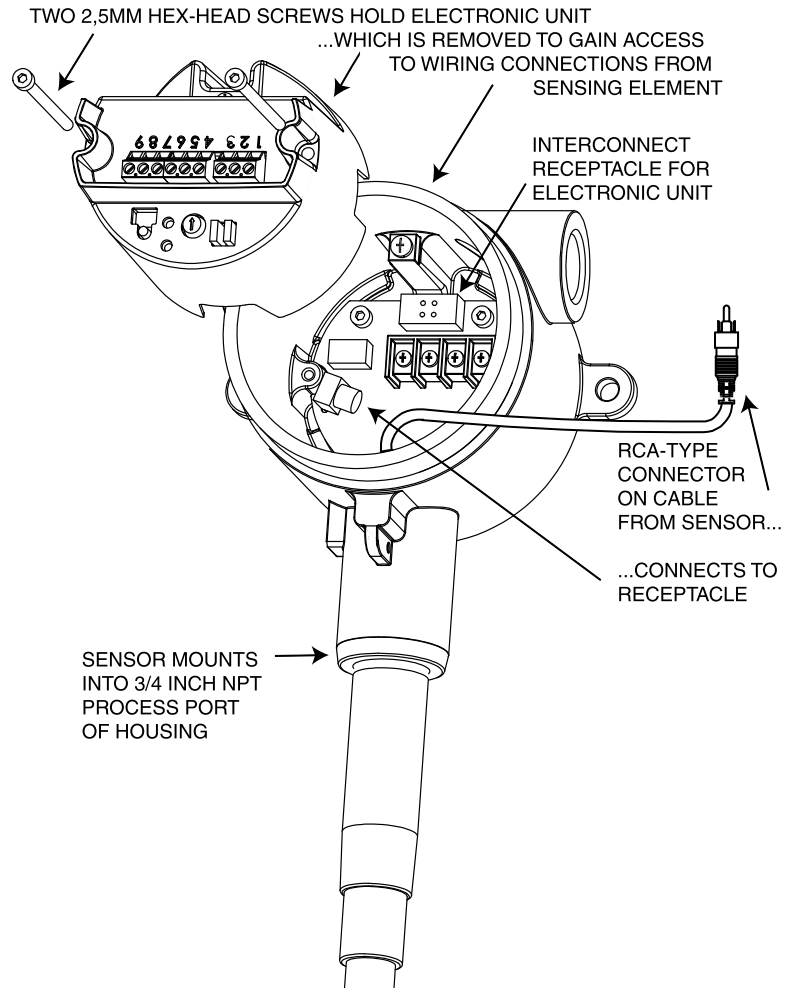


Figure 2-7
Sensing Element Connection
(Integral Housing)

2.9 Sensing Element Connection (continued)

For ThePoint instruments mounted remotely from sensing element, cable connections from sensing element to Electronic Unit are made to terminals beneath the Electronic Unit. *See Figure 2-8.*

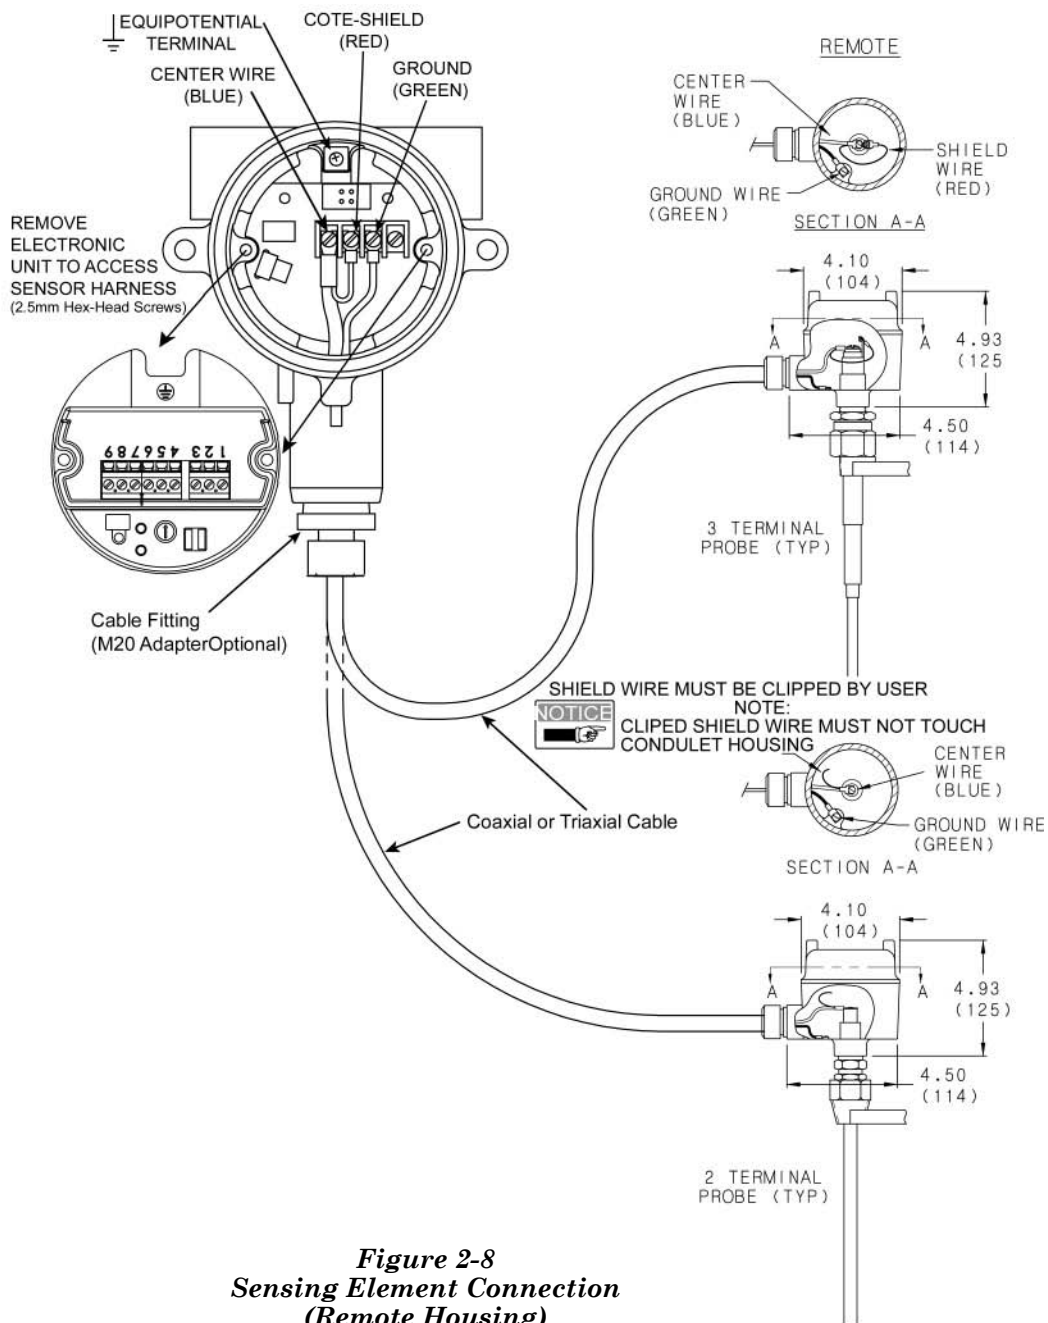


Figure 2-8
Sensing Element Connection
(Remote Housing)

2.10 Calibration

ThePoint™ level measurement switch features both Auto-Cal and manual calibration. The standard Auto-Calibration mode is applicable to most liquids and granular point level measurements. If preferred, the manual calibration can be used and is recommended for some application. ThePoint electronic unit has auto and manual calibration modes built into the standard unit and can be accessed through a simple routine (see section 2.9.5). The inclusion of these calibration modes allows the Drexelbrook RF Point Level Products application flexibility that is far greater than any other point level product on the market. This RF Point Level switch can be used in Liquids, Solids, Slurries, and Interface applications.

2.10.1 Selecting the Calibration Mode for your application.

The following table is a list of measurement types and the recommended calibration mode for each of these applications. ThePoint has eight calibration modes however; only four are used on the majority of applications.



ThePoint will be shipped in the standard Auto-Cal mode #2 unless pre-ordered in a specific mode. To determine if the ThePoint has been shipped in a mode other than #2, look at the label on the inside of the unit housing. The model number will start with PXL1. The “X” indicates the pre-set mode typically an “L” for mode #2.

Common Calibration Modes

- Mode 2 = L - Fixed Cal 2pF: 2pF differential, set point locked 2pF above starting capacitance
- Mode 6 = P - Fixed Cal 0.5pF: 0.5pF differential, set point locked 0.5pF above starting capacitance
- Mode 7 = M - Manual calibration standard sensitivity – pots adjusts from 0 to 65pF
- Mode 8 = G - Manual calibration High sensitivity – pot adjusts from 0 to 27 pF

Additional calibration modes for specialty applications (consult factory)

- Mode # 1 = N Auto Mode 2pF
- Mode # 3 = T Auto Mode 10pF
- Mode # 4 = V Auto Mode 10pF
- Mode # 5 = H Auto Mode 0.5pF

For explanation of mode See Section 2.10.4

2.10.1 Selecting the Calibration Mode for your application (Continued)

Application Guide

(For instructions on how to access alternate modes see 2.10.4)

Application	Calibration Mode
Liquids and Slurries	Auto-Cal Mode #2
Granular /Solids with Bulk Density greater than 20#s per cubic foot	Manual Cal Mode #7
Granular/Solids with Bulk Density Under 20#s per cubic foot	Manual Cal Mode #8 (high sensitivity)
Interface Measurement	Manual calibration Mode #7
Plugged Chute Indication for Solids (Bulk density greater than 20 #s per cubic foot)	Manual calibration Mode #7
Plugged Chute Indication for Solids (Bulk density under 20 #s per cubic foot)	Manual calibration Mode #8 (high sensitivity)

2.10.2 Using ThePoint with Auto-Calibration mode #2

After ThePoint is installed in the vessel, simply apply power. ThePoint electronic unit will auto calibrate.



Caution

The material being measured must be below the sensing element when power is applied (Sensing element uncovered).

Calibration is complete.

If power has been applied to ThePoint prior to installation (on a test bench) or, if ThePoint is moved from one vessel to another, **RECAL** is necessary for the unit to capture the new air value.

Merely press and hold the RECAL button (shown in Figure 2-6) for five (5) seconds. After five seconds, the two LED's flash for sixty seconds before reset occurs. [Remove power from ThePoint while the LED's are flashing and reset will occur immediately upon next power up].

The Point is now ready for installation.

2.10.3 Using ThePoint with Manual Calibration modes #7, and 8



Warning!

Before removing the explosion-proof housing cover in a potentially hazardous area, make certain that the area is safe. When calibration is complete, the cover must be replaced.

Make sure that ThePoint is set to either mode #7 (standard Sensitivity) or mode #8 (high sensitivity).

See section 2.9.5 for mode selection procedure.

Locate the manual calibration pot on the top of ThePoint electronic unit (see figure 2-6).

The adjustment pot located on the top of the unit controls the point at which the relay operates. A red LED indicates that the relay is de-energized.

Full range of the pot is 25 turns. Each rotation of the pot changes the operating point by 4pF (Mode #7 standard Sensitivity) or 1pF (mode #8 high sensitivity).

Turning adjustment clockwise will raise level at which relay operates. Turning the adjustment counterclockwise will lower the level at which the relay operates.



Calibration Procedures








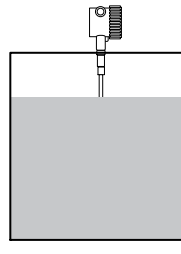






For water-based conducting applications using bare metal sensing elements, turn the adjustment point full clockwise. No other adjustment is required.

2.10.3 Manual Calibration modes #7, and 8 (Continued)

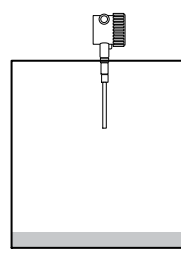Manual Calibration

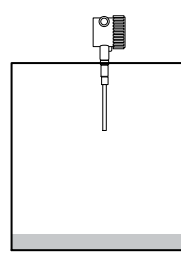When material level can be moved

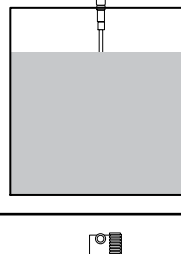Make certain that ThePoint is in manual calibration mode #7 or 8 See Section 2.9.5

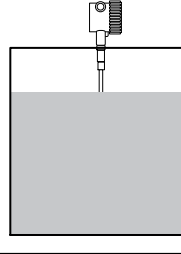








Configuration Settings	Adjustment Potentiometer	RED LED	Notes	
Fail Safe = High Level Time delay set to zero (full counter clockwise – DO NOT FORCE PAST STOP) Time delay action = either	Turn counter clockwise until RED LED is ON 	RED LED ON 	Material being measured must be below sensor at least twelve inches	
	Turn clockwise until RED LED just goes OFF 	RED LED OFF 		
		RED LED will come ON 	Raise material level in vessel until sensor is covered	
	Turn clockwise counting the number of turns until the RED LED goes OFF (or 25 turns whichever comes first) 	RED LED OFF (Or 25 turns whichever comes first) 		
	Turn counter clockwise one half the number of turns counted 	RED LED will come ON 		
	Calibration is Complete			

2.10.3 Manual Calibration modes #7, and 8 (Continued)

Manual Calibration

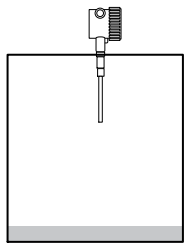When material level **can not** be moved

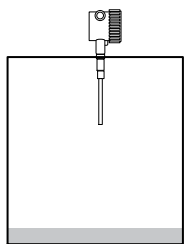Make certain that ThePoint is in manual calibration mode #7 or 8 See Section 2.9.5

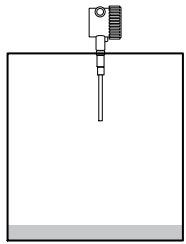Configuration Settings	Adjustment Potentiometer	RED LED	Notes	
Fail Safe = High Level Time delay set to zero (full counter clockwise – DO NOT FORCE PAST STOP) Time delay action = either	Turn counter clockwise until RED LED is ON 	RED LED ON 	Material being measured must be below sensor at least twelve inches	
	Turn clockwise until RED LED just goes OFF 	RED LED OFF 		
Turn Adjustment Potentiometer Clockwise the number of turns indicated in the table below for your material type		RED LED OFF 		

Material Being Measured	Mode #7 (Standard Sensitivity)	Mode # 8 (High Sensitivity)
Conductive Materials (Water-Based) see note #1	15 Turns(Note 2)	20 Turns
Insulating Liquids, Organics, Oil, Plastics	1/2 Turn	2 Turns
Granular/Solid materials above 50#/ft3	1/2 Turn	2 Turns
Granular/Solid materials 25-50#/ft3	1/2 Turn	1 Turn
Granular/Solid materials less than 20#/ ft3	Use High Sensitivity Mode #8	3/4 Turn
Moist Granular Plugged Chute Applications using flush mount 700-0207 series sensing element (See Note 3)	1 turn	4 turns
Dry Granular Plugged Chute Applications using flush mount 700-0207 series sensing element	Use High Sensitivity Mode #8	½ turn

Calibration is Complete

2.10.3 Manual Calibration modes #7, and 8 (Continued)

Note 1: Most water based materials can be considered conductive, such as acids, bases, salt solutions, water based slurries, and very wet granular materials. Carbon black and powdered metals conduct even without water.

Note 2: With conducting materials, if heavy build up is anticipated, calibration adjustment can be turned to its clockwise limit.

Note 3: Some Wet Granular materials can be extremely conductive and may require special calibration or different electronic units. If the standard calibration in the table does not provide satisfactory results, please contact the field service department at 1-800-527-6297 (North America) or 215-674-1234 (outside North America)

Nonvolatile Memory

ThePoint has Nonvolatile memory which allows the unit to re-start after power outages without recalibrating.

When ThePoint is powered for the first time the internal microprocessor records and stores the “Air” value. This is the uncovered capacitance value of the sensor mounted in the vessel. ThePoint will also store the last covered value and the last uncovered value.

Whenever ThePoint is powered it uses these values as a reference point to determine its current condition (normal or alarm).

2.10.4 Accessing the Calibration Modes

1. On the top side of ThePoint, temporarily remove the shunt from the “Time Delay Selection Jumper” (see Fig. 2) and place it on pins 1 & 2 of the 3-pin connector. The green LED will go out and the red LED will begin to flash. The number of flashes indicates which mode the unit is in(1 through 8).
2. To switch modes, press and hold the ReCal button next to the 3-pin connector. The unit will cycle through the modes: first it will flash one time indicating mode 1. Then it will flash twice-indicating mode 2. Then mode 3, etc. Release the button when it reaches the desired mode. The Red LED will now flash indicating which mode the unit is in.
3. Remove the shunt from pins 1 & 2 on the 3-pin connector and replace the shunt on the “Time Delay Selection Jumper”. The unit will remain in the selected mode.



Write the new mode # on the inside of the lid label for future reference


4. After setting the mode follow procedure in section 2.10.2 for mode 2. For modes 7 and 8, follow the appropriate manual calibration procedure as described in section 2.10.3.

Failsafe Jumper

Up = High Level
Down = Low Level

Time Delay Jumper

Up = Forward Acting
Down = Reverse Acting

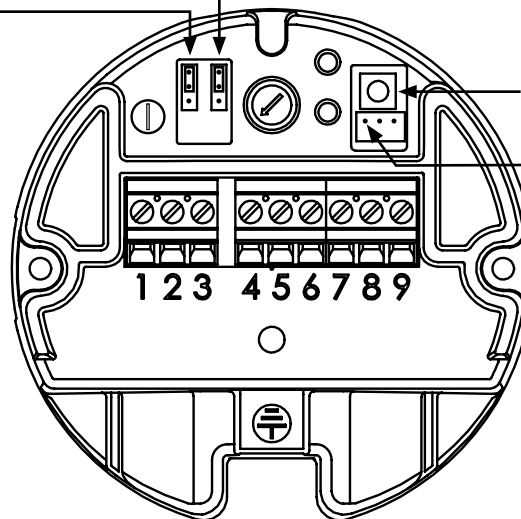

ReCal Button
3 Pin Connector



Do not push the Recal button without first ensuring that the material being measured is below the sensing element.

Electronic Unit Adjustments

2.10.4 Accessing the Calibration Modes (Continued)

Code Designation	Definition of Modes
L	Mode 2: Fixed Cal 2pF: 2pF differential, set point locked 2pF above starting capacitance
M	Mode 7: Manual calibration standard sensitivity – pots adjusts from 0 to 65pF
G	Mode 8: Manual calibration High sensitivity – pot adjusts from 0 to 27 pF
P	Mode 6: Fixed Cal 0.5pF: 0.5pF differential, set point locked 0.5pF above starting capacitance

Code Designation	Other Calibration Modes
N	Mode 1: Auto-Cal 2pF: 2pF differential, set point varies depending on material
T	Mode 3: Auto-Cal 10pF: 10pF differential, set point varies depending on material
V	Mode 4: Fixed Cal 10pF: 10pF differential, set point locked 10pF above starting capacitance
H	Mode 5: Auto-Cal 0.5pF: 0.5pF differential, set point varies depending on material

Determining which mode the unit is in

ThePoint will be shipped in the Auto-Cal mode #2 unless pre-ordered in a specific mode. To determine if the ThePoint has been shipped in a mode other than #2, look at the label on the blue electronic unit. The model number will be 385-0051-012-0X. The “X” indicates the pre-set mode typically a “2” for mode #2

If the Mode has been changed after receiving the unit, the person changing the mode should have made a note of the new mode on the label inside the lid of the housing.

If there is no note on the lid or if there is a question as to what the current mode is, the following procedure can be used:

On the topside of ThePoint, temporarily remove the shunt from the “Time Delay Selection Jumper” (see Fig. 2) and place it on pins 1 & 2 of the 3-pin connector. The green LED will go out and the red LED will begin to flash. The number of flashes indicates which mode the unit is in (1 through 8).

After determining the current mode, replace the shunt on the “Time Delay Selection Jumper”.

Section 3

Section 3: Troubleshooting




WARNING

If ThePoint instrument is located in a hazardous environment, do not open enclosure cover or make/break any electrical connections without first disconnecting electrical power at the source. Ensure that wiring, electrical fittings and conduit connections conform to electrical codes for the specific location and hazard level.

3.1 Testing Sensing Element


To test the sensing element, disconnect the integral cable as discussed in Section 2.8. See Figure 3-1.

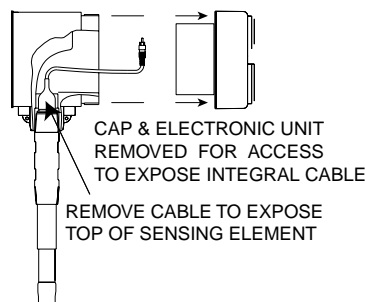

Expect the following measurements:

For Three-terminal Probes:

under sensor side
of integral cable...

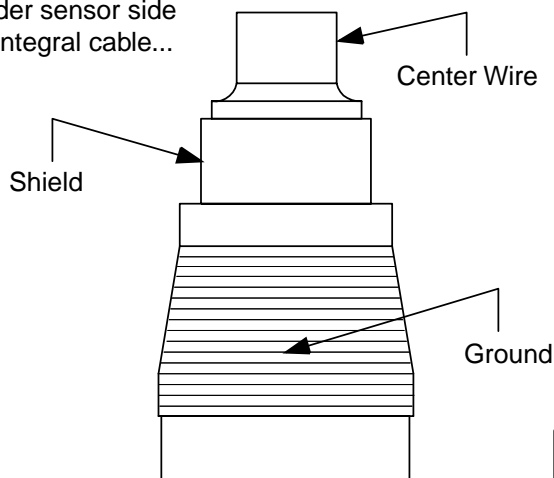

Measured Resistance (Sensor dry and clean):

Center Wire - Ground	∞ Ohms
Center Wire - Shield	∞ Ohms
Shield - Ground	∞ Ohms

Resistance readings must be taken using an analog ohmmeter set to Rx1000 scale.

When tank level is known to be below the sensor, minimum acceptable values are:

Center Wire - Ground	1000 Ohms.
Center Wire - Shield	600 Ohms.
Shield - Ground	300 Ohms.

If the readings are less than the minimum acceptable values:

1. **Check** to see if tank is full, or if a severe coating is present.
2. **Clean sensor** and re-measure the sensor resistances.

Note:

Low resistance readings are acceptable if the sensor is covered with a conductive liquid. Also, low resistance readings can be the result of material lodging in a long mounting nozzle. Refer to Figure 2-2.



Note:

A reading of zero (0) Ohms usually indicates a metal-to-metal short circuit. Check for contact with tank wall, mounting nozzle, or other tank structure.




Figure 3-1
Testing Sensing Element

3.2 Testing Electronic Unit


Use the following steps to test the electronic unit:




1. Be sure environment is safe before removing lid from housing.
2. Observe **FAILSAFE** jumper on circuit board on top of electronic unit (shown in Figure 2-6). Move jumper from current setting to alternate setting [**HLFS** to **LLFS** or vice versa]. Alarm & relay should change state.





3. If possible to access sensing element with material below sensor, or remove ThePoint from vessel, touch tip of sensor with your finger, while holding any bare metal portion of instrument housing with other hand. Alarm & relay should change state.
4. If ThePoint changes state while moving jumper, but not while touching sensing element, in most cases, integral cable is faulty. *See Section - 3.6, Testing Integral Cable.*



5. If ThePoint is stuck in one state:
 - A. Remove power.
 - B. Disconnect coax cable that joins sensing element to electronic unit. *See Section - 2.6, Sensing Element Connection.*



- C. Apply power.
 - D. Repeat step 2.
 - E. If ThePoint changes state with sensing element disconnected, in most cases, sensing element is faulty. *See Section - 3.1, Testing Sensing Element.*




6. If there was no Change of state in either step 2 or step 3 and unit appears dead:
 - A. Remove and then reapply power.
 - B. Press **RESET** (shown in Figure 2-6).
 - C. Observe the two LEDs flashing for about 60 seconds.
 - D. Green LED should be lit after 60 seconds.
 - E. Touch sensing element with your finger.
 - F. Alarm & relay should change state. If so, circuit board is working properly.
 - G. Reinstall instrument and press **RESET**.

7. If ThePoint fails all of above tests, in most cases instrument is faulty. Use replacement electronic unit to determine the fault. Consult factory.

3.3 Testing Relay Circuits

Use the following steps to check out the relay circuits:

1. Relay connections consist of a double-pole double-throw (DPDT) relay.
2. The relay contacts are brought out to terminal strips for external switching. *See Figure 3-2.*
3. Relay operation may generally be heard as an audible click when background noise is not too high. Connect ohmmeter to relay contacts to determine if they are switching.

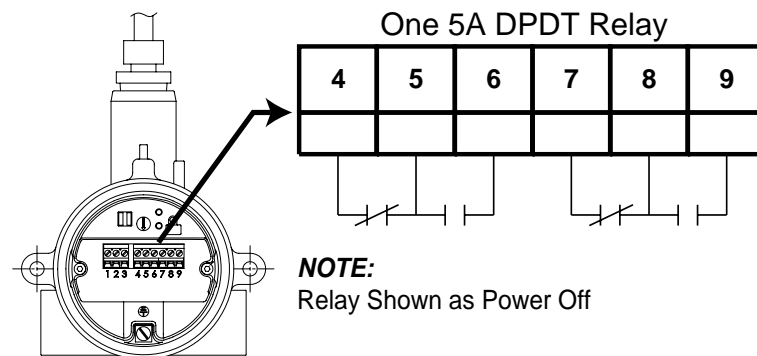

*Figure 3-2
Relay Circuit Operation*

3.4 Over Range

If the GREEN LED is flashing, the instrument has detected the uncovered sensing element capacitance exceeds the limits of the transmitter. *Consult factory instructions.*

3.5 Under Range

If the RED LED is flashing, the instrument has detected the sensing element capacitance is too small. *Consult factory for sensing element capacitor values.*

3.6 Testing Integral Cable

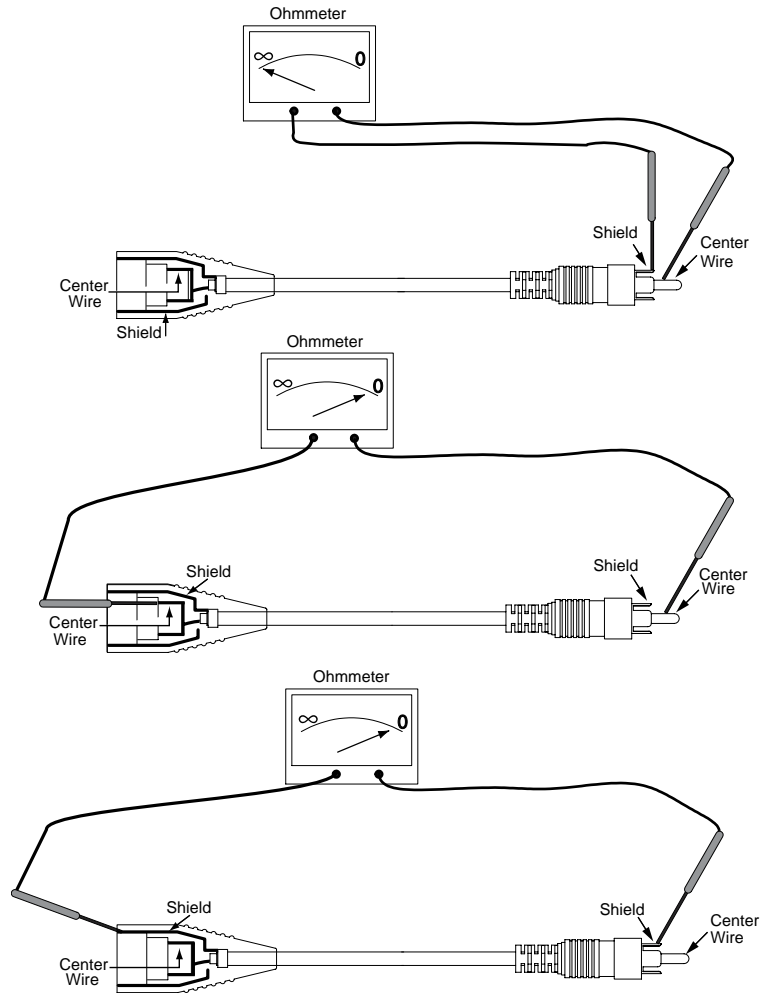
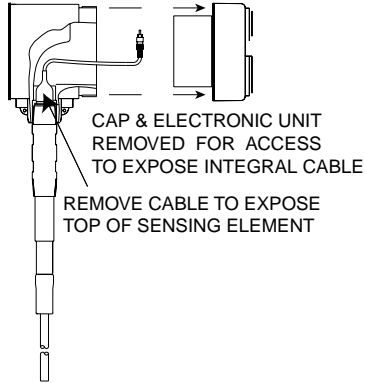


Figure 3-3
Testing Integral Cable

3.7 Testing Remote Cable

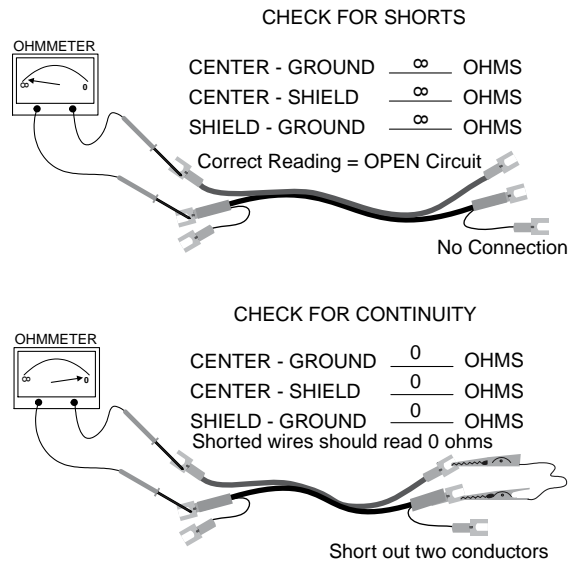


Figure 3-4
Testing Remote Cable

3.8 Factory Assistance

AMETEK Drexelbrook can answer any questions about ThePoint series instrument. Call Customer Service at 1-800-553-9092 (US and Canada) or +1 215 674-1234 (International).

If you require assistance and attempts to locate the problem have failed:

Contact your local Drexelbrook representative,



Telephone the Service department toll-free:

- 1-800-527-6297 (US and Canada)
- +1 215 674-1234 (International)

FAX: Service Department + 215-443-5117

E-mail: drexelbrook.service@ametek.com

Please provide the following information:

- Instrument Model Number
- Sensing Element Model Number and Length
- Original Purchase Order Number
- Material being measured
- Temperature
- Pressure
- Agitation
- Brief description of the problem
- Checkout procedures that have failed

3.9 Field Service

Trained field servicemen are available on a time-plus-expense basis to assist in start-ups, diagnosing difficult application problems, or in-plant training of personnel. Contact the service department for further details.

3.10 Customer Training

Periodically, AMETEK Drexelbrook instrument training seminars for customers are held at the factory. These sessions are guided by Drexelbrook engineers and specialists, and provide detailed information on all aspects of level measurement, including theory and practice of instrument operation. For more information write to:

AMETEK Drexelbrook, Communications/ Training Group
or call 215-674-1234.

3.11 Equipment Return

In order to provide the best service, any equipment being returned for repair or credit must be pre-approved by the factory.

In many applications, sensing elements are exposed to hazardous materials.

- **OSHA mandates** that our employees be informed and protected from hazardous chemicals.
- **Material Safety Data Sheets (MSDS)** listing the hazardous materials to which the sensing element has been exposed **MUST** accompany any repair.
- It is your responsibility to fully disclose all chemicals and **decontaminate** the sensing element.



To obtain a return authorization (RA#), contact the Service department at 1-800-527-6297 (US and Canada) or + 215-674-1234 (International).

Please provide the following information:

- Model Number of Return Equipment
- Serial Number
- Original Purchase Order Number
- Process Materials to which the equipment has been exposed.
- MSDS sheets for any hazardous materials
- Billing Address
- Shipping Address
- Purchase Order Number for Repairs
- Please include a purchase order even if the repair is under warranty. If repair is covered under warranty, you will not be charged.

Ship equipment freight prepaid to:
AMETEK DREXELBROOK
205 KEITH VALLEY ROAD
HORSHAM, PA 19044-1499
COD shipments will not be accepted.

3.12 RF Point Level Troubleshooting Guide

Symptom	Possible Cause	Solution	See Section
Switch is in alarm and will not clear	Sensor is coated by a conductive material and the Cote-Shield™ element does not extend far enough into the vessel	Need a sensor with a longer Cote-Shield element. Rule of thumb is nozzle length + expected wall coating + 2 inches.	Section 2.2
	Fail Safe switch is set to the wrong setting	Check to make sure the fail safe switch is in the correct position	Section 2.6.3
	Active section of sensor is touching an internal structure or material is bridging active to ground.	May be able to shorten sensor (consult factory) or relocate sensor.	Appendix A
	Connection cable or harness between unit and sensor is damaged	Check connection cable for shorts, opens, or damage and proper termination	Section 3.6
	Flexible sensor is swaying and active is touching vessel or structure	Add 1 or 2 seconds of reverse acting time delay.	Section 2.6.1
Switch stays in alarm for extended period after level falls below sensor	Material bridging from active to tank structure	May be able to shorten sensor (consult factory) or relocate sensor.	Appendix A
	Time delay may be active	Make sure time delay pot is full counterclockwise.	Section 2.6.1
Switch does not respond to material	There may not be enough active to “see” an insulating material	Try changing to high sensitivity or adding active length to sensor	Section 2.9.5 Appendix A
	Switch was calibrated with sensor covered by material	Make sure material level is below sensor and re-calibrate	Section 2.9
	Granular material – Active section is not getting enough coverage due to angle of repose	Relocate sensor to get more coverage or lengthen active. Changing to high sensitivity may also help.	Section 2.9.5 Appendix A
	Connection cable or harness between unit and sensor is damaged	Check connection cable for shorts, opens, or damage and proper termination	Section 3.6
Switch delays in responding to material	Reverse acting time delay may be active	Check time delay settings to make sure they are correct	Section 2.6.1
LED's are Flashing	Flashing LED's indicate one of two things. Over Range / Under Range	Consult instruction manual to determine which of the three symptoms are experienced.	Section 3.4 Section 3.5
Over Range indicates that the standing capacitance of the sensing element in the vessel is too large to allow calibration	A long sensing element may generate too much standing capacitance to calibrate out	Padding is required – consult factory	Section 3.4
	The sensor could be touching an internal tank structure	May be able to shorten sensor (consult factory) or relocate sensor.	Appendix A
	Switch was calibrated with sensor covered by material	Make sure material level is below sensor and re-calibrate	Section 2.9
	Improper wiring connection (Remote Switches)	Check remote cable connections to confirm they are correct.	Section 3.6
Under Range indicates that the electronic unit is not seeing enough capacitance.	ThePoint™ - Electronic unit is not attached to back board	Remove electronic unit and make certain that connection pins are not damaged. Re inset electronic unit making sure it is connected to back board.	Section 3.5
	Unit is damaged	Consult factory	Section 3.8
Green Power LED is out	Electronic unit is not getting power	Check power source to make sure proper power is supplied and connections are correct	Section 2.3
	Electronic unit is damaged	Consult factory	Section 3.8
Unit does not respond when pressing the Calibration Button	Cal button only operates when switch is set to Auto-Cal mode	Check to make sure switch is in Auto-Cal	Section 2.9.5
	Electronic Unit is damaged	Consult Factory	Section 3.8

Section 4

Section 4: Specifications

Technology:	RF/ Capacitance
Calibration:	None
Modes of Operation:	High and Low level
Repeatability:	2 mm (0.08 inch) conductive liquids
Response Time:	less than 1 second
Time Delay:	0 to 60 seconds forward and reverse acting
Ambient Electronics:	40 to 70°C (-40 to 158°F)
Storage Temperature:	-40 to 85° C (-40 to 185° F)
Indicators:	LEDs: Green Power, Red relay
Power supply:	Universal Supply 19 to 250 Vac 18 to 200 Vdc auto-detecting without jumper changes
Power consumption:	2 watts maximum
Relay Contacts:	(one) DPDT
Maximum Contact Load:	5A / 30 Vdc 5A / 250 Vac
Maximum Switching Capacity:	2000 VA / 150 Watt
Minimum Contact Load (DC):	100 mA / 12 Vdc 0 to 200 mA / 12 VDC (Optional)
Housing (electronics):	Powder-coated aluminum with two cable entries
Cable entry:	M20 x 1.5 or ¾-inch NPT
Ingress Protection:	IP66 NEMA 4X
Approvals:	ATEX, FM, CSA, Test Safe

4.1 Approvals Available



Remote:

Explosion-proof for Class I, Division 1, Groups A, B, C, and D; Dust-Ignition proof for Class II, III, Division 1, Groups E, F, and G; Non-incendiary for Class I, Division 2, Groups A, B, C, & D; Suitable for Class II, III, Division 2, Groups F & G hazardous outdoor Type 4, 4X, IP66 (classified) locations with Intrinsically Safe connections to Class I, II, III, Division 1, Groups A, B, C, D, E, F, and G hazardous (classified) locations in accordance with Control Drawing 420-0004-181-CD.

Integral:

[Same, but Group A does not apply]



Integral:

Class I, Groups B, C, D; Class II, Groups E, F, G; Class III; Type 4, 4X, IP66; T5 for Ta=70°C. Class I, Division 2, Groups A, B, C, D; Class II, Division 2, Groups F, G; Class III; Type 4, 4X, IP66; T5 for Ta=70°C

Remote:

Class I, Groups A, B, C, D; Class II, Groups E, F, G; Class III; Type 4, 4X, IP66; T5 for Ta=70°C. Class I, Division 2, Groups A, B, C, D; Class II, Division 2, Groups F, G; Class III; Type 4, 4X, IP66; T5 for Ta=70°C



II 1/2 GD EEx d[ia] IIC T2.. T5, Ta= -30°C to +70°C
T 90°C

Test Safe (For Remote Electronics)


Electronics Ex d[ia] IIC T5 DIP A21
 Ta = 100°C

Sensing Element Ex ia IIC T6

Section 5: Control Drawings

5.1 FM Control Drawings

No. 420-0004-181-CD

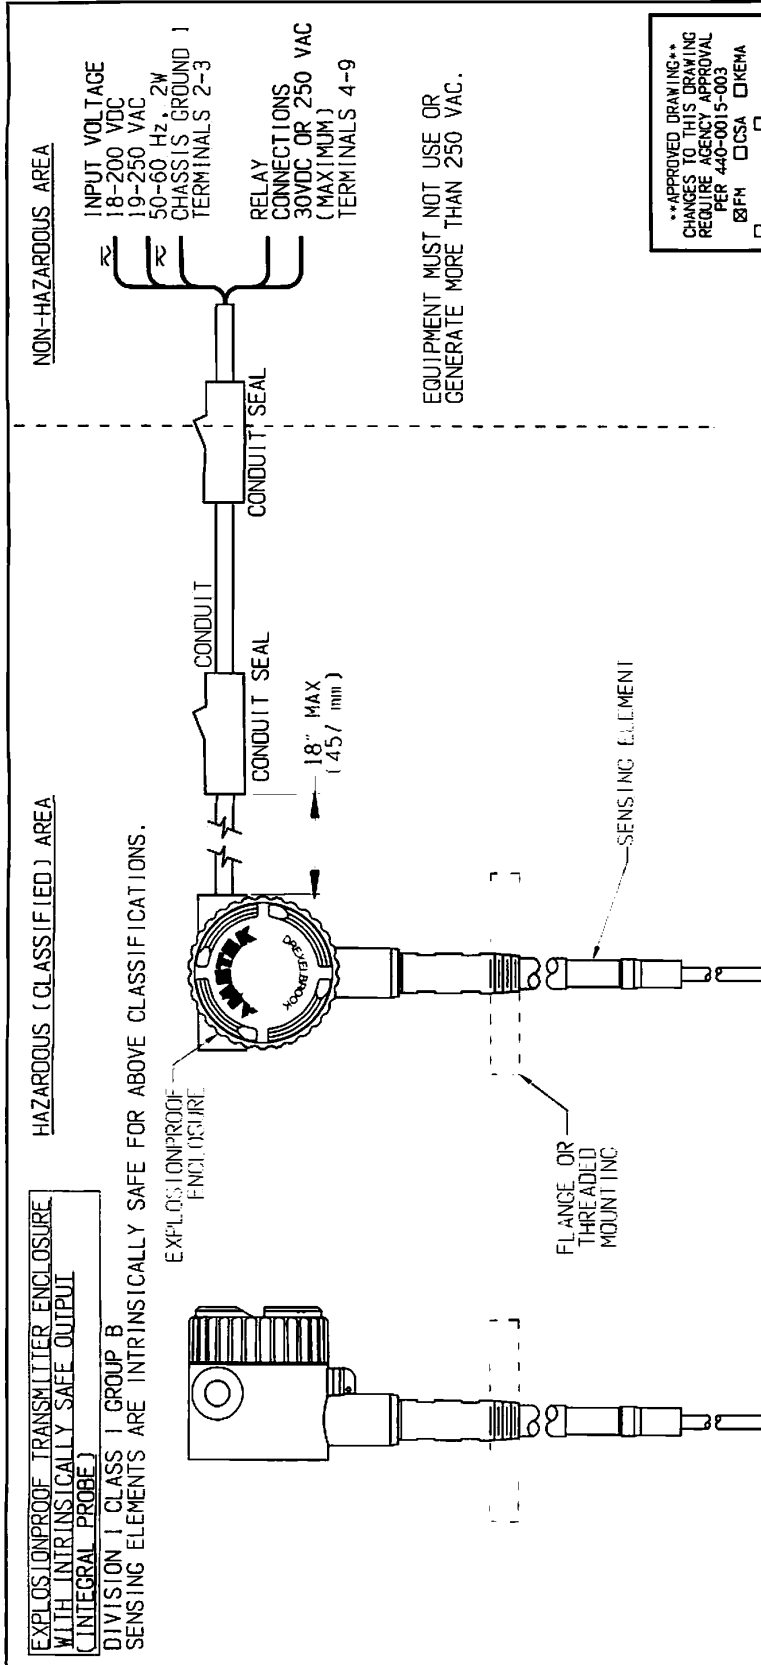

****APPROVED DRAWING****
 CHANGES TO THIS DRAWING
 REQUIRE AGENCY APPROVAL
 PER 440-0015-003
 BFM DCSA OKEMA
 420-0004-201

**EXPLOSION-PROOF TRANSMITTER ENCLOSURE
 WITH INTRINSICALLY SAFE OUTPUT
 (INTEGRAL PROBE)**

DIVISION 1 CLASS I GROUP B
 SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS.

MODEL NUMBERING SYSTEM FOR FM APPROVED INTEGRAL SYSTEMS - SEE SHEETS 8 AND 9

NOTES:

1. THE INSTALLATION MUST BE IN ACCORDANCE WITH NATIONAL ELECTRICAL CODE® ANSI/NFPA 70.
2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT". THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
4. USE COPPER WIRING ONLY.
5. ASSOCIATED APPARATUS MUST NOT GENERATE MORE THAN 250 VOLTS.
6. NO REVISIONS TO THIS DRAWING WITHOUT FM APPROVAL.
7. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.

CERTIFIED	by	COPYRIGHT 2005 AMETEK DREXELBROOK						
	PO #		1-06-216	THP	1-29-07	SCALE NONE		
	ENG		2-04-216	THP	2-26-04	UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)		
ISS. EDO/DSR NO. APP'D	DATE	DR.	JUS 2-13-06	DR.	JUS 2-13-06	DATE	CK.	GDW
DE #								

215-674-1234
 FAX 215-674-2731
 205 KEITH VALLEY RD
 HERSHEY, PA 17044-0906

AMETEK®
DREXELBROOK


FM CONTROL DRAWING FOR
 "ThePoint" SERIES
 CLASS I, DIVISION 1,
 GROUP B (INTEGRAL)

420-0004-181-CD

SHEET 1 OF 3

5.1 FM Control Drawings (Continued)

NO. 420-0004-181-CD SHT 2 OF 11

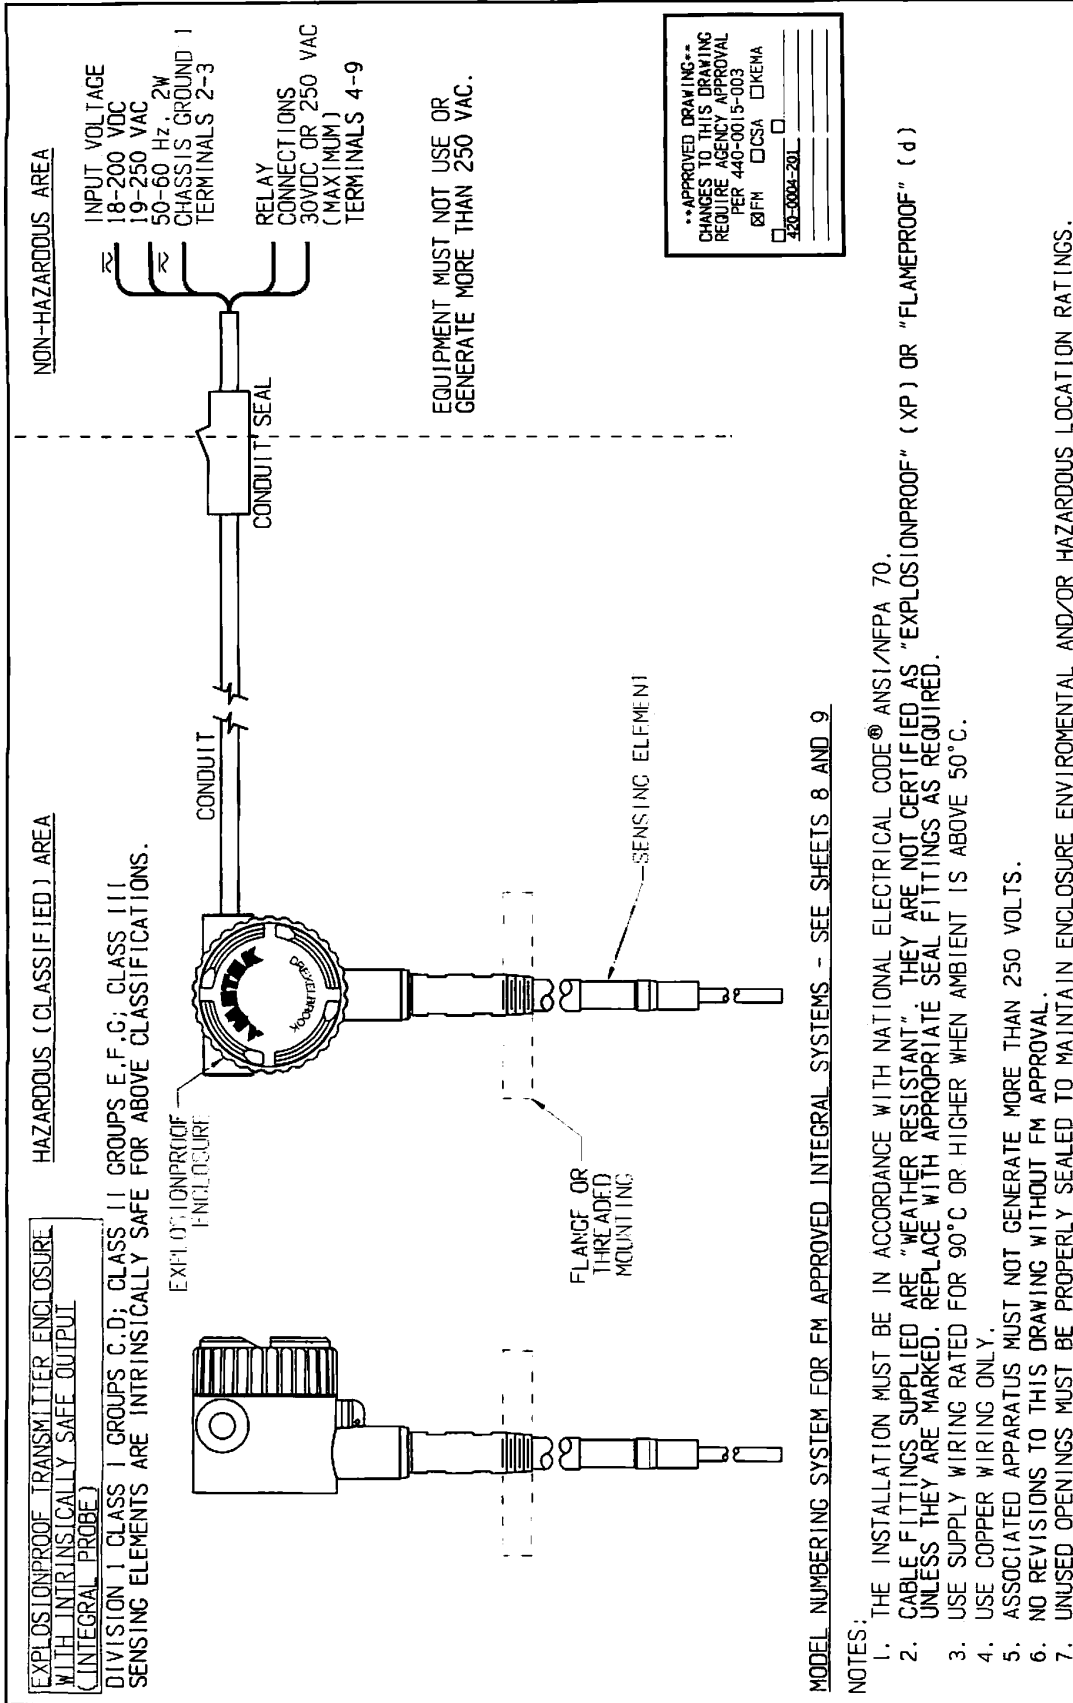

****APPROVED DRAWING****
 CHANGES TO THIS DRAWING
 REQUIRE AGENCY APPROVAL
 PER 440-001.5-003
 BFM CSA KEMA
 420-0004-201

MODEL NUMBERING SYSTEM FOR FM APPROVED INTEGRAL SYSTEMS - SEE SHEETS 8 AND 9

- NOTES:
1. THE INSTALLATION MUST BE IN ACCORDANCE WITH NATIONAL ELECTRICAL CODE® ANSI/NFPA 70.
 2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT" THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
 3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
 4. USE COPPER WIRING ONLY.
 5. ASSOCIATED APPARATUS MUST NOT GENERATE MORE THAN 250 VOLTS.
 6. NO REVISIONS TO THIS DRAWING WITHOUT FM APPROVAL.
 7. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.


CERTIFIED		by		COPYRIGHT 2006		METEK DREXELBROOK	
PO #		3	1-06-216	THP	1-29-07	SCALE	NONE
ENG		2	2-04-216	THP	2-26-04	FACE DIMENSIONS IN INCHES (MM)	
USER		1	7-02-201	SGA	9-6-02	ALL DIMENSIONS IN INCHES (MM)	
ISS	EDD/DSR NO	APP'D	DATE	DR.	JJS 2-13-06		
CE #		CK.	CDW				
FM CONTROL DRAWING FOR "ThePoint" SERIES CLASS I, II, III DIVISION I, GROUPS C-G (INTEGRAL)							
420-0004-181-CD SHT. 2 OF 11							

METEK®
DREXELBROOK

205 KEITH VALLEY RD
 HOBBSHAM, PA 19044-9286
 215-674-1234
 FAX 215-674-2731

5.1 FM Control Drawings (Continued)

NO. 420-0004-181-CD SHT 3 OF 11

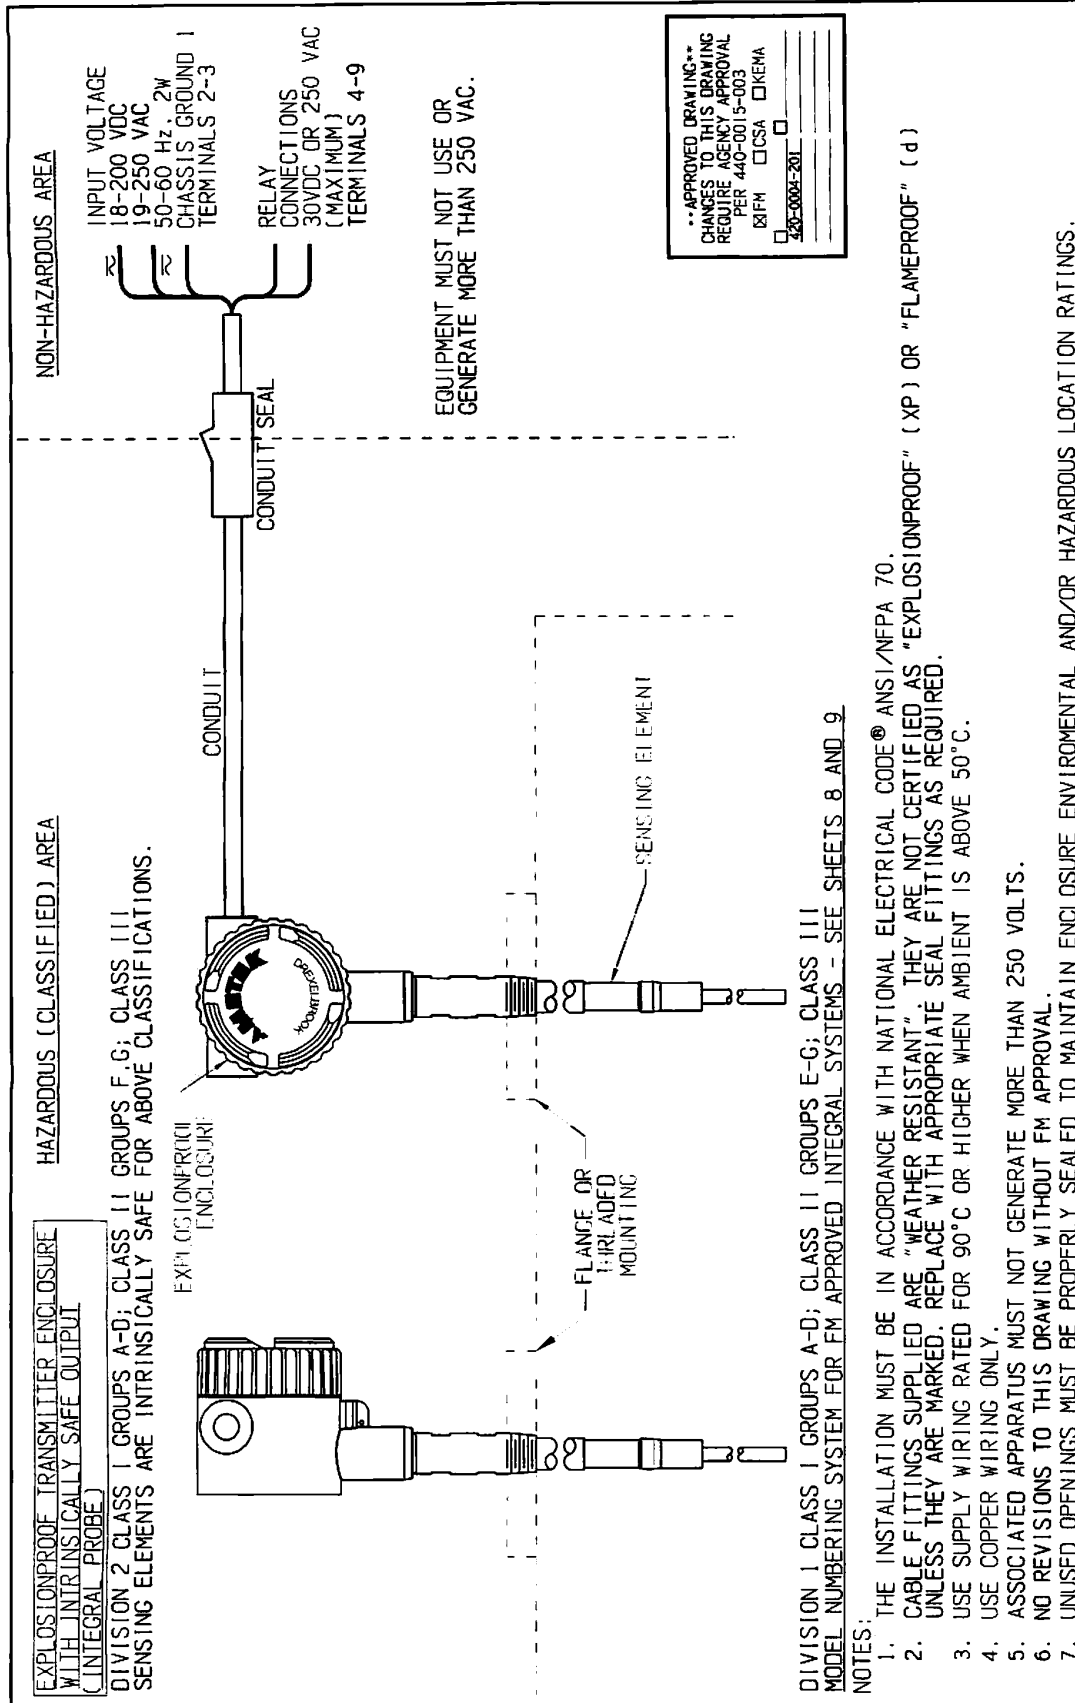

APPROVED DRAWING--
CHANGES TO THIS DRAWING
REQUIRE AGENCY APPROVAL
PER 440-0015-003
 DIFM TCSA IKEMA
 420-0004-201


- DIVISION 1 CLASS I GROUPS A-D; CLASS II GROUPS E-G; CLASS III MODEL NUMBERING SYSTEM FOR FM APPROVED INTEGRAL SYSTEMS - SEE SHEETS 8 AND 9
- NOTES:
1. THE INSTALLATION MUST BE IN ACCORDANCE WITH NATIONAL ELECTRICAL CODE® ANSI/NFPA 70.
 2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT" THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
 3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
 4. USE COPPER WIRING ONLY.
 5. ASSOCIATED APPARATUS MUST NOT GENERATE MORE THAN 250 VOLTS.
 6. NO REVISIONS TO THIS DRAWING WITHOUT FM APPROVAL.
 7. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.

CERTIFIED		by		COPYRIGHT 2006		AMETEK DREXELBROOK	
PO #		3	1-06-216	THP	1-29-07	SCALE	NONE
ENG		2	2-04-216	THP	2-26-04	UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)	
USER		1	7-02-201	SGA	9-6-02	DR.	JLS 2-13-06
ISS.	EDD/DSR NO.	APP'D	DATE	CK.	CDW	205 KEITH VALLEY RD HORSHAM, PA 19044-9886	
FM CONTROL DRAWING FOR "ThePoint" SERIES DIVISION 2. (INTEGRAL)						420-0004-181-CD	
						SHT. 3 OF 11	


AMETEK®
DREXELBROOK

5.1 FM Control Drawings (Continued)

420-0004-181-CD SH 4 OF 11

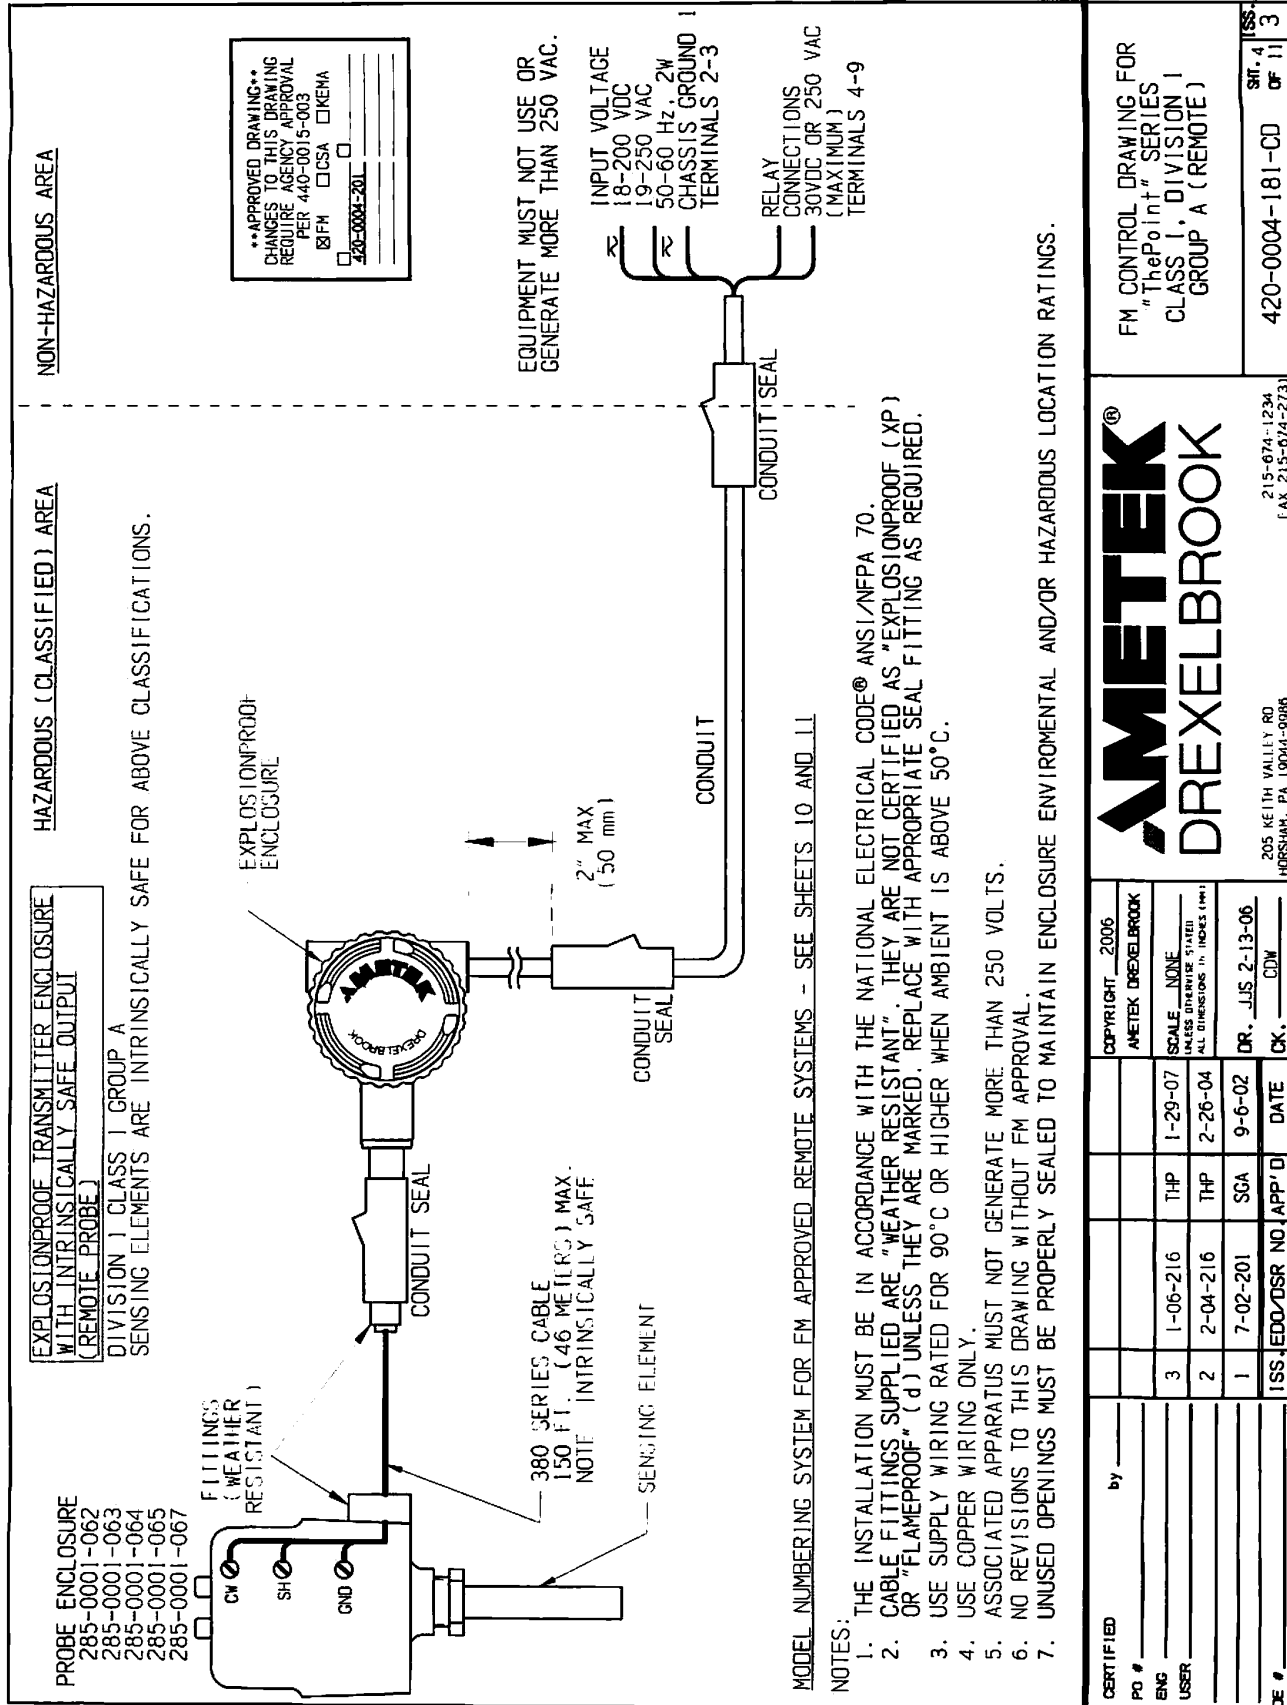

5.1 FM Control Drawings (Continued)

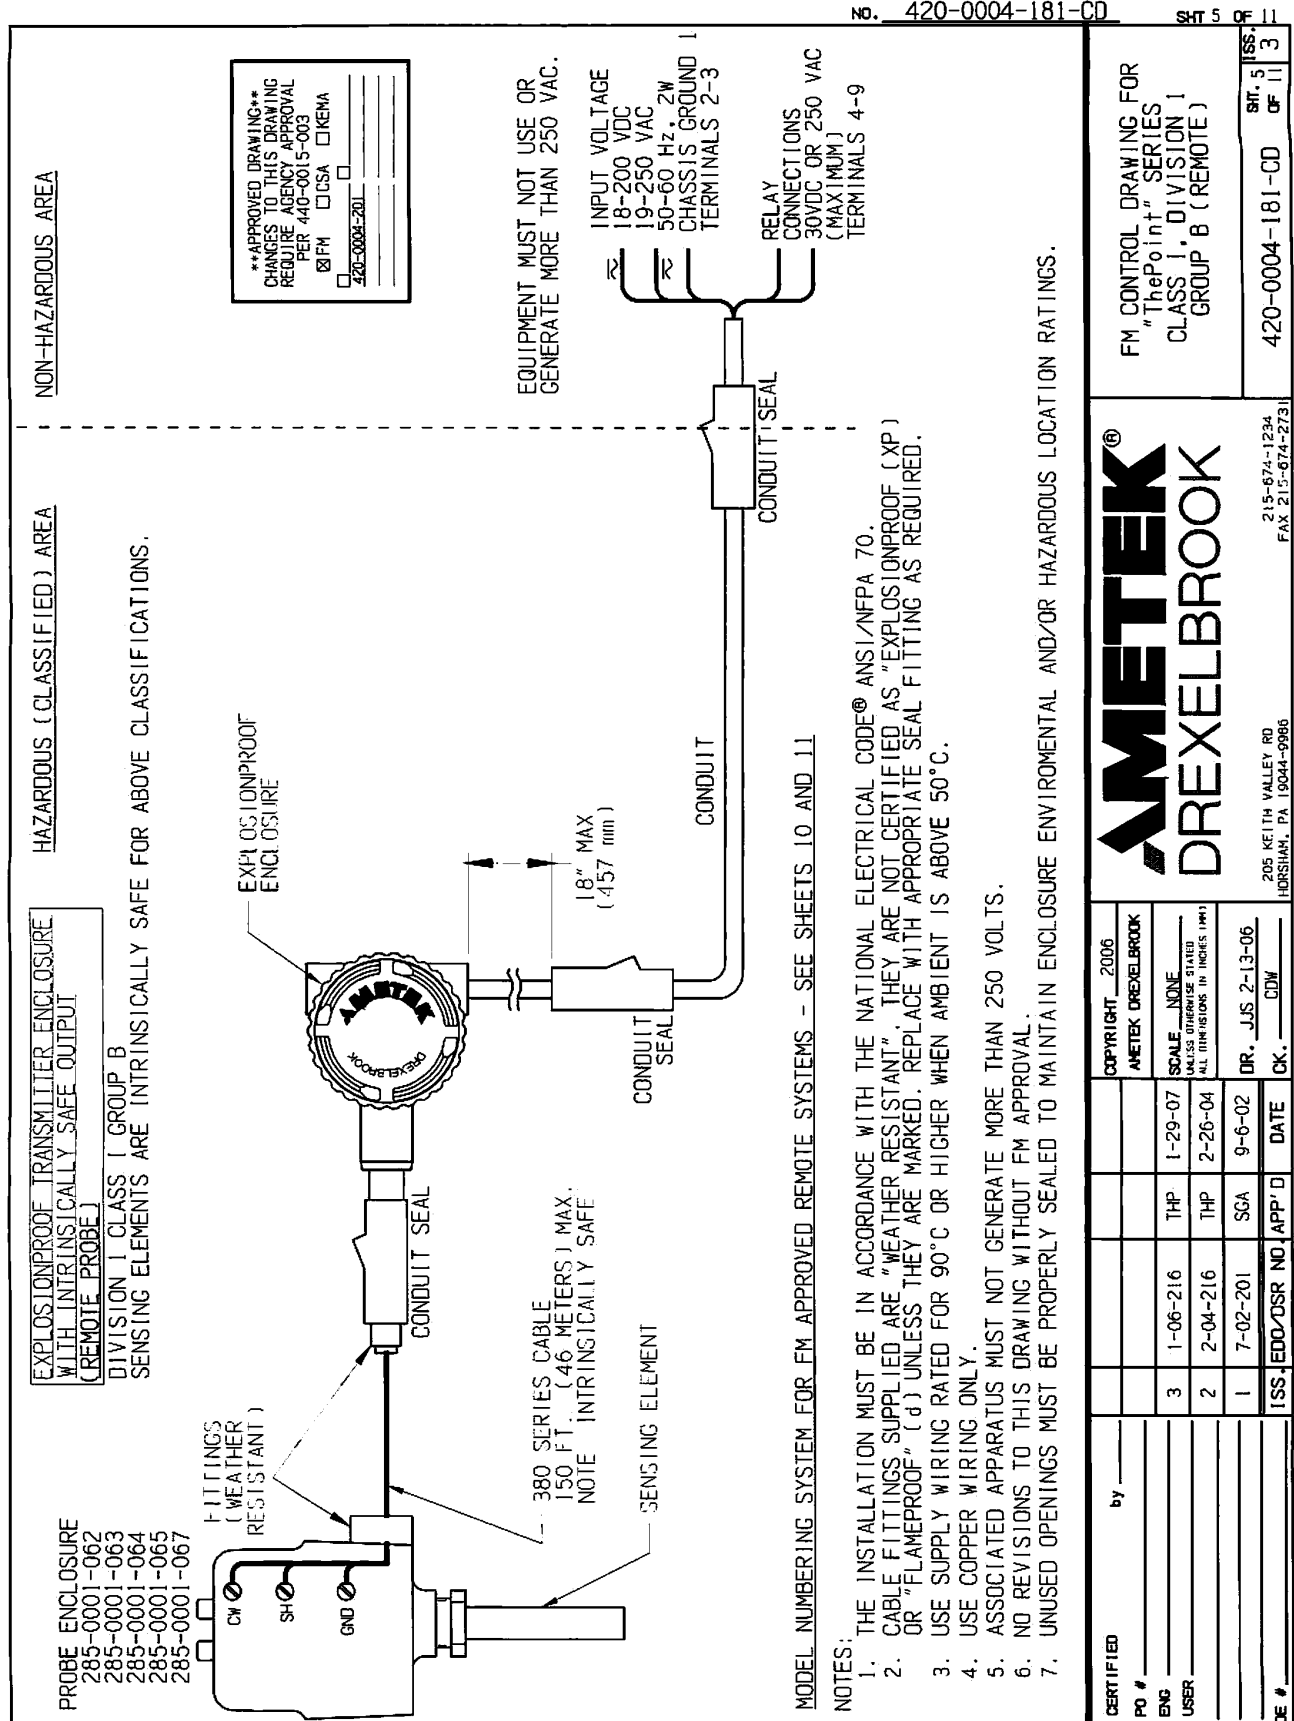

420-0004-181-CD SHEET 5 OF 11

FM CONTROL DRAWING FOR "ThePoint" SERIES CLASS I, DIVISION 1 GROUP B (REMOTE)

420-0004-181-CD SHEET 5 OF 11

AMETEK®
DREXELBROOK


205 KETH VALLEY RD
 HORSHAM, PA 19044-9986

215-674-1234
 FAX 215-674-2731

CERTIFIED	by _____		
PO #			
ENG	3	1-06-216	THP
USER	2	2-04-216	THP
	1	7-02-201	SGA
ISS/EDD/OSR NO.	APP'D	DATE	DR. JUS 2-13-06
DE #	CK.	CON	

COPYRIGHT 2006
 AMETEK DREXELBROOK
 SCALE NONE
 UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)

5.1 FM Control Drawings (Continued)

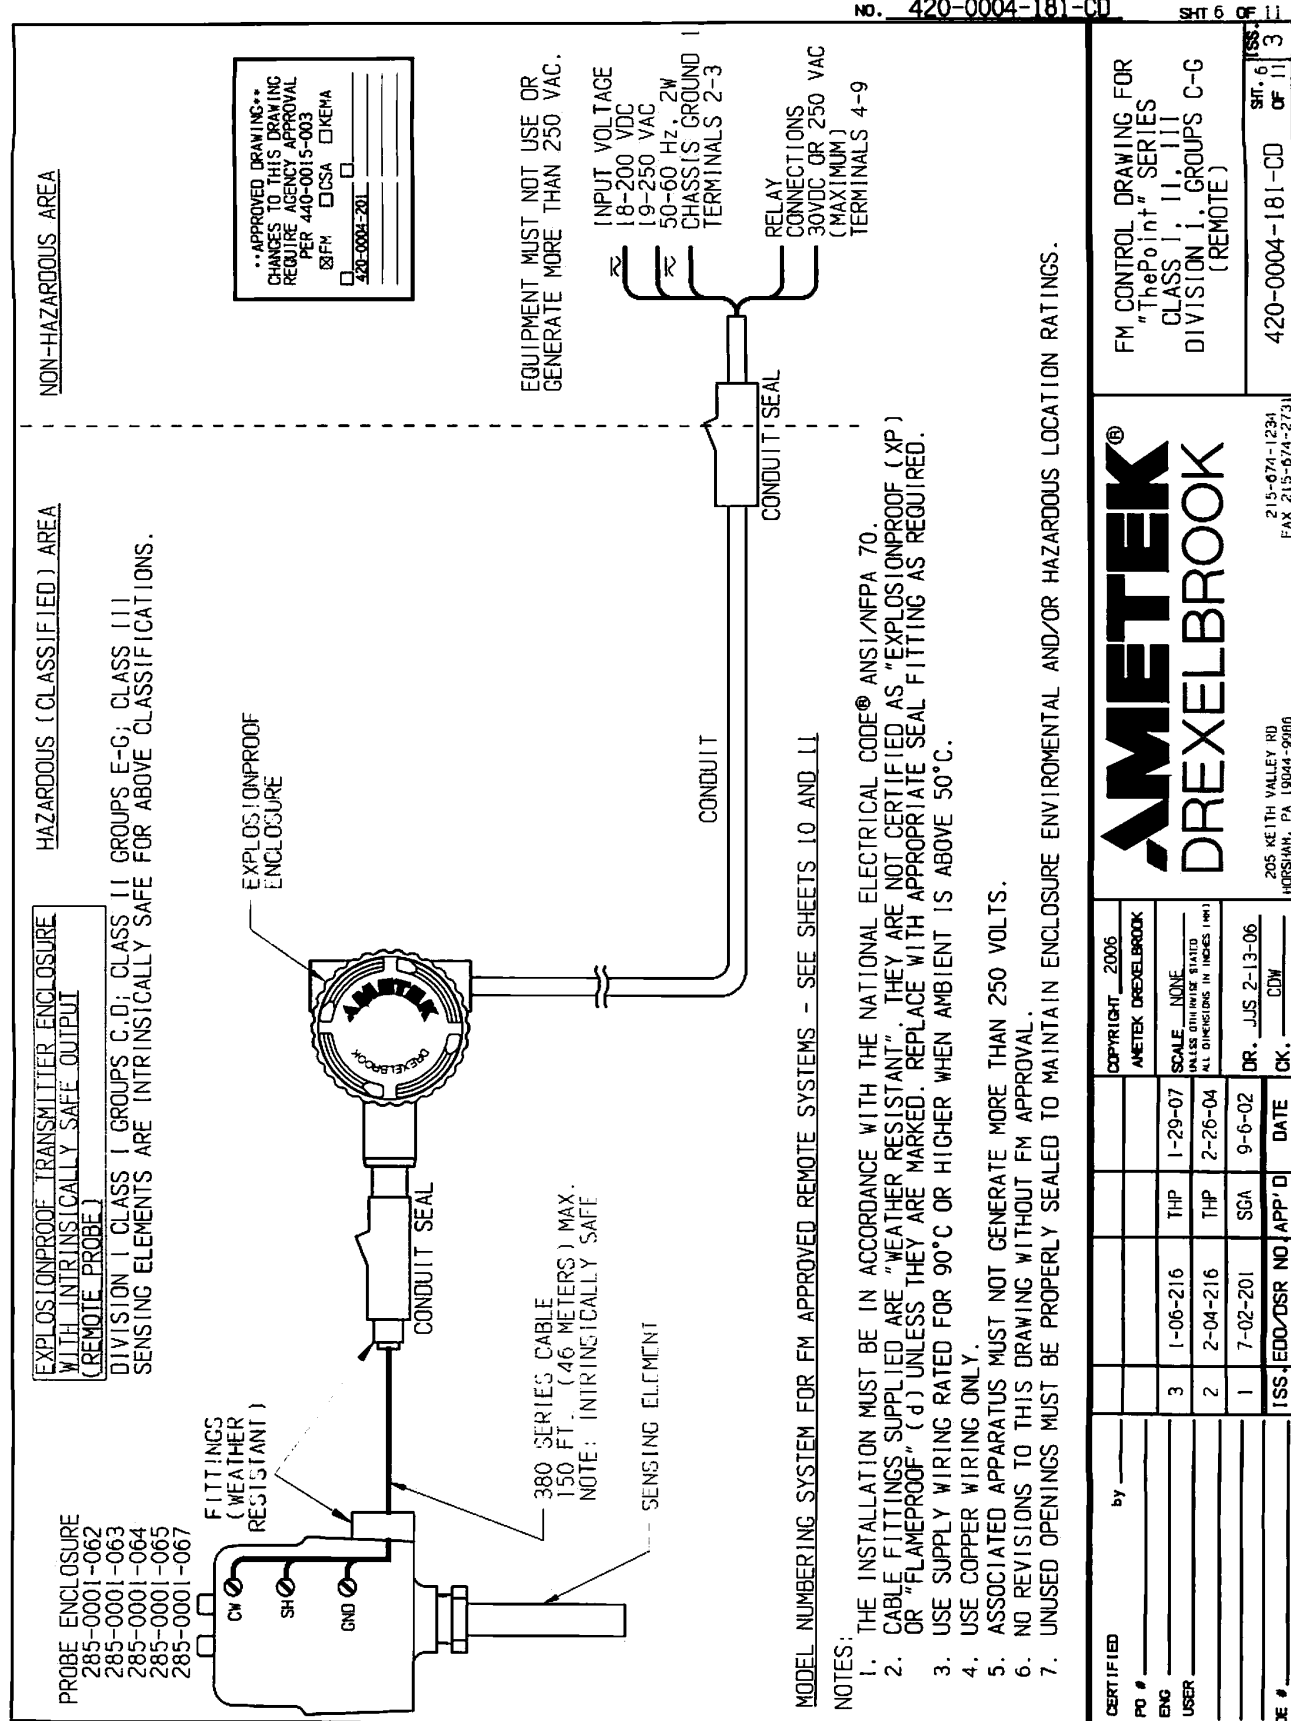

EXPLOSIONPROOF TRANSMITTER ENCLOSURE WITH INTRINSICALLY SAFE OUTPUT (REMOTE PROBE)
 DIVISION I CLASS I GROUPS C, D; CLASS II GROUPS E-G; CLASS III SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS.

HAZARDOUS (CLASSIFIED) AREA

NON-HAZARDOUS AREA

APPROVED DRAWING**
 CHANGES TO THIS DRAWING REQUIRE AGENCY APPROVAL PER 440-0015-003
 FPI CSA KEMA
 420-0004-201

EQUIPMENT MUST NOT USE OR GENERATE MORE THAN 250 VAC.

INPUT VOLTAGE
 18-200 VDC
 19-250 VAC
 50-60 Hz, 2W
 CHASSIS GROUND
 TERMINALS 2-3

RELAY CONNECTIONS
 30VDC OR 250 VAC (MAXIMUM)
 TERMINALS 4-9

MODEL NUMBERING SYSTEM FOR FM APPROVED REMOTE SYSTEMS - SEE SHEETS 10 AND 11

- NOTES:
1. THE INSTALLATION MUST BE IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE® ANS/NFPA 70.
 2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT". THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF (XP)" OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTING AS REQUIRED.
 3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
 4. USE COPPER WIRING ONLY.
 5. ASSOCIATED APPARATUS MUST NOT GENERATE MORE THAN 250 VOLTS.
 6. NO REVISIONS TO THIS DRAWING WITHOUT FM APPROVAL.
 7. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.


CERTIFIED	by	COPYRIGHT 2006	AMETEK DREXELBROOK	
PO #		THP	1-29-07	THP
ENG	3	THP	2-04-216	THP
USER	2	SGA	9-6-02	SGA
ISS. EDO/DSR NO.	APP'D	DATE	DR. JLS 2-13-06	CK. DJW
DE #				

FM CONTROL DRAWING FOR "ThePoint" SERIES CLASS I, II, III DIVISION I, GROUPS C-G (REMOTE)		ISS. OF
420-0004-181-CD		3

205 KEITH VALLEY RD. HORSBANE, PA 19004-9900	215-674-1234 FAX 215-674-2131
---	----------------------------------

5.1 FM Control Drawings (Continued)

420-0004-181-CD SHT 7 OF 11

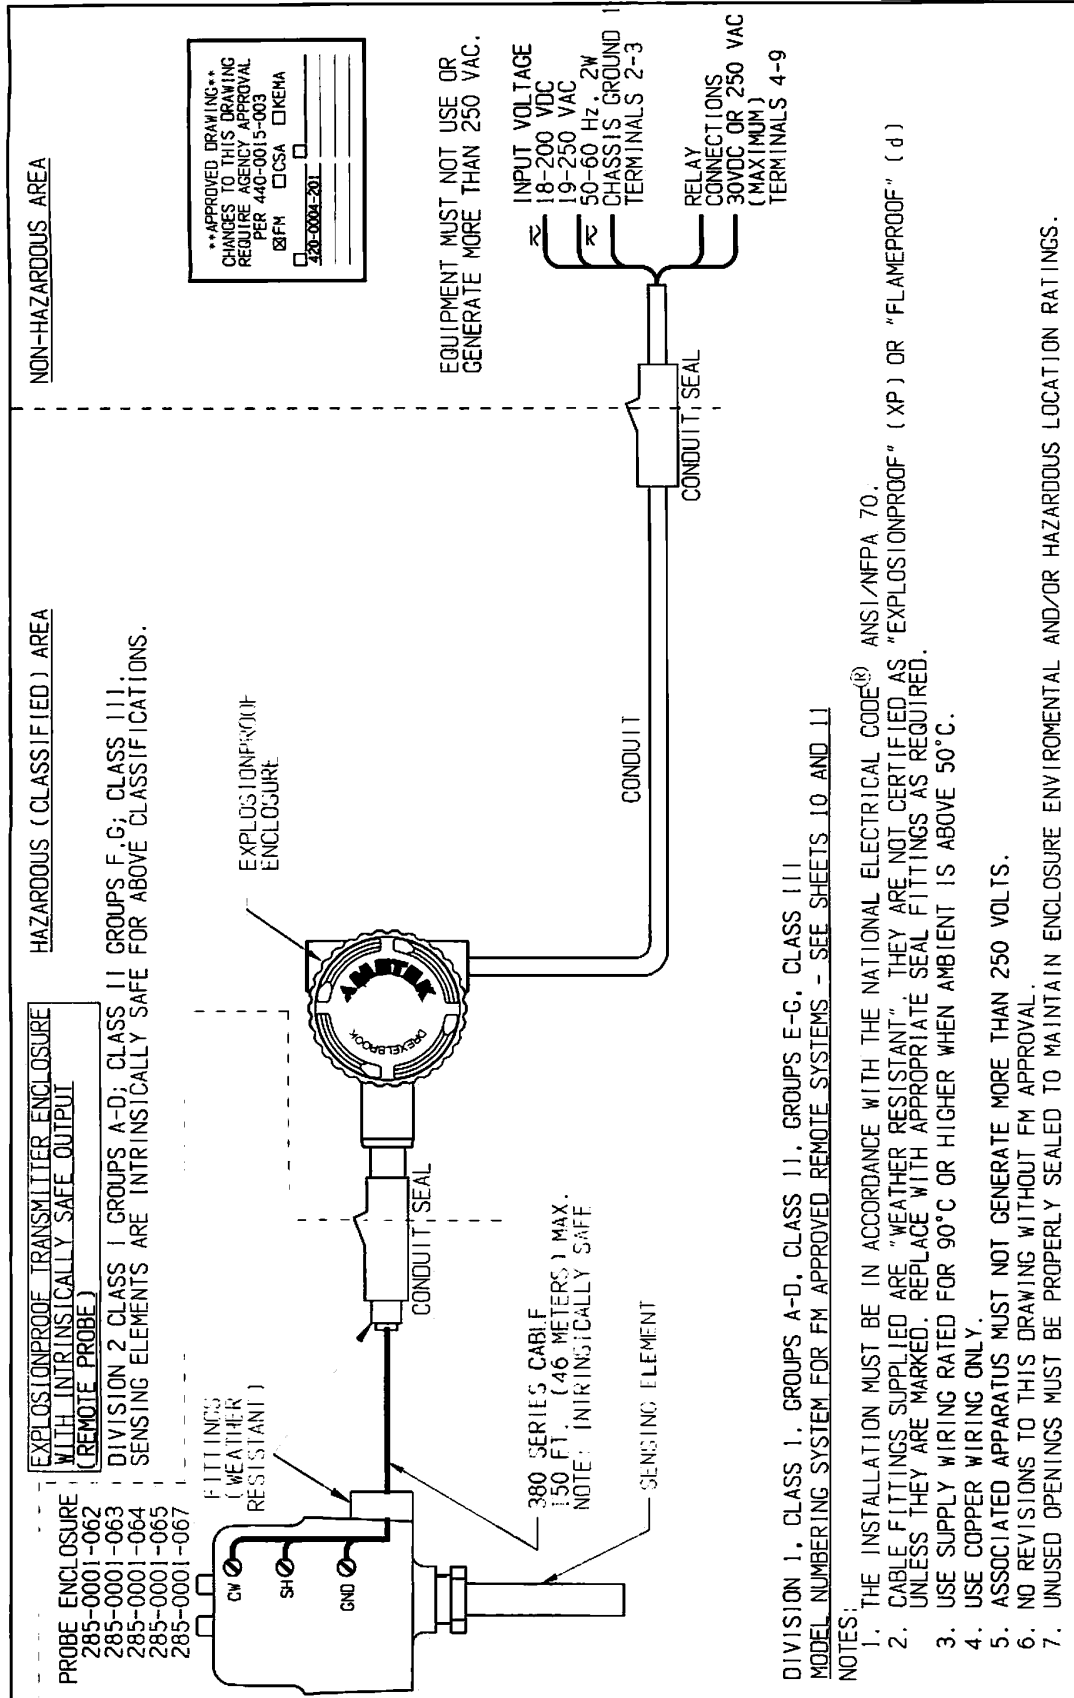

NON-HAZARDOUS AREA

HAZARDOUS (CLASSIFIED) AREA

EXPLOSIONPROOF TRANSMITTER ENCLOSURE WITH INTRINSICALLY SAFE OUTPUT (REMOTE PROBE)
 285-0001-062
 285-0001-063
 285-0001-064
 285-0001-065
 285-0001-067

EXPLORATION TRANSMITTER ENCLOSURE
 DIVISION 2 CLASS 1 GROUPS A-D; CLASS III, GROUPS F, G; CLASS III.
 SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS.

APPROVED DRAWING
 CHANGES TO THIS DRAWING REQUIRE AGENCY APPROVAL PER 440-0015-003
 BFM CSA KEWA
 420-0004-201

EQUIPMENT MUST NOT USE OR GENERATE MORE THAN 250 VAC.

INPUT VOLTAGE
 18-200 VDC
 19-250 VAC
 50-60 Hz, 2W
 CHASSIS GROUND
 TERMINALS 2-3

RELAY CONNECTIONS
 30VDC OR 250 VAC (MAXIMUM)
 TERMINALS 4-9

DIVISION 1, CLASS 1, GROUPS A-D, CLASS II, GROUPS E-G, CLASS III
 MODEL NUMBERING SYSTEM FOR FM APPROVED REMOTE SYSTEMS - SEE SHEETS 10 AND 11

- NOTES:
1. THE INSTALLATION MUST BE IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE® ANSI/NFPA 70.
 2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT" THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
 3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
 4. USE COPPER WIRING ONLY.
 5. ASSOCIATED APPARATUS MUST NOT GENERATE MORE THAN 250 VOLTS.
 6. NO REVISIONS TO THIS DRAWING WITHOUT FM APPROVAL.
 7. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.

CERTIFIED		by _____		COPYRIGHT, 2006	
PO #		AMETEK DREXELBROOK		DATE	
ENG		THP	1-29-07	SCALE NONE	
USER		THP	2-26-04	UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (IN)	
ISS	EDD/OSR NO.	APP'D	DATE	DR.	JUS 2-13-06
DE #		CK.	CON	205 N. 17TH VALLEY RD. HORSHAM, PA 19044-9986	
FM CONTROL DRAWING FOR "ThePoint" SERIES DIVISION 2. (REMOTE)				215-674-1234 FAX 215-674-2731	
420-0004-181-CD				SHT. 7 OF 11	




5.1 FM Control Drawings (Continued)

COLUMNS 9 AND UP DO NOT AFFECT SAFETY											
1	2	3	4	5	6	7	8	9	10	11	12
P	a	L	b	3	0	c	d	*	*	*	*
a								a = MODE N = STD AUTO CAL			
								L = STD 2pF FIXED			
								T = 10pF AUTO CAL			
								V = 10pF FIXED			
								H = HI SENSE .5pF AUTO CAL			
								P = HI SENSE .5pF FIXED			
								G = HI SENSE MANUAL			
								M = STD SENSE MANUAL			
b								b = OUTPUT 1 = 1 DPDT RELAY 2 = 1 GOLD DPDT RELAY			
c								c = 0, 1 OR Z SENSING ELEMENTS			
d								d = 0-4, 6,7,8 OR Z SENSING ELEMENTS			
SENSING ELEMENTS											
Z Z								SPECIAL.....SEE LIST OF APPROVED SENSORS ON SHEET 9			
0 0								700-1202-021			
1								700-1202-022			
2								700-1202-024			
3								700-1202-028			
4								700-1202-042			
7								700-1202-020			
1 1								700-0201-005			
2								700-0201-005...HAST-C			
3								700-0201-036			
4								700-0200-202			
6								700-0002-360			
7								700-0202-036			
8								700-0001-022			

COPYRIGHT 2006
AMETEK DREXELBROOK
SCALE NONE
UNLESS OTHERWISE STATED
ALL DIMENSIONS IN INCHES (MM)
DR. JJS 2-13-06
CK. CDW

CERTIFIED	by _____
PO #	_____
ENG	_____
USER	_____

					FM APPROVED INTEGRAL "ThePoint" MODEL NUMBERING SYSTEM
3	1-06-216	THP	1-29-07		
2	2-04-216	THP	2-26-04		
1	7-02-201	SGA	9-6-02		
ISS.	EDO/DSR NO.	APP'D	DATE	205 KEITH VALLEY RD HORSHAM, PA 19044-9986	2:5-674-1234 FAX 215-674-2733

420-0004-181-CD	SHT. 8	ISS.	OF 11	3
-----------------	--------	------	-------	---

5.1 FM Control Drawings (Continued)

700-0001-001	700-0002-053	700-0018-124
700-0001-002	700-0002-054	700-0018-126
700-0001-004	700-0002-055	700-0018-134
700-0001-005	700-0002-056	700-0018-144
700-0001-007	700-0002-057	700-0018-222
700-0001-012	700-0002-059	700-0018-226
700-0001-013	700-0002-060	700-0018-234
700-0001-014	700-0002-061	700-0018-242
700-0001-016	700-0002-062	700-0018-243
700-0001-022	700-0002-063	700-0018-245
700-0001-023	700-0002-064	700-0018-246
700-0001-024	700-0002-321	700-0018-262
700-0001-026	700-0002-360	700-0021-001
700-0001-029	700-0003-009	700-0021-002
700-0001-034	700-0004-038	700-0021-003
700-0001-035	700-0004-045	700-0021-007
700-0001-038	700-0004-050	700-0021-008
700-0001-039	700-0005-012	700-0201-005
700-0001-042	700-0005-014	700-0201-008
700-0001-044	700-0005-018	700-0201-009
700-0001-045	700-0005-028	700-0201-010
700-0001-051	700-0005-035	700-0201-015
700-0001-052	700-0005-038	700-0201-016
700-0001-053	700-0005-045	700-0201-018
700-0001-054	700-0005-048	700-0201-025
700-0001-061	700-0005-054	700-0201-026
700-0001-062	700-0005-114	700-0201-035
700-0001-063	700-0005-148	700-0201-036
700-0001-064	700-0005-214	700-0201-105
700-0001-324	700-0005-314	700-0201-108
700-0001-344	700-0005-348	700-0201-109
700-0002-012	700-0005-354	700-0201-118
700-0002-018	700-0008-122	700-0201-135
700-0002-021	700-0008-123	700-0202-002
700-0002-022	700-0008-124	700-0202-004
700-0002-023	700-0008-126	700-0202-019
700-0002-024	700-0008-134	700-0202-023
700-0002-025	700-0008-144	700-0202-024
700-0002-027	700-0008-222	700-0202-033
700-0002-028	700-0008-226	700-0202-036
700-0002-029	700-0008-234	700-0202-043
700-0002-033	700-0008-242	700-0202-102
700-0002-035	700-0008-243	700-0204-038
700-0002-036	700-0008-245	700-0204-045
700-0002-037	700-0008-246	700-0204-048
700-0002-039	700-0008-262	700-0221-002
700-0002-041	700-0009-002	700-1202-001
700-0002-042	700-0009-024	700-1202-018
700-0002-043	700-0011-001	700-1202-021
700-0002-044	700-0011-003	700-1202-022
700-0002-047	700-0011-004	700-1202-024
700-0002-051	700-0011-015	700-1202-028
700-0002-052	700-0018-122	700-1202-041
	700-0018-123	700-1202-042

COPYRIGHT 2006
 AMETEK DREXELBROOK
 SCALE NONE
UNLESS OTHERWISE STATED
 ALL DIMENSIONS IN INCHES (MM)
 DR. JJS 2-13-06
 CK. CDW

CERTIFIED by _____
 PO # _____
 ENG _____
 USER _____
 DE # _____

3	1-06-216	THP	1-29-07
2	2-04-216	THP	2-26-04
1	7-02-201	SGA	9-6-02
ISS.	EDD/DSR ND.	APP'D	DATE

AMETEK®
DREXELBROOK

205 KEITH VALLEY RD
 HORSHAM, PA 19044-9986

215-674-1234
 FAX 215-674-2731

FM APPROVED REMOTE
 "ThePoint"
 MODEL NUMBERING SYSTEM

420-0004-181-CD

SHT. 9 OF 11
 ISS. 3

NO. 420-0004-181-CD

5.1 FM Control Drawings (Continued)

COLUMNS 9 AND UP DO NOT AFFECT SAFETY												
1	2	3	4	5	6	7	8	9	10	11	12	
P	a	L	b	3	c	d	d	*	*	*	*	
a												a = MODE N = STD AUTO CAL L = STD 2pF FIXED T = 10pF AUTO CAL V = 10pF FIXED H = HI SENSE .5pF AUTO CAL P = HI SENSE .5pF FIXED G = HI SENSE MANUAL M = STD SENSE MANUAL
	b											b = OUTPUT 1 = 1 DPDT RELAY 2 = 1 GOLD DPDT RELAY
				c								c = CABLE LENGTHS 1-9, A-K <u>3</u> SENSING ELEMENTS
					d							d = SENSING ELEMENTS
						d						d = SENSING ELEMENTS
				2	2							SEE SHEET 11 FOR ADDITIONAL APPROVED SENSING ELEMENTS
				0	0							700-1202-001
					1							700-1202-012
					2							700-1202-014
					3							700-1202-018
					4							700-1202-041
					6							700-1202-031
					7							700-1202-010
					9							700-1202-033
				1	0							700-0001-018
					1							700-0201-005
					2							700-0201-005...HAST-C
					3							700-0201-036
					4							700-0202-002
					5							700-0202-043
					6							700-0002-360
					7							700-0202-036
					8							700-0001-022
					9							700-0002-023
				2	0							700-0209-022
				3	1							700-0029-001
					2							700-0029-002
					3							700-0029-003
					4							700-0029-004
					5							700-0029-005
					5	0						700-0207-001
					1							700-0207-002
					2							700-0207-003
					3							700-0207-004
					5							700-0207-066
					6	0						700-0204-038
					6	1						700-0204-002
					6	2						700-0204-048

COPYRIGHT 2006
AMETEK DREXELBROOK

SCALE NONE
UNLESS OTHERWISE STATED
ALL DIMENSIONS IN INCHES (1/16)

DR. JJS 2-13-06
CK. CDW

CERTIFIED _____ by _____

PO # _____

ENG _____

USER _____

DE # _____

AMETEK®
DREXELBROOK

205 KEITH VALLEY RD
HORSHAM, PA 19044-9986

215-674-1234
FAX 215-674-2731

FM APPROVED
ADDITIONAL REMOTE
SENSING ELEMENTS

420-0004-181-CD

SHT. 10 OF 11
ISS. 3

NO. 420-0004-181-CD
SHT. 10 OF 11

5.1 FM Control Drawings (Continued)

MODEL NUMBERS OF APPROVED REMOTE SENSING ELEMENTS

701-mnop-qrst LEVEL PROBE

- l = FAMILY NO. 0, 4
- m = FAMILY NO. 0 THROUGH 9, BLANK
- n = FAMILY NO. 0 THROUGH 9, BLANK
- o = 0 THROUGH 9, BLANK
- p = 0 THROUGH 9
- q = FAMILY NO. 0 THROUGH 9, BLANK
- r = FAMILY NO. 0 THROUGH 9, BLANK
- s = FAMILY NO. 0 THROUGH 9
- t = 14 CHARACTER EXPANDED NUMBERING SYSTEM, DOES NOT AFFECT SAFETY

COPYRIGHT 2006
 AMETEK DREXELBROOK
 SCALE NONE
UNLESS OTHERWISE STATED
 ALL DIMENSIONS IN INCHES (MM)
 DR. JJS 2-13-06
 CK. CDW

CERTIFIED _____ by _____
 PO # _____
 ENG _____
 USER _____

 DE # _____

No. 420-0004-181-00

3	1-06-216	THP	1-29-07
2	2-04-216	THP	2-26-04
1	7-02-201	SGA	9-6-02
ISS.	EDD/DSR NO.	APP'D	DATE



205 KEITH VALLEY RD
 HORSHAM, PA 19044-9986

215-674-1234
 FAX 215-674-2733

FM APPROVED
 ADDITIONAL REMOTE
 SENSING ELEMENTS

420-0004-181-CD

SHT. 11 OF 11
 ISS. 3

SHT. 11 OF 11

5.2 CSA Control Drawings

EXPLOSIONPROOF TRANSMITTER ENCLOSURE WITH INTRINSICALLY SAFE OUTPUT (INTEGRAL PROBE)

CL 1, DIV 1, GR B.C.D; CL 11, GR E.F.G; CL 111, T5
MAXIMUM AMBIENT TEMPERATURE 70°C

HAZARDOUS (CLASSIFIED) AREA
CL 1, DIV 1, GR B.C.D; CL 11, GR E.F.G; CL 111, T5
MAXIMUM AMBIENT TEMPERATURE 70°C

NON-HAZARDOUS AREA
INPUT VOLTAGE
18-200 VDC
19-250 VAC
50-60 Hz, 2W
CHASSIS GROUND 1
TERMINALS 2-3

RELAY CONNECTIONS
30VDC OR 250 VAC
(MAXIMUM)
TERMINALS 4-9

EQUIPMENT MUST NOT USE OR GENERATE MORE THAN 250 VAC.

****APPROVED DRAWING****
CHANGES TO THIS DRAWING
REQUIRE AGENCY APPROVAL
PER 440-0015-003
CJFH @CSA CKEMA
420-0004-210

EXPLOSIONPROOF TRANSMITTER ENCLOSURE WITH INTRINSICALLY SAFE OUTPUT (INTEGRAL PROBE)

CL 1, DIV 1, GR B.C.D; CL 11, GR E.F.G; CL 111, T5
MAXIMUM AMBIENT TEMPERATURE 70°C

HAZARDOUS (CLASSIFIED) AREA
CL 1, DIV 1, GR B.C.D; CL 11, GR E.F.G; CL 111, T5
MAXIMUM AMBIENT TEMPERATURE 70°C

NON-HAZARDOUS AREA
INPUT VOLTAGE
18-200 VDC
19-250 VAC
50-60 Hz, 2W
CHASSIS GROUND 1
TERMINALS 2-3

RELAY CONNECTIONS
30VDC OR 250 VAC
(MAXIMUM)
TERMINALS 4-9

EQUIPMENT MUST NOT USE OR GENERATE MORE THAN 250 VAC.

EXPLOSIONPROOF AND FLAMEPROOF ENCLOSURE TYPE 4, 4X, 1P66

FLANGE OR THREADED MOUNTING

SENSING ELEMENT

CONDUIT SEAL OR OTHER SUITABLE CABLING SYSTEM

CONDUIT SEAL

CONDUIT

CONDUIT

2' MAX (50 min)

420-0004-185-CD

ISS: 7

CL 1, DIV 1, GR B.C.D; CL 11, GR E.F.G; CL 111, T5.
(SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS).

MODEL NUMBERING SYSTEM FOR CSA CERTIFIED SYSTEMS - SEE SHEET 5

NOTES:

1. THE INSTALLATION MUST BE IN ACCORDANCE WITH THE CANADIAN ELECTRICAL CODE, PART 1, APPENDIX F
2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT". THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
4. USE COPPER WIRING ONLY.
5. ASSOCIATED APPARATUS MUST NOT GENERATE MORE THAN 250 VOLTS.
6. NO REVISIONS TO THIS DRAWING WITHOUT CSA APPROVAL.
7. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.
8. WARNING: SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY.
AVERTISSEMENT: LA SUBSTITUTION DE COMPOSANT PEUT COMPROMETTRE LA SECURITE INTRINSEQUE.

CERTIFIED	by				
PO #	4	5-07-112	DPB	5/14/07	AMETEK DREXELBROOK
ENG	3	1-06-216	THP	1-3-07	SCALE NONE
USER	2	3-04-216	THP	4-7-04	SCALE NONE
	1	7-02-201	SCA	5-19-03	SCALE NONE
ISS	EDD/DSR	NO, APP'D	DATE	DR. JLS 5-14-07	DR. JLS 5-14-07
DE #			CK.	CK.	CK.

AMETEK®
DREXELBROOK


205 KETH VALLEY RD
HERSHAM, PA 19044-0986
215-674-1234
FAX 215-674-2733

CSA CONTROL DRAWING FOR
"ThePoint" SERIES
DIVISION 1 (INTEGRAL)

420-0004-185-CD

ISS: 7

5.2 CSA Control Drawings (Continued)

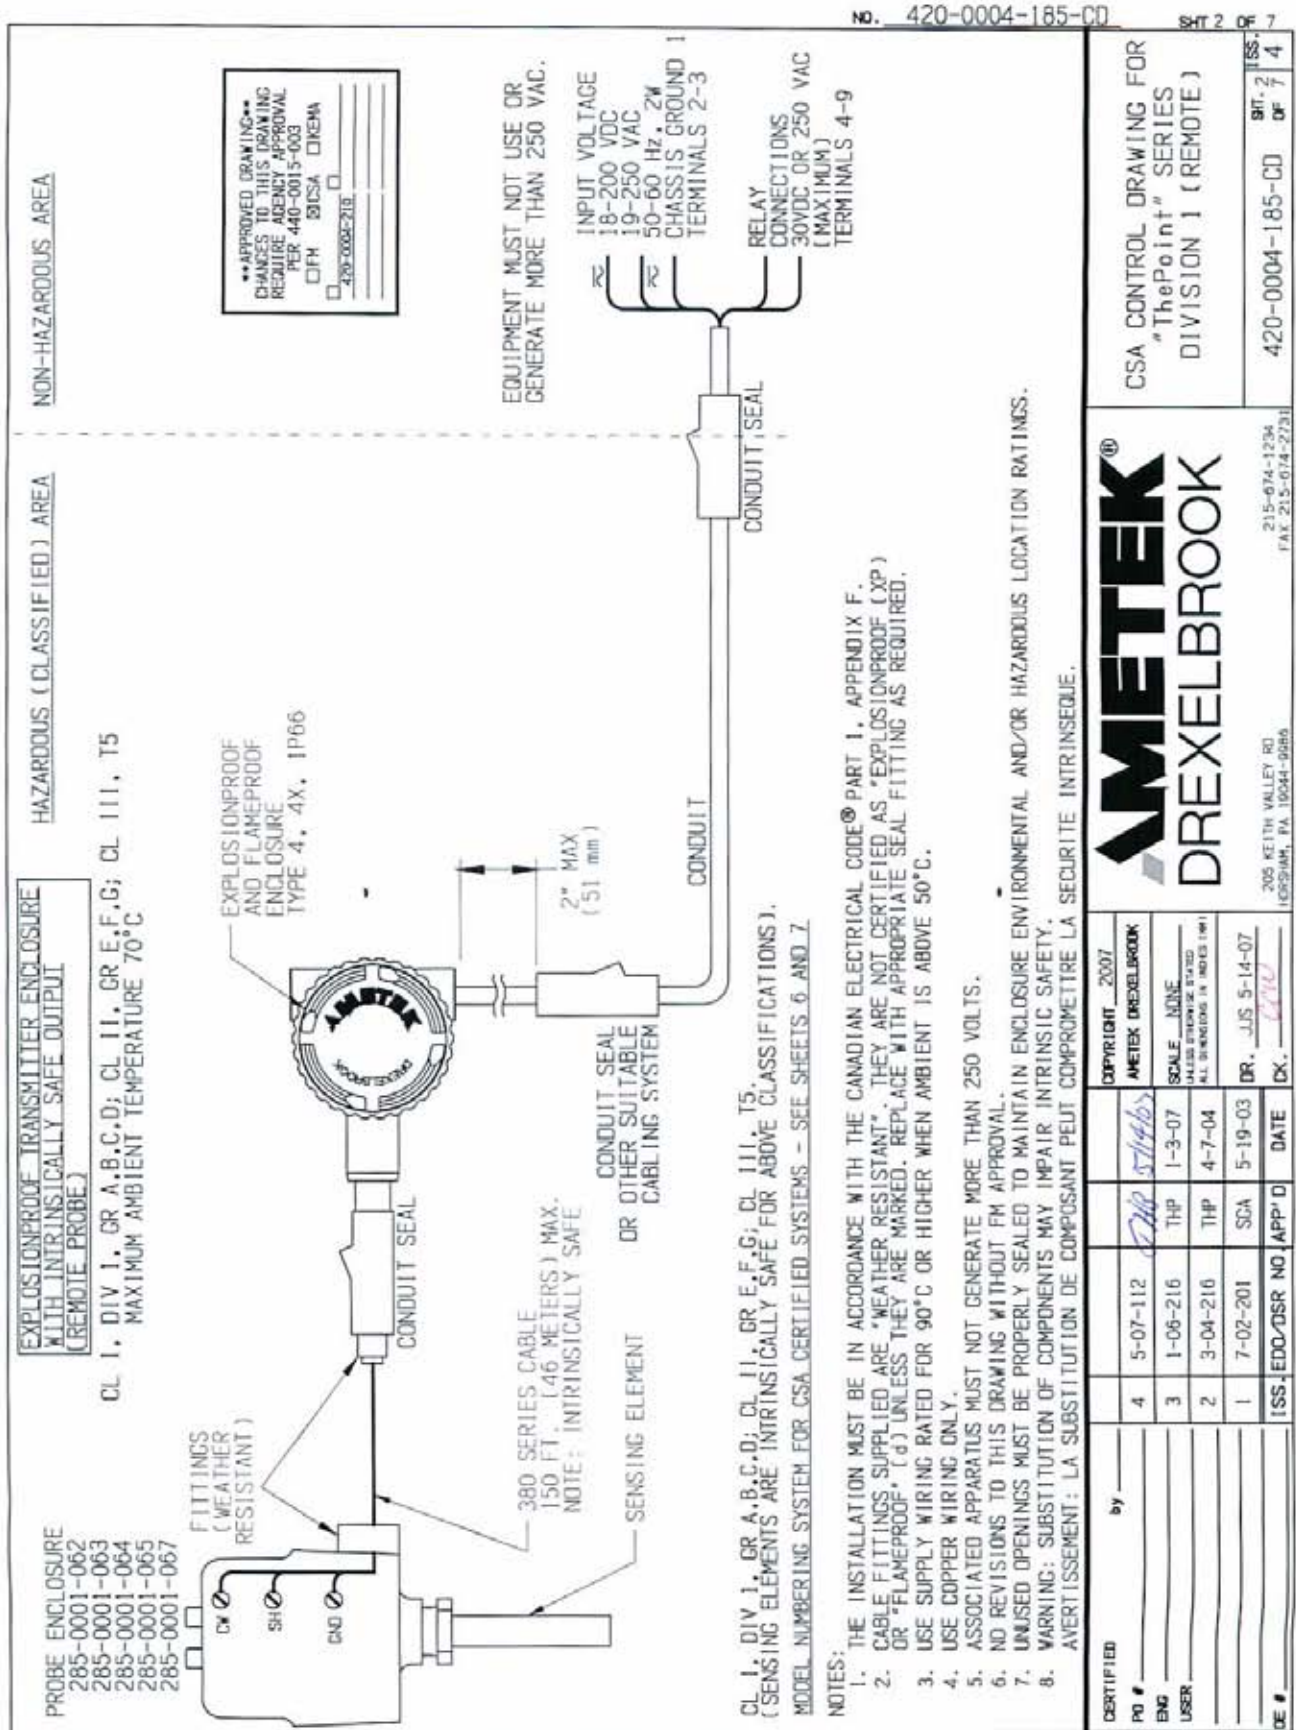

EXPLOSIONPROOF TRANSMITTER ENCLOSURE WITH INTRINSICALLY SAFE OUTPUT (REMOTE PROBE)
 CL I, DIV I, GR A,B,C,D; CL II, GR E,F,G; CL III, T5
 MAXIMUM AMBIENT TEMPERATURE 70°C

HAZARDOUS (CLASSIFIED) AREA

NON-HAZARDOUS AREA

APPROVED DRAWING... CHANGES TO THIS DRAWING REQUIRE AGENCY APPROVAL PER 440-0015-003
 IFC ICSA IEMA
 470-0002718

EQUIPMENT MUST NOT USE OR GENERATE MORE THAN 250 VAC.
 INPUT VOLTAGE
 18-200 VDC
 19-250 VAC
 50-60 Hz 2W
 CHASSIS GROUND 1
 TERMINALS 2-3
 RELAY CONNECTIONS
 30VDC OR 250 VAC (MAXIMUM)
 TERMINALS 4-9

PROBE ENCLOSURE
 285-0001-062
 285-0001-063
 285-0001-064
 285-0001-065
 285-0001-067

FITTINGS (WEATHER RESISTANT)

380 SERIES CABLE (150 FT. (1.46 METERS) MAX. NOTE: INTRINSICALLY SAFE)

SENSING ELEMENT

EXPLOSIONPROOF AND FLAMEPROOF ENCLOSURE TYPE 4, 4X, 1P66

2" MAX (51 mm)

CONDUIT SEAL OR OTHER SUITABLE CABLING SYSTEM

CONDUIT

CL I, DIV I, GR A,B,C,D; CL II, GR E,F,G; CL III, T5.
 (SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS).
 MODEL NUMBERING SYSTEM FOR CSA CERTIFIED SYSTEMS - SEE SHEETS 6 AND 7.

- NOTES:
1. THE INSTALLATION MUST BE IN ACCORDANCE WITH THE CANADIAN ELECTRICAL CODE PART 1, APPENDIX F.
 2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT". THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTING AS REQUIRED.
 3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
 4. USE COPPER WIRING ONLY.
 5. ASSOCIATED APPARATUS MUST NOT GENERATE MORE THAN 250 VOLTS.
 6. NO REVISIONS TO THIS DRAWING WITHOUT FM APPROVAL.
 7. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.
 8. WARNING: SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY.
 AVERTISSEMENT: LA SUBSTITUTION DE COMPOSANT PEUT COMPROMETTRE LA SECURITE INTRINSEQUE.


CERTIFIED	by	4	5-07-112	DATE	5/14/07	DR.	JUS 5-14-07
PO #		3	1-06-216	THP	4-7-04	SCALE	NONE
ENG		2	3-04-216	THP	4-7-04	ALL DIMENSIONS IN INCHES (M)	
USER		1	7-02-201	SCA	5-19-03	ISS	OF 7
DE #						420-0004-185-CD	917.2

CSA CONTROL DRAWING FOR "ThePoint" SERIES DIVISION 1 (REMOTE)

205 KEITH VALLEY RD
 GOSHAM, PA 19044-9266
 215-674-1234
 FAX 215-674-2733

420-0004-185-CD

5.2 CSA Control Drawings (Continued)

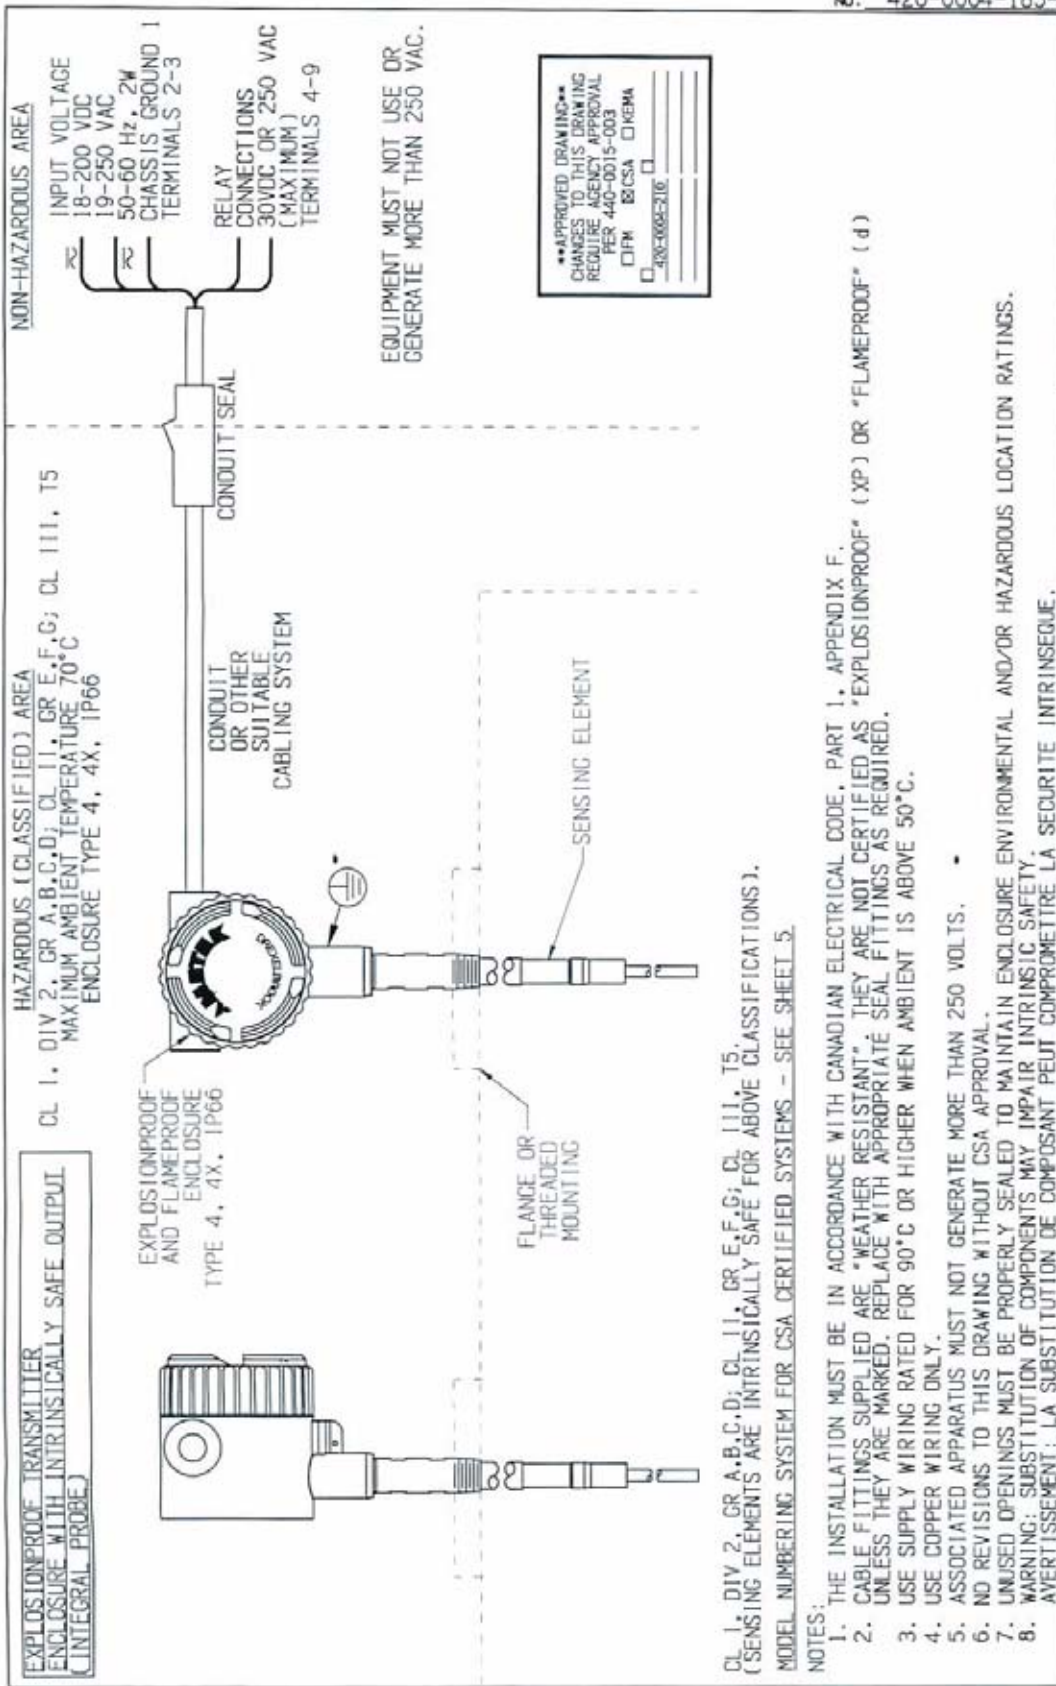

No. 420-0004-185-CD

- CL 1, DIV 2, GR A, B, C, D; CL 11, GR E, F, G; CL 111, T5.
 (SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS).
 MODEL NUMBERING SYSTEM FOR CSA CERTIFIED SYSTEMS - SEE SHEET 5.
- NOTES:
1. THE INSTALLATION MUST BE IN ACCORDANCE WITH CANADIAN ELECTRICAL CODE, PART 1, APPENDIX F.
 2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT". THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
 3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
 4. USE COPPER WIRING ONLY.
 5. ASSOCIATED APPARATUS MUST NOT GENERATE MORE THAN 250 VOLTS.
 6. NO REVISIONS TO THIS DRAWING WITHOUT CSA APPROVAL.
 7. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.
 8. WARNING: SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY.
 AVERTISSEMENT: LA SUBSTITUTION DE COMPOSANT PEUT COMPROMETTRE LA SECURITE INTRINSEQUE.

CERTIFIED		COPYRIGHT 2007	
PO #	4 5-07-112	DATE	5/14/07
ENG	3 1-06-216	SCALE	NONE
USER	2 3-04-216	BY	JLS
	1 7-02-201	DATE	5-19-03
ISS	EDD/DSR NO.	APP'D	DATE
DE #			

CSA CONTROL DRAWING FOR "ThePoint" SERIES DIVISION 2 (INTEGRAL)


METATEK®
DREXELBROOK

205 KEITH VALLEY DR.
 HERSHEY, PA 17044-0986
 717-674-1234
 FAX 717-674-2731

420-0004-185-CD

REV. 3 OF 4

5.2 CSA Control Drawings (Continued)

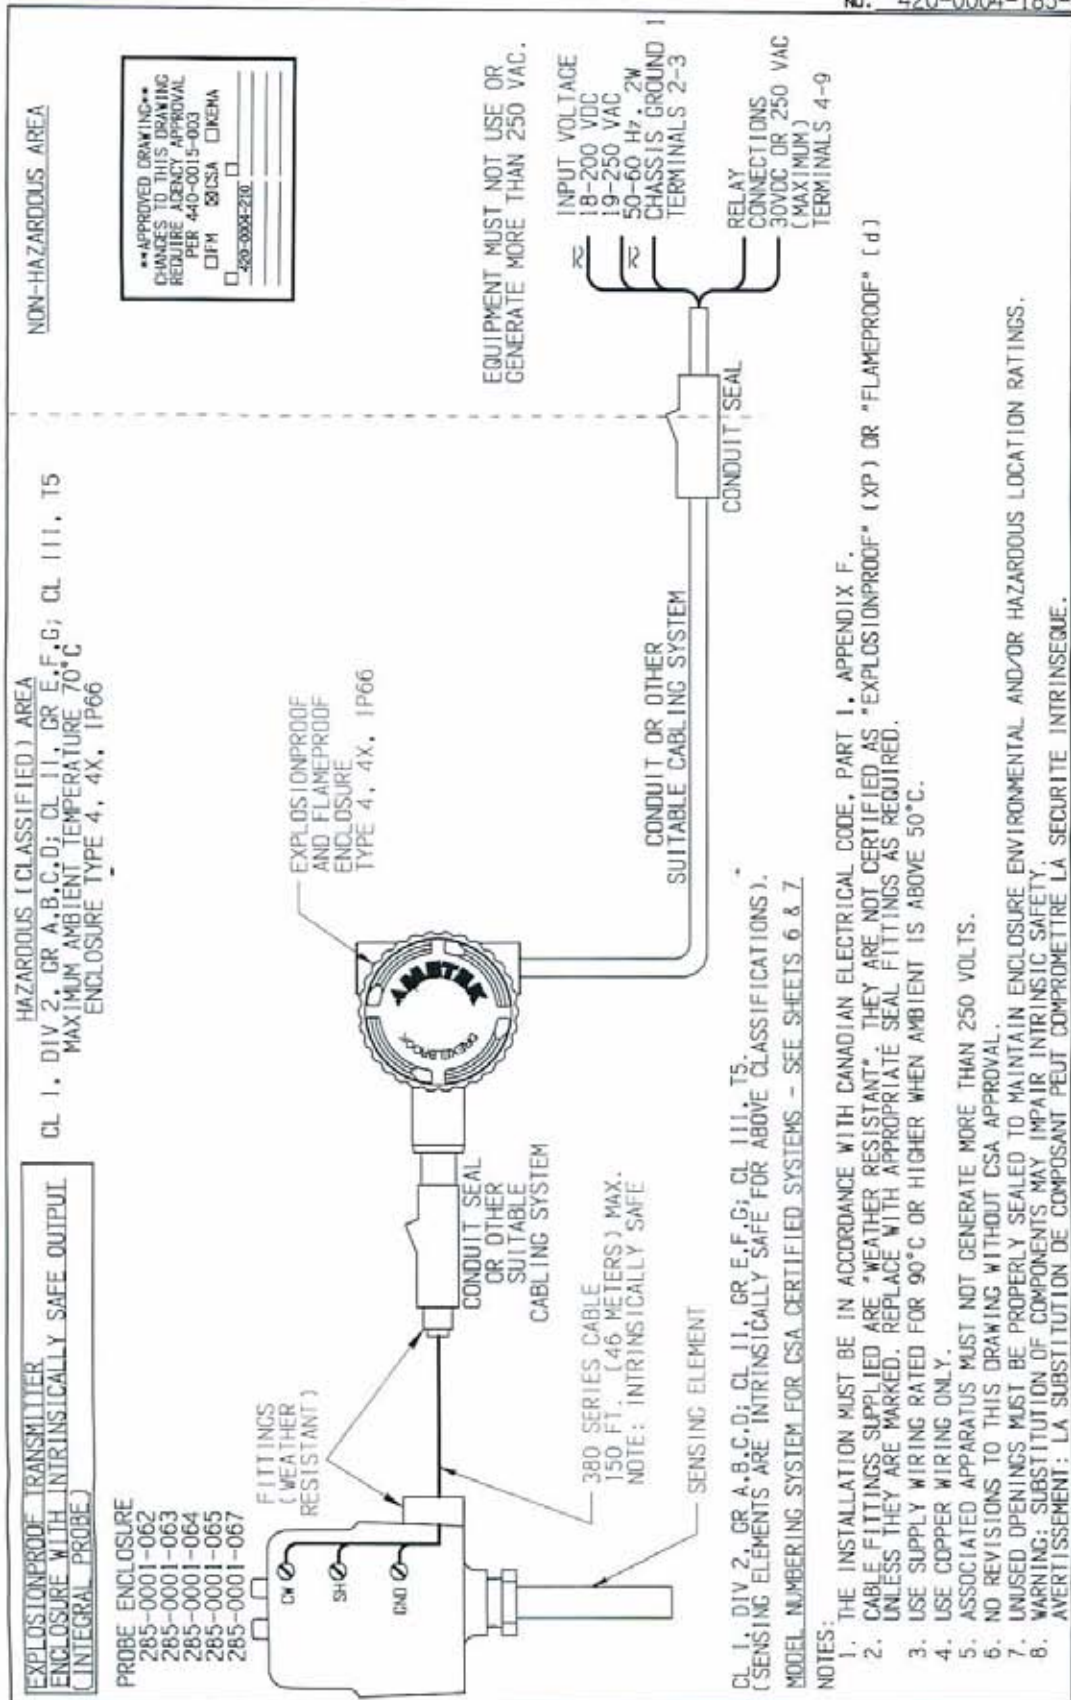

HAZARDOUS (CLASSIFIED) AREA
CL 1, DIV 2, GR A,B,C,D; CL II, GR E,F,G; CL III, T5
MAXIMUM AMBIENT TEMPERATURE 70°C
ENCLOSURE TYPE 4, 4X, IP66

NON-HAZARDOUS AREA

EXPLOSIONPROOF TRANSMITTER
ENCLOSURE WITH INTRINSICALLY SAFE OUTPUT
(INTEGRAL PROBE)

PROBE ENCLOSURE
285-0001-062
285-0001-063
285-0001-064
285-0001-065
285-0001-067

FITTINGS (WEATHER RESISTANT)

CONDUIT SEAL OR OTHER SUITABLE CABLING SYSTEM

EXPLOSIONPROOF AND FLAMEPROOF ENCLOSURE TYPE 4, 4X, IP66

CONDUIT OR OTHER SUITABLE CABLING SYSTEM

CONDUIT SEAL

EQUIPMENT MUST NOT USE OR GENERATE MORE THAN 250 VAC.

INPUT VOLTAGE
18-200 VDC
19-250 VAC
50-60 Hz, 2W
CHASSIS GROUND 1
TERMINALS 2-3

RELAY CONNECTIONS
30VDC OR 250 VAC (MAXIMUM)
TERMINALS 4-9

380 SERIES CABLE
150 FT. (.46 METERS) MAX.
NOTE: INTRINSICALLY SAFE

SENSING ELEMENT

CL 1, DIV 2, GR A,B,C,D; CL II, GR E,F,G; CL III, T5.
(SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS).

MODEL NUMBERING SYSTEM FOR CSA CERTIFIED SYSTEMS - SEE SHEETS 6 & 7

NOTES:
1. THE INSTALLATION MUST BE IN ACCORDANCE WITH CANADIAN ELECTRICAL CODE, PART I, APPENDIX F.
2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT". THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
4. USE COPPER WIRING ONLY.
5. ASSOCIATED APPARATUS MUST NOT GENERATE MORE THAN 250 VOLTS.
6. NO REVISIONS TO THIS DRAWING WITHOUT CSA APPROVAL.
7. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.
8. WARNING: SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY.
AVERTISSEMENT: LA SUBSTITUTION DE COMPOSANT PEUT COMPROMETTRE LA SECURITE INTRINSEQUE.

HAZARDOUS (CLASSIFIED) AREA

NON-HAZARDOUS AREA

EXPLOSIONPROOF TRANSMITTER
ENCLOSURE WITH INTRINSICALLY SAFE OUTPUT
(INTEGRAL PROBE)

PROBE ENCLOSURE
285-0001-062
285-0001-063
285-0001-064
285-0001-065
285-0001-067

FITTINGS (WEATHER RESISTANT)

CONDUIT SEAL OR OTHER SUITABLE CABLING SYSTEM

EXPLOSIONPROOF AND FLAMEPROOF ENCLOSURE TYPE 4, 4X, IP66

CONDUIT OR OTHER SUITABLE CABLING SYSTEM

CONDUIT SEAL

EQUIPMENT MUST NOT USE OR GENERATE MORE THAN 250 VAC.

INPUT VOLTAGE
18-200 VDC
19-250 VAC
50-60 Hz, 2W
CHASSIS GROUND 1
TERMINALS 2-3

RELAY CONNECTIONS
30VDC OR 250 VAC (MAXIMUM)
TERMINALS 4-9

380 SERIES CABLE
150 FT. (.46 METERS) MAX.
NOTE: INTRINSICALLY SAFE

SENSING ELEMENT

CL 1, DIV 2, GR A,B,C,D; CL II, GR E,F,G; CL III, T5.
(SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS).

MODEL NUMBERING SYSTEM FOR CSA CERTIFIED SYSTEMS - SEE SHEETS 6 & 7

NOTES:
1. THE INSTALLATION MUST BE IN ACCORDANCE WITH CANADIAN ELECTRICAL CODE, PART I, APPENDIX F.
2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT". THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
4. USE COPPER WIRING ONLY.
5. ASSOCIATED APPARATUS MUST NOT GENERATE MORE THAN 250 VOLTS.
6. NO REVISIONS TO THIS DRAWING WITHOUT CSA APPROVAL.
7. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.
8. WARNING: SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY.
AVERTISSEMENT: LA SUBSTITUTION DE COMPOSANT PEUT COMPROMETTRE LA SECURITE INTRINSEQUE.

HAZARDOUS (CLASSIFIED) AREA

NON-HAZARDOUS AREA

EXPLOSIONPROOF TRANSMITTER
ENCLOSURE WITH INTRINSICALLY SAFE OUTPUT
(INTEGRAL PROBE)

PROBE ENCLOSURE
285-0001-062
285-0001-063
285-0001-064
285-0001-065
285-0001-067

FITTINGS (WEATHER RESISTANT)

CONDUIT SEAL OR OTHER SUITABLE CABLING SYSTEM

EXPLOSIONPROOF AND FLAMEPROOF ENCLOSURE TYPE 4, 4X, IP66

CONDUIT OR OTHER SUITABLE CABLING SYSTEM

CONDUIT SEAL

EQUIPMENT MUST NOT USE OR GENERATE MORE THAN 250 VAC.

INPUT VOLTAGE
18-200 VDC
19-250 VAC
50-60 Hz, 2W
CHASSIS GROUND 1
TERMINALS 2-3

RELAY CONNECTIONS
30VDC OR 250 VAC (MAXIMUM)
TERMINALS 4-9

380 SERIES CABLE
150 FT. (.46 METERS) MAX.
NOTE: INTRINSICALLY SAFE

SENSING ELEMENT

CL 1, DIV 2, GR A,B,C,D; CL II, GR E,F,G; CL III, T5.
(SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS).

MODEL NUMBERING SYSTEM FOR CSA CERTIFIED SYSTEMS - SEE SHEETS 6 & 7

NOTES:
1. THE INSTALLATION MUST BE IN ACCORDANCE WITH CANADIAN ELECTRICAL CODE, PART I, APPENDIX F.
2. CABLE FITTINGS SUPPLIED ARE "WEATHER RESISTANT". THEY ARE NOT CERTIFIED AS "EXPLOSIONPROOF" (XP) OR "FLAMEPROOF" (d) UNLESS THEY ARE MARKED. REPLACE WITH APPROPRIATE SEAL FITTINGS AS REQUIRED.
3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
4. USE COPPER WIRING ONLY.
5. ASSOCIATED APPARATUS MUST NOT GENERATE MORE THAN 250 VOLTS.
6. NO REVISIONS TO THIS DRAWING WITHOUT CSA APPROVAL.
7. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.
8. WARNING: SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY.
AVERTISSEMENT: LA SUBSTITUTION DE COMPOSANT PEUT COMPROMETTRE LA SECURITE INTRINSEQUE.


CERTIFIED		by		DATE		ISS./EDO/OSR NO./APP'D	
PG #	4	5-07-112	<i>[Signature]</i>	1-3-07	5-19-03	285-0001-062	285-0001-062
ENC	3	1-06-216	THP	4-7-04	5-19-03	285-0001-063	285-0001-063
USER	2	3-04-216	THP	4-7-04	5-19-03	285-0001-064	285-0001-064
DE #	1	7-02-201	SGA	5-19-03	5-19-03	285-0001-065	285-0001-065
COPYRIGHT 2007		METEK DREXELBROOK		SCALE NONE		ALL DIMENSIONS IN INCHES (M)	
205 KEITH VALLEY RD		HERSING, PA 19044-0960		DR. JUS 5-14-07		CK. <i>[Signature]</i>	
215-674-1234		FAX 215-674-2731		DATE		ISS.	
CSA CONTROL DRAWING FOR "ThePoint" SERIES DIVISION 2 (REMOTE)		420-0004-185-CD		SHT. 4 OF 4		SHT. 4 OF 4	

NO. 420-0004-185-CD

SHT 4 OF 7

5.2 CSA Control Drawings (Continued)

1	2	3	4	5	6	7	8	9	10	11	12	COLUMNS 9 AND UP DO NOT AFFECT SAFETY
P	a	L	b	4	0	0	c	*	*	*	*	
	a											a = MODE N = STD UNIT NO-CAL L = STD 2pf FIXED T = 10pf AUTO CAL V = 10pf FIXED CAL H = HI SENSE .5pf AUTO CAL P = HI SENSE .5pf FIXED G = HI SENSE MANUAL M = STD SENSE MANUAL
		b										b = OUTPUT 1 = 1 DPDT RELAY 2 = 1 GOLD DPDT RELAY 3/4 NPT CSA SYSTEMS
			4									c = 0-3 (d) SENSING ELEMENTS
						c						0 700-1202-021
							0					1 700-1202-022
							1					2 700-1202-024
							2					3 700-1202-028

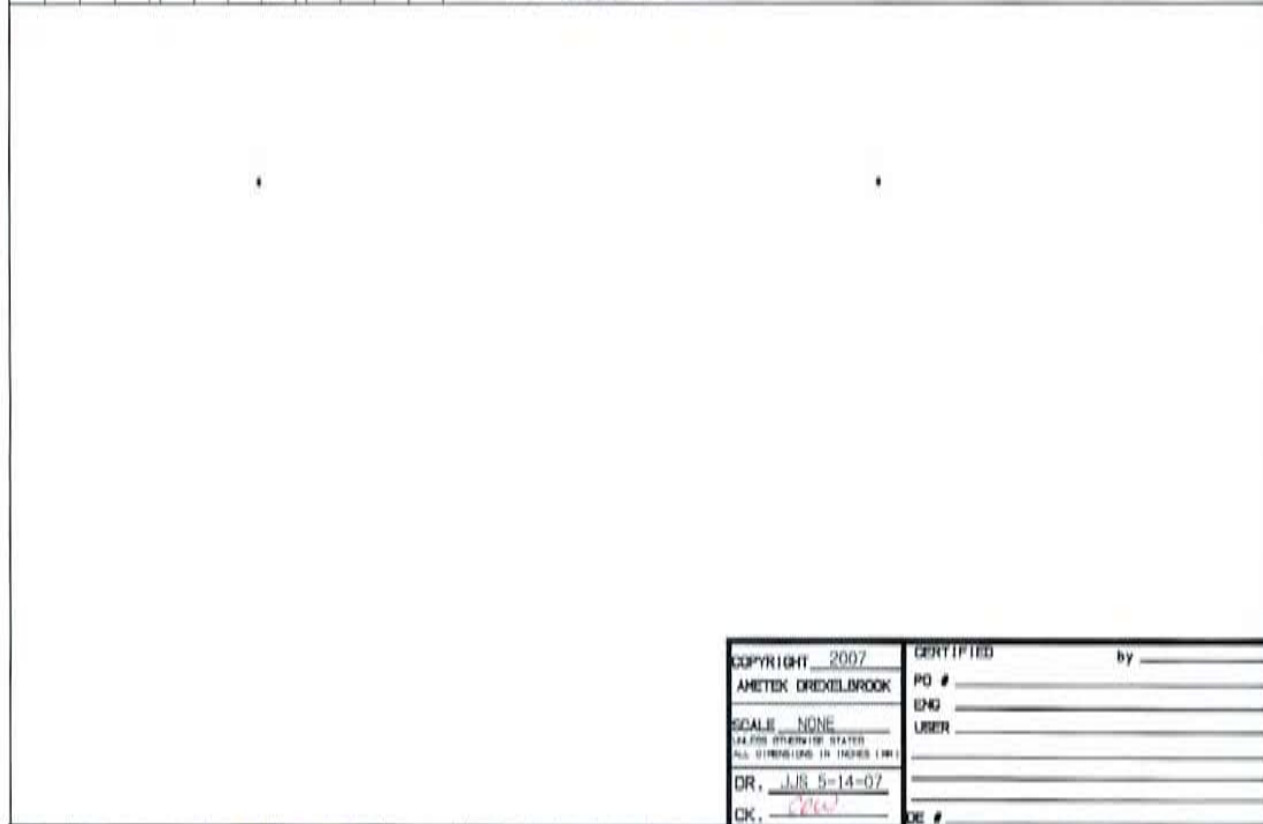

COPYRIGHT 2007	CERTIFIED	by _____
AMETEK DREXELBROOK	PO # _____	
SCALE NONE	ENR _____	
ALL DIMENSIONS UNLESS OTHERWISE STATED	USER _____	
ALL DIMENSIONS IN INCHES (MM)		
DR. JJS 5-14-07		
CK. [Signature]		
	DR # _____	

4	5-07-112	[Signature]	5/14/07
3	1-06-216	THP	1-3-07
2	3-04-216	THP	4-7-04
1	7-02-201	SGA	5-9-03
ISS.	EDC/DSR NO.	APP'D	DATE

AMETEK[®]
DREXELBROOK

205 KEITH VALLEY RD
ROSTOWN, PA 19064-9900

215-674-1234
FAX 215-674-2731

CSA APPROVED
"ThePoint"
MODEL NUMBERING SYSTEM
(INTEGRAL)

420-0004-185-CD

DR. 5	ISS. 7
OF 7	4

NO. 420-0004-185-00
SHEET 5 OF 7

5.2 CSA Control Drawings (Continued)

COLUMNS 9 AND UP DO NOT AFFECT SAFETY												
1	2	3	4	5	6	7	8	9	10	11	12	
P	a	L	b	4	c	d	e	*	*	*	*	
	a											a = MODE N = STD UNIT NO-CAL L = STD 2pf FIXED T = 10pf AUTO CAL V = 10pf FIXED H = HI SENSE .5pf AUTO CAL P = HI SENSE .5pf FIXED G = HI SENSE MANUAL M = STD SENSE MANUAL
			b									b = OUTPUT 1 = 1 DPDT RELAY 2 = 1 GOLD DPDT RELAY
				c								c = 1-9, A-K - CABLE OPTIONS (REMOTE)
					d							d = 0-3, 5, 6 OR Z SENSING ELEMENTS
						e						e = 0-9, OR Z SENSING ELEMENTS (4)
												SENSING ELEMENTS
					Z	Z						SEE SHEET 7 FOR ADDITIONAL APPROVED SENSING ELEMENTS
					0	0						700-1202-001
						1						700-1202-012
						2						700-1202-014
						3						700-1202-018
						4						700-1202-041
						6						700-1202-031
						7						700-1202-010
						9						700-1202-033
					1	0						700-0001-018
						1						700-0201-005
						2						700-0201-005...HAST C
						3						700-0201-036
						4						700-0202-002
						5						700-0202-043
						6						700-0002-360
						7						700-0202-036
						8						700-0001-022
						9						700-0002-023 (4)
					2	0						700-0209-022
					3	1						700-0029-001
						2						700-0029-002
						3						700-0029-003
						4						700-0029-004
						5						700-0029-005
					5	0						700-0207-001
						1						700-0207-002
						2						700-0207-003
						3						700-0207-004
						5						700-0207-066
					6	0						700-0204-038
						1						700-0204-002 (4)
						2						700-0204-048 (4)

COPYRIGHT 2007
AMETEK DREXELBROOK

SCALE NONE
UNLESS OTHERWISE STATED
ALL DIMENSIONS IN INCHES (1/8")

DR. JUS 5-14-07
CK. *CJL*

CERTIFIED _____ by _____

PO # _____

ENR _____

USER _____

DATE _____

4	5-07-112	<i>THP</i>	<i>5/14/07</i>
3	1-06-216	THP	1-3-07
2	3-04-216	THP	4-7-04
1	7-02-201	SGA	5-9-03

CSA APPROVED
"ThePoint"
MODEL NUMBERING SYSTEM
(REMOTE)

420-0004-185-CD

SHT. 9 OF 14

205 KEITH VALLEY RD
MORRISVILLE, PA 17054-0986

215-674-1234
FAX 215-674-2731

5.2 CSA Control Drawings (Continued)

MODEL NUMBERS OF APPROVED INTRINSICALLY SAFE SENSING ELEMENTS

700-mnop-qrst LEVEL PROBE

- m = FAMILY NO. 0 THROUGH 9, BLANK
- n = FAMILY NO. 0 THROUGH 9, BLANK
- o = 0 THROUGH 9, BLANK
- p = 0 THROUGH 9
- q = FAMILY NO. 0 THROUGH 9, BLANK
- r = FAMILY NO. 0 THROUGH 9, BLANK
- s = FAMILY NO. 0 THROUGH 9
- t = 14 CHARACTER EXPANDED NUMBERING SYSTEM, DOES NOT AFFECT SAFETY

COPYRIGHT 2007	CERTIFIED	by _____
AMETEK DREXELBROOK	PO # _____	
SCALE NONE	ENG _____	
PLEASE OTHERWISE STATE ALL DIMENSIONS IN INCHES (MM)	USER _____	
DR. JJS 5-14-07		
CK. <i>CPA</i>		

NO. 420-0004-185-CD

4	5-07-112	<i>DP</i>	<i>5-14-07</i>
3	1-06-216	THP	1-3-07
2	3-04-216	THP	4-7-04
1	7-02-201	SGA	5-9-03
ISS.	EDD/DSR NO.	APP'D	DATE




205 KEITH VALLEY RD
MORRISVILLE, PA 19064-9980
215-674-1234
FAX 215-674-2731

CSA APPROVED
"ThePoint"
MODEL NUMBERING SYSTEM
(REMOTE)

420-0004-185-CD

SHT. 7 OF 7
ISS. 4

5.3 ATEX Control Drawings

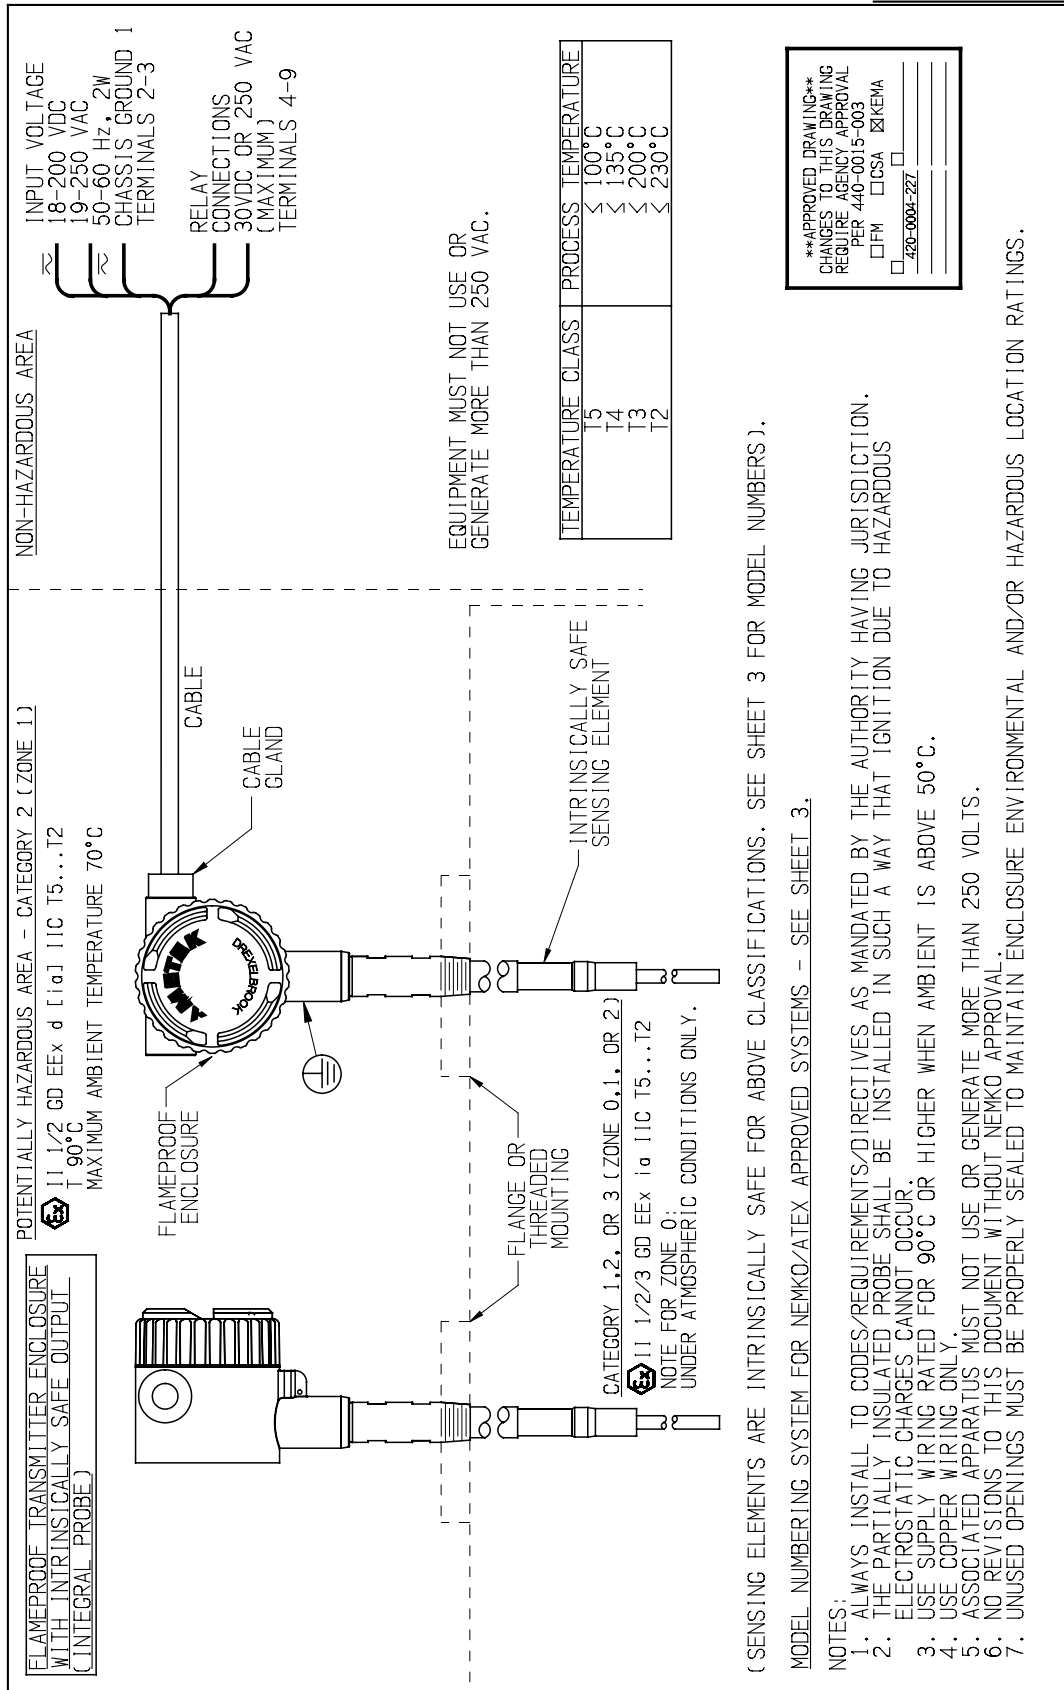

6. 420-0004-186-CD

SHT 1 OF 5

****APPROVED DRAWING****
 CHANGES TO THIS DRAWING
 REQUIRE AGENCY APPROVAL
 PER 440-0015-003
 FM CSA KEMA
 420-0004-22Z

- (SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS. SEE SHEET 3 FOR MODEL NUMBERS).
 MODEL NUMBERING SYSTEM FOR NEMKO/ATEX APPROVED SYSTEMS - SEE SHEET 3.
- NOTES:
1. ALWAYS INSTALL TO CODES/REQUIREMENTS/DIRECTIVES AS MANDATED BY THE AUTHORITY HAVING JURISDICTION.
 2. THE PARTIALLY INSULATED PROBE SHALL BE INSTALLED IN SUCH A WAY THAT IGNITION DUE TO HAZARDOUS ELECTROSTATIC CHARGES CANNOT OCCUR.
 3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
 4. USE COPPER WIRING ONLY.
 5. ASSOCIATED APPARATUS MUST NOT USE OR GENERATE MORE THAN 250 VOLTS.
 6. NO REVISIONS TO THIS DOCUMENT WITHOUT NEMKO APPROVAL.
 7. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.

<p>CERTIFIED by _____</p>		<p>DR. JUS 2-15-06</p>	
<p>PO # _____</p>	<p>3 1-06-216</p>	<p>THP</p>	<p>2-17-06</p>
<p>ENG _____</p>	<p>2 3-04-215</p>	<p>THP</p>	<p>4-7-04</p>
<p>USER _____</p>	<p>1 7-02-201</p>	<p>SGA</p>	<p>9-17-03</p>
<p>ISS. EDO/DSR NO. APP'D</p>	<p>DATE</p>	<p>DR. JUS 2-15-06</p>	<p>CDW</p>
<p>ISS. OF 3</p>	<p>420-0004-186-CD</p>	<p>SHT. 1 OF 5</p>	<p>ISS. OF 3</p>

NEMKO/ATEX CONTROL DRAWING FOR "ThePoint" SERIES ZONE [0] 1 OR 2 (INTEGRAL)


AMETEK® DREXELBROOK

205 KEITH VALLEY RD
 HORSHAM, PA 19044-9986
 215-674-1234
 FAX 215-674-2731

5.3 ATEX Control Drawings (Continued)

NO. 420-0004-186-CD

SHT 2 OF 5

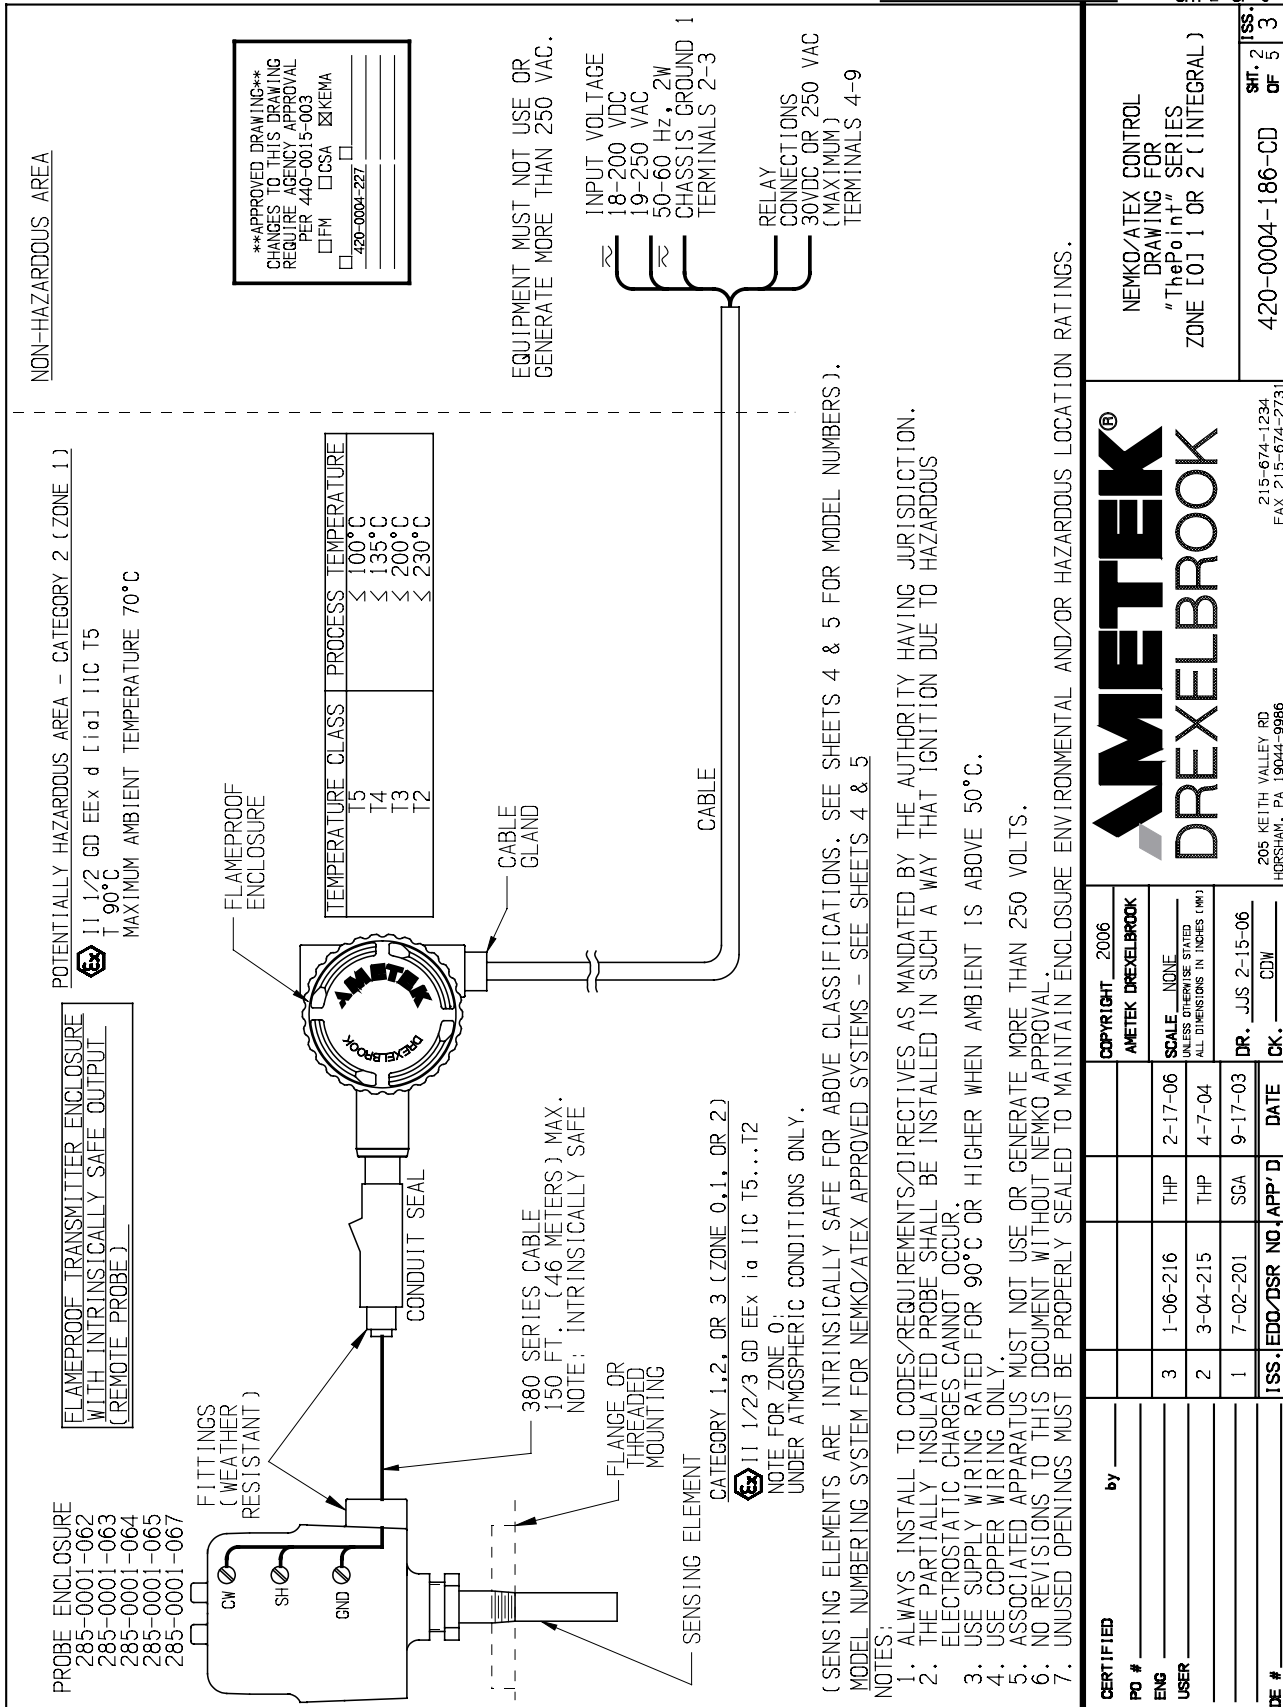

(SENSING ELEMENTS ARE INTRINSICALLY SAFE FOR ABOVE CLASSIFICATIONS. SEE SHEETS 4 & 5 FOR MODEL NUMBERS).
 MODEL NUMBERING SYSTEM FOR NEMKO/ATEX APPROVED SYSTEMS - SEE SHEETS 4 & 5

NOTES:

1. ALWAYS INSTALL TO CODES/REQUIREMENTS/DIRECTIVES AS MANDATED BY THE AUTHORITY HAVING JURISDICTION.
2. THE PARTIALLY INSULATED PROBE SHALL BE INSTALLED IN SUCH A WAY THAT IGNITION DUE TO HAZARDOUS ELECTROSTATIC CHARGES CANNOT OCCUR.
3. USE SUPPLY WIRING RATED FOR 90°C OR HIGHER WHEN AMBIENT IS ABOVE 50°C.
4. USE COPPER WIRING ONLY.
5. ASSOCIATED APPARATUS MUST NOT USE OR GENERATE MORE THAN 250 VOLTS.
6. NO REVISIONS TO THIS DOCUMENT WITHOUT NEMKO APPROVAL.
7. UNUSED OPENINGS MUST BE PROPERLY SEALED TO MAINTAIN ENCLOSURE ENVIRONMENTAL AND/OR HAZARDOUS LOCATION RATINGS.

5.3 ATEX Control Drawings (Continued)

1	2	3	4	5	6	7	8	9	10	11	12	COLUMNS 9 AND UP DO NOT AFFECT SAFETY	
P	a	L	b	2	0	0	c	*	*	*	*		
	a											a = MODE N = STD AUTO CAL	
												L = STD 2pF FIXED	
												T = 10pF AUTO CAL	
												V = 10pF FIXED CAL	
												H = HI SENSE .5pF AUTO CAL	
												P = HI SENSE .5pF FIXED	
												G = HI SENSE MANUAL	
												M = STD SENSE MANUAL	
			b									b = OUTPUT 1 = 1 DPDT RELAY 2 = 1 GOLD DPDT RELAY	
				2								M20 KEMA/CENELEC SYSTEMS	
							c					c = 0-3	
												SENSING ELEMENTS	
							0					700-1202-021	KEMA NO. Ex-00.E.2144 U
							1					700-1202-022	KEMA NO. Ex-00.E.2144 U
							2					700-1202-024	KEMA NO. Ex-00.E.2144 U
							3					700-1202-028	KEMA NO. Ex-00.E.2144 U

COPYRIGHT 2006	CERTIFIED by _____
AMETEK DREXELBROOK	PO # _____
SCALE NONE	ENG _____
UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)	USER _____
DR. JJS 2-15-06	_____
CK. CDW	DE # _____

3	1-06-216	THP	2-17-06
2	3-04-215	THP	4-7-04
1	7-02-201	SGA	9-17-03
ISS.	EDD/DSR NO.	APP' D	DATE

AMETEK[®]
DREXELBROOK

205 KEITH VALLEY RD
HORSHAM, PA 19044-9986

215-674-1234
FAX 215-674-2731

NEMKO/ATEX APPROVED
"ThePoint"
MODEL NUMBERING SYSTEM
(INTEGRAL)

420-0004-186-CD

SHT. 3 OF 5

ISS. 3 OF 3

NO. 420-0004-186-CD

SHT 3 OF 5

5.3 ATEX Control Drawings (Continued)

COLUMNS 9 AND UP DO NOT AFFECT SAFETY												
1	2	3	4	5	6	7	8	9	10	11	12	
P	a	L	b	2	c	d	e	*	*	*	*	
	a											a = MODE N = STD AUTO CAL L = STD 2pF FIXED T = 10pF AUTO CAL V = 10 pF FIXED CAL H = HI SENSE .5pF AUTO CAL P = HI SENSE .5pF FIXED G = HI SENSE MANUAL M = STD SENSE MANUAL
			b									b = OUTPUT 1 = 1 DPDT RELAY 2 = 1 GOLD DPDT RELAY
				c								c = 1-9, A-K - CABLE OPTIONS (REMOTE) (3)
					d							d = 0-3, 5, 6, OR Z SENSING ELEMENTS
						e						e = 0-9, OR Z SENSING ELEMENTS
												SENSING ELEMENTS
					0	0						700-1202-001
						1						700-1202-012
						2						700-1202-014
						3						700-1202-018
						4						700-1202-041
						6						700-1202-031
						7						700-1202-010
						9						700-1202-033
					1	0						700-0001-018
						1						700-0201-005
						2						700-0201-005...HAST C
						3						700-0201-036
						4						700-0202-002
						5						700-0202-043
						6						700-0002-360
						7						700-0202-036
						8						700-0001-022
						9						700-0002-023 (3)
					2	0						700-0209-022
					3	1						700-0029-001
						2						700-0029-002
						3						700-0029-003
						4						700-0029-004
						5						700-0029-005
					5	0						700-0207-001
						1						700-0207-002
						2						700-0207-003
						3						700-0207-004
						5						700-0207-066
						6	0					700-0204-038
							1					700-0204-002 (3)
							2					700-0204-048 (3)
					Z	Z						SEE SHEET 5 FOR ADDITIONAL APPROVED SENSING ELEMENTS
												(3)

COPYRIGHT 2006
AMETEK DREXELBROOK
SCALE NONE
UNLESS OTHERWISE STATED
ALL DIMENSIONS IN INCHES (MM)
DR. JJS 2-15-06
CK. CDW

CERTIFIED by _____
PO # _____
ENG _____
USER _____
DE # _____

NO. 420-0004-186-CD

3	1-06-216	THP	2-17-06
2	3-04-215	THP	4-7-04
1	7-02-201	SGA	9-17-03
ISS.	EDD/DSR NO.	APP'D	DATE

AMETEK®
DREXELBROOK

205 KEITH VALLEY RD
HORSHAM, PA 19044-9986

215-674-1234
FAX 215-674-2731

NEMKO/ATEX APPROVED
"ThePoint"
MODEL NUMBERING SYSTEM
(REMOTE)

420-0004-186-CD

SHT. 4 OF 5
ISS. 3

SHT 4 OF 5

5.3 ATEX Control Drawings (Continued)

MODEL NUMBERS OF APPROVED INTRINSICALLY SAFE SENSING ELEMENTS

700-mnop-qrst LEVEL PROBE

- m = FAMILY NO. 0 THROUGH 9, BLANK
- n = FAMILY NO. 0 THROUGH 9, BLANK
- o = 0 THROUGH 9, BLANK
- p = 0 THROUGH 9
- q = FAMILY NO. 0 THROUGH 9, BLANK
- r = FAMILY NO. 0 THROUGH 9, BLANK
- s = FAMILY NO. 0 THROUGH 9
- t = 14 CHARACTER EXPANDED NUMBERING SYSTEM, DOES NOT AFFECT SAFETY

COPYRIGHT 2006
 AMETEK DREXELBROOK
 SCALE NONE
UNLESS OTHERWISE STATED
 ALL DIMENSIONS IN INCHES (MM)
 DR. JJS 2-15-06
 CK. CDW

CERTIFIED by _____
 PO # _____
 ENG _____
 USER _____

 DE # _____

NO. 420-0004-186-CD

3	1-06-216	THP	2-17-06
2	3-04-215	THP	4-7-04
1	7-02-201	SGA	9-17-03
ISS.	EDO/DSR NO.	APP'D	DATE

AMETEK[®]
DREXELBROOK

205 KEITH VALLEY RD
 HORSHAM, PA 19044-9986

215-674-1234
 FAX 215-674-2731

NEMKO/ATEX APPROVED
 ADDITIONAL INTRINSICALLY
 SAFE SENSING ELEMENTS
 (REMOTE)


420-0004-186-CD

SHT. 5	OF 5	ISS. 3
--------	------	--------

SHT 5 OF 5

5.4 TestSafe Control Drawings

NO. 420-0004-245-CD SHT 1 OF 3

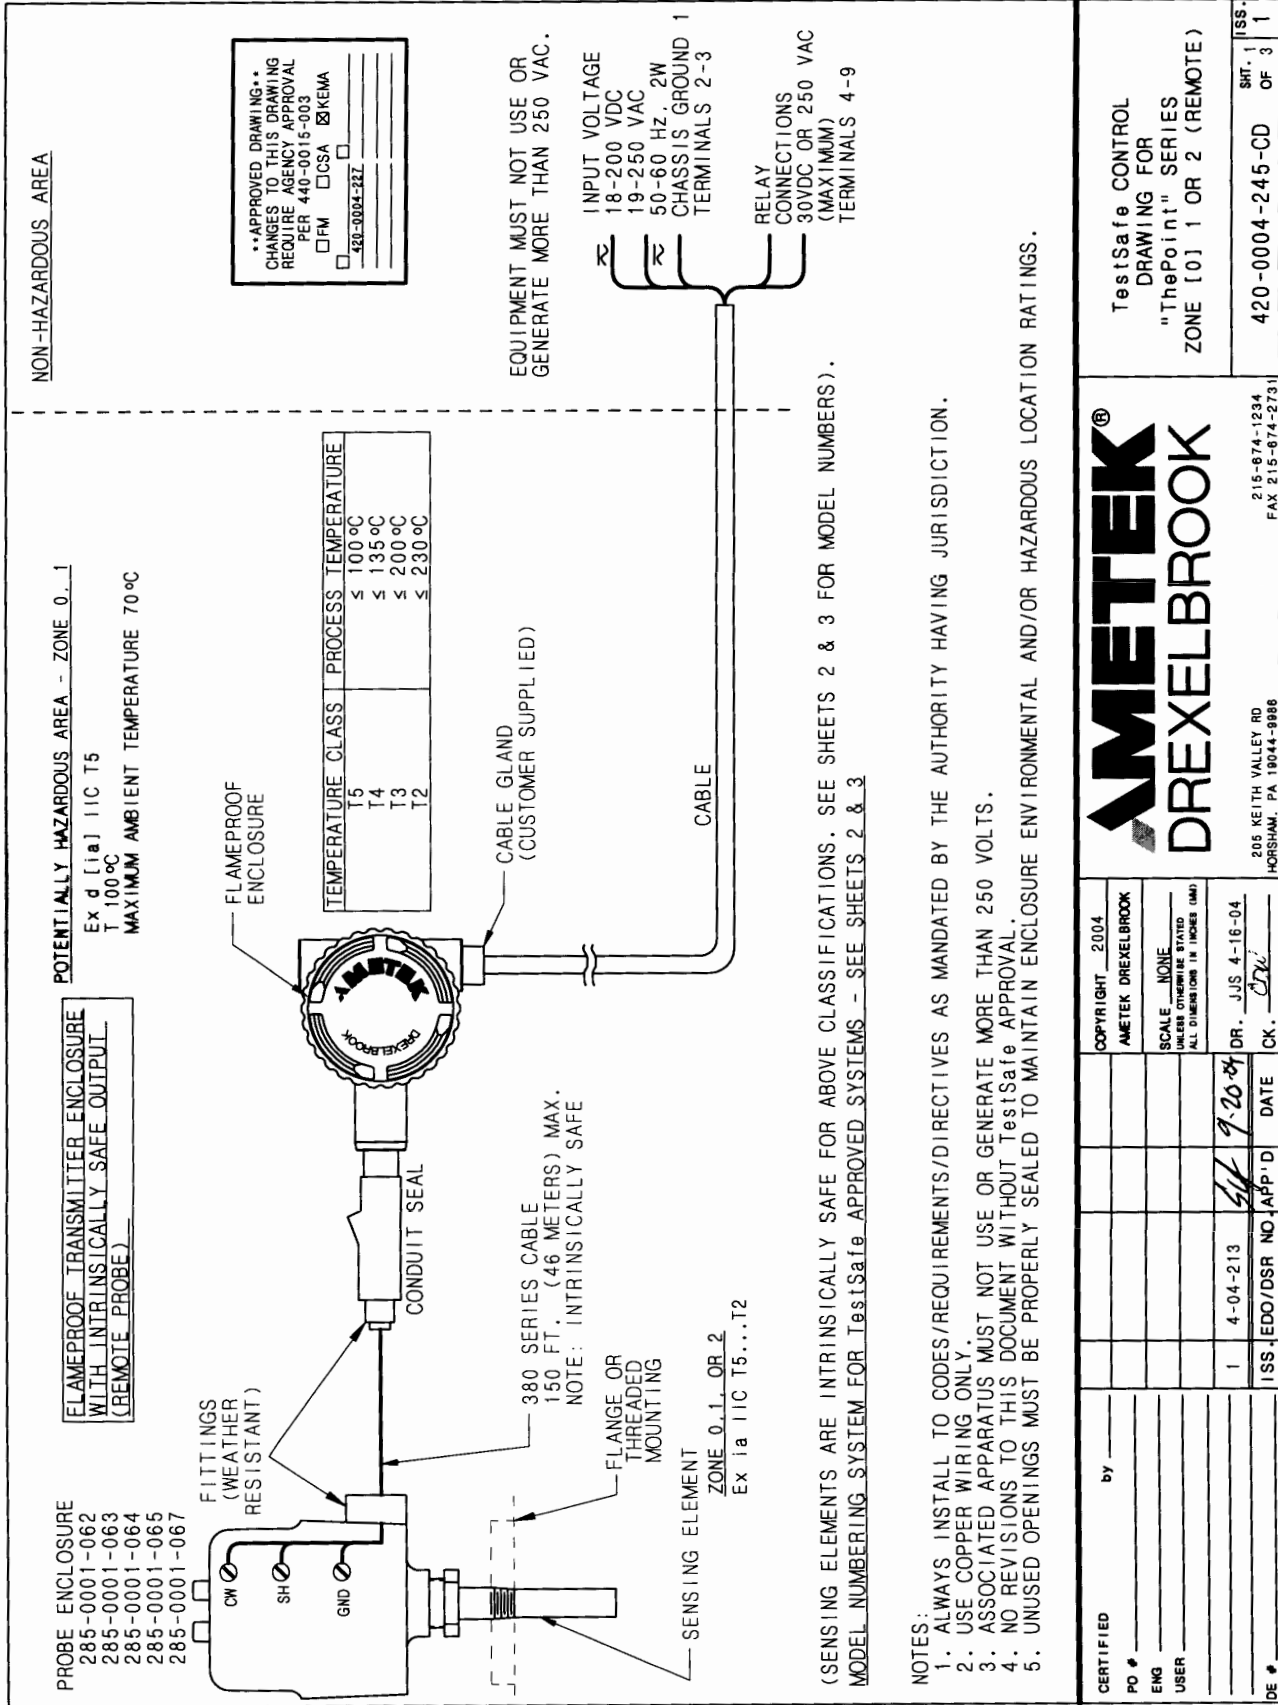

5.4 TestSafe Control Drawings (Continued)

COLUMNS 9 AND UP DO NOT AFFECT SAFETY											
1	2	3	4	5	6	7	8	9	10	11	12
P	a	L	b	c	d	e	f	*	*	*	*
a								a = MODE	N = STD AUTO CAL		
								L = STD 2pf FIXED			
								T = 10pf AUTO CAL			
								V = 10pf FIXED			
								H = HI SENSE .5pf AUTO CAL			
								P = HI SENSE .5pf FIXED			
								G = HI SENSE MANUAL			
								M = STD SENSE MANUAL			
	b							b = OUTPUT 1 = 1 DPDT RELAY	2 = 1 GOLD DPDT RELAY		
		c						c = ENCLOSURE...2 = M20 ENTRIES			
								3 = 3/4 NPT ENTRIES			
			d					d = 1-9 - CABLE OPTIONS (REMOTE)			
				e				e = 0-3, 5, 6, OR Z SENSING ELEMENTS			
					f			f = 0-9, OR Z SENSING ELEMENTS			
								SENSING ELEMENTS			
				Z	Z			SEE SHEET 3 FOR ADDITIONAL APPROVED SENSING ELEMENTS			
				0	0			700-1202-001			
					1			700-1202-012			
					2			700-1202-014			
					3			700-1202-018			
					4			700-1202-041			
					6			700-1202-031			
					7			700-1202-010			
					9			700-1202-033			
				1	0			700-0001-018			
					1			700-0201-005			
					2			700-0201-005...HAST C			
					3			700-0201-036			
					4			700-0202-002			
					5			700-0202-043			
					6			700-0002-360			
					7			700-0202-036			
					8			700-0001-022			
				2	0			700-0209-022			
					3	1		700-0029-001			
						2		700-0029-002			
						3		700-0029-003			
						4		700-0029-004			
						5		700-0029-005			
					5	0		700-0207-001			
						1		700-0207-002			
						2		700-0207-003			
						3		700-0207-004			
						5		700-0207-066			
					6	0		700-0204-038			

COPYRIGHT 2004
 AMETEK DREXELBROOK

SCALE NONE
UNLESS OTHERWISE STATED
 ALL DIMENSIONS IN INCHES (MM)

DR. JJS 4-16-04
 CK. CDW

CERTIFIED by _____

PO # _____

ENG _____

USER _____

DE # _____

TestSafe APPROVED
 "ThePoint"
 MODEL NUMBERING SYSTEM
 (REMOTE)

ISS.	EDO/DSR NO.	APP'D	DATE	
1	4-04-213	<i>JJS</i>	9-20-04	

205 KEITH VALLEY RD
 HORSHAM, PA 19044-9986

215-674-1234
 FAX 215-674-2731

420-0004-245-CD

SHT. 2 OF 3

ISS. 1

OF 3

5.4 TestSafe Control Drawings (Continued)

MODEL NUMBERS OF APPROVED INTRINSICALLY SAFE SENSING ELEMENTS

700-mnop-qrs-t LEVEL PROBE

- m = FAMILY NO. 0 THROUGH 9, BLANK
- n = FAMILY NO. 0 THROUGH 9, BLANK
- o = 0 THROUGH 9, BLANK
- p = 0 THROUGH 9
- q = FAMILY NO. 0 THROUGH 9, BLANK
- r = FAMILY NO. 0 THROUGH 9, BLANK
- s = FAMILY NO. 0 THROUGH 9
- t = 14 CHARACTER EXPANDED NUMBERING SYSTEM, DOES NOT AFFECT SAFETY

COPYRIGHT 2004
AMETEK DREXELBROOK
SCALE NONE
UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)
DR. JJS 4-16-04
CK. <i>CDW</i>

CERTIFIED	by _____
PO #	_____
ENG	_____
USER	_____
DE #	_____

NO. 420-0004-245-CD

1	4-04-213	<i>SJ</i>	<i>9-20-04</i>
ISS.	EDO/DSR NO.	APP'D	DATE



205 KEITH VALLEY RD
HORSHAM, PA 19044-9986

215-874-1234
FAX 215-874-2731


TestSafe APPROVED ADDITIONAL INTRINSICALLY SAFE SENSING ELEMENTS (REMOTE)	
420-0004-245-CD	SH. 3 OF 3 ISS. 1

SH. 3 OF 3

5.5 Heavy Duty Spark Protection

NO. 377-0001-019

SHT 1 OF 2

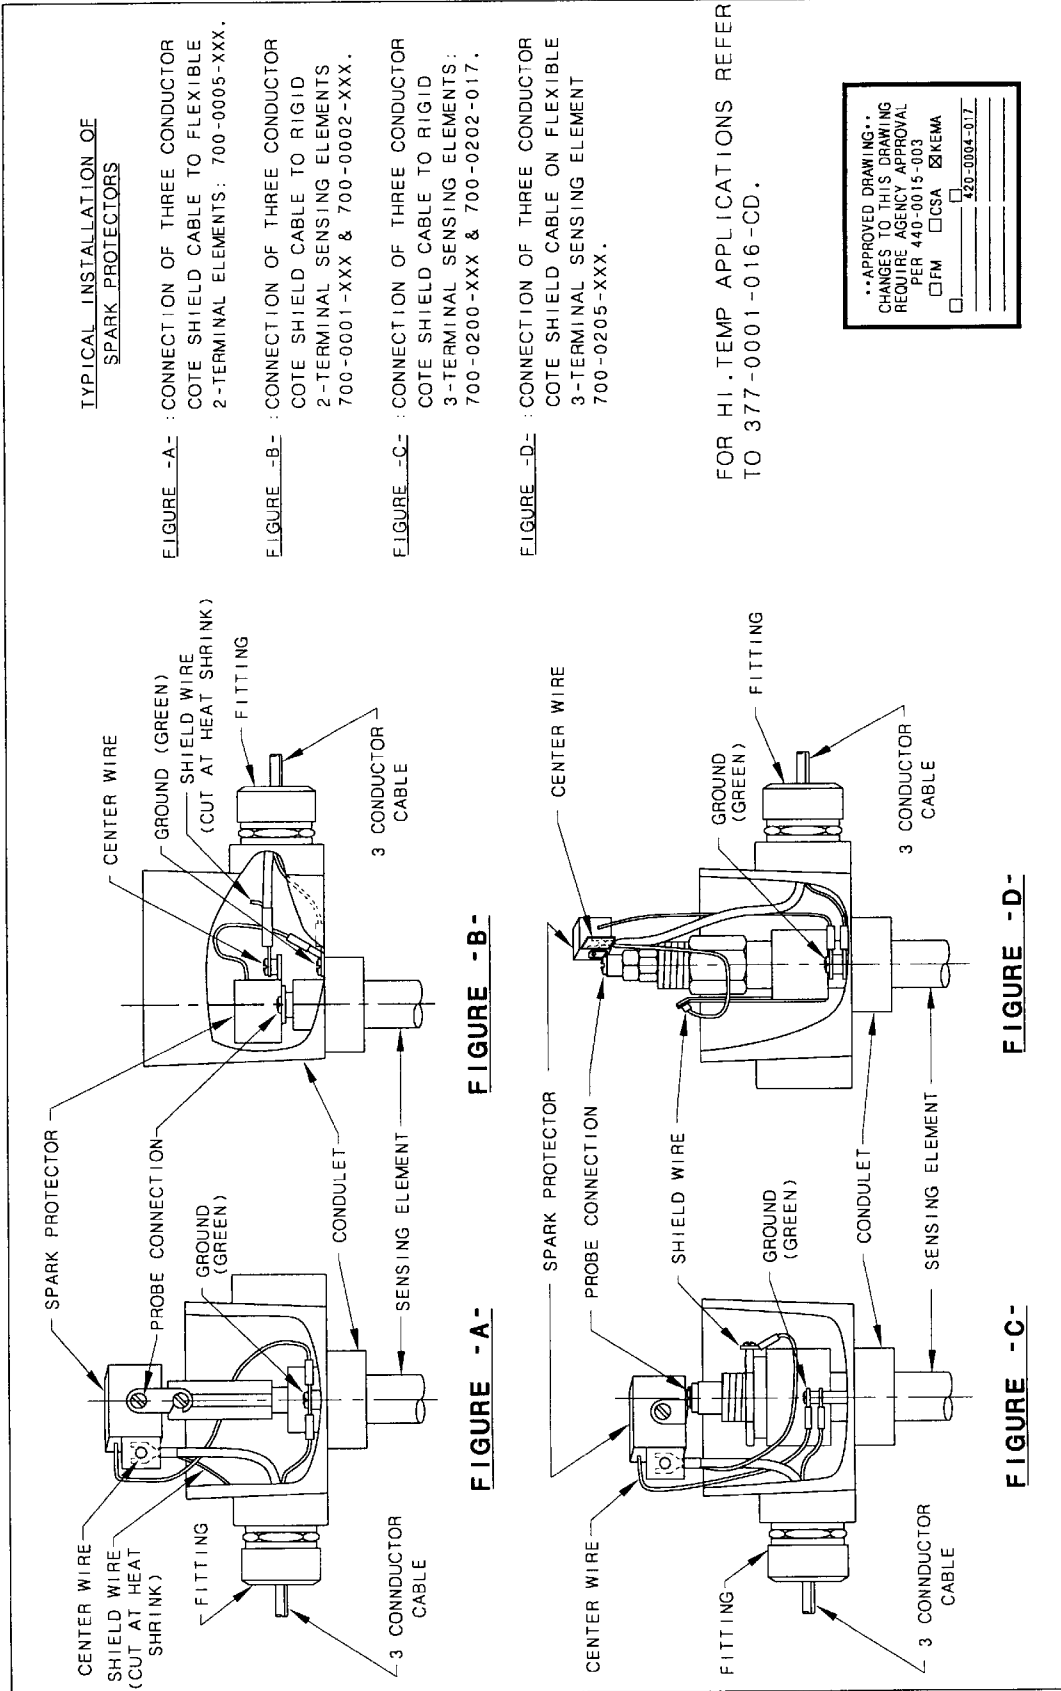

CERTIFIED		COPYRIGHT 2004			
PO #	5	AMETEK DREXELBROOK	2-04-336	SCALE NONE	ISS. 8-92-83
ENG				UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)	DATE 8-31-92
USER			7-93-303	JET	DR. CDW
ISS.			8-92-83	MPG	CK. JJS-3-3-cl
DE #					

205 KEITH VALLEY RD
 HORSHAM, PA 19044-9986
 215-874-1234
 FAX 215-874-2731

377-0001-019 HEAVY DUTY SPARK PROTECTOR CUSTOMER CONNECTION MOUNTING & WIRING	377-0001-019-CD	SHT. 1 OF 2
---	-----------------	-------------

5.5 Heavy Duty Spark Protection (Continued)

NO. 377-0001-019

SHT 2 OF 2

TYPICAL INSTALLATION OF SPARK PROTECTORS

FIGURE -E- : CONNECTION OF THREE CONDUCTOR COTE SHIELD CABLE IN PARALLEL WITH REMOTE VERIFY SWITCH.

FOR HI .TEMP APPLICATIONS REFER TO 377-0001-016-CD.

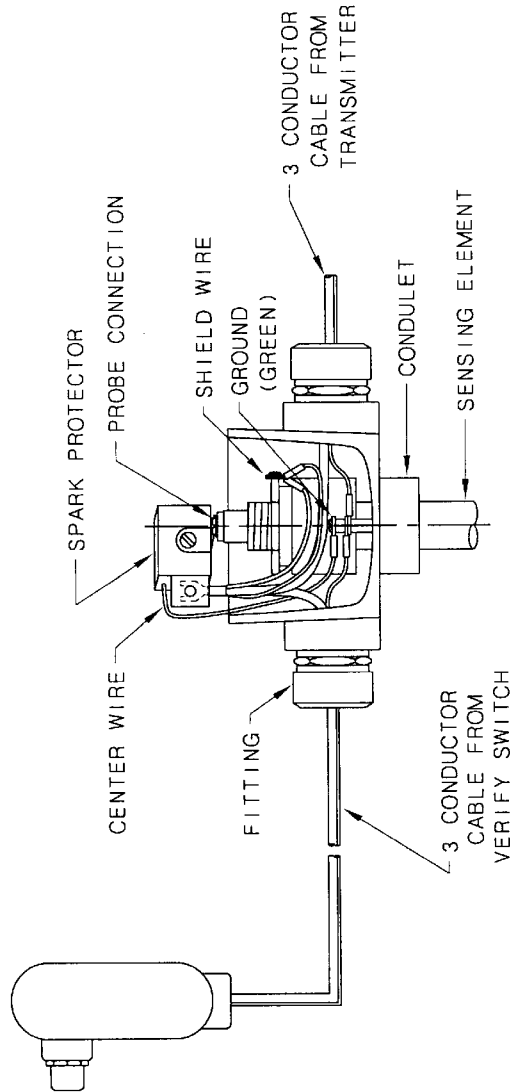


FIGURE -E-

<p>377-0001-019 HEAVY DUTY SPARK PROTECTOR CUSTOMER CONNECTION MOUNTING & WIRING</p>		<p>377-0001-019-CD SHT. 2 OF 2 ISS. 5</p>	
<p>AMETEK® DREXELBROOK</p>		<p>215-674-1234 FAX 215-674-2731</p>	
<p>205 KEITH VALLEY RD. HOBSHAM, PA. 19044-9988</p>		<p>215-674-1234 FAX 215-674-2731</p>	
CERTIFIED	by	COPYRIGHT 2004	AMETEK DREXELBROOK
PO #		SCALE NONE	UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)
ENG		DR. CDW	CK. JJS 3-7-01
USER		DATE	
ISS.	EDD/DSR NO.	APP'D	
DE #			

5.6 Adding a Padded Capacitor

no. 330-0009-022-CD

SHT 1 OF 3

ADDING A PADDED CAPACITOR:
 THE TUNING RANGE OF EACH POINT LEVEL SWITCH IS LIMITED. LONG INSERTION LENGTH SENSING ELEMENTS OR SENSING ELEMENTS MOUNTED IN PIPES OR NEAR METAL OBJECTS MAY GENERATE ENOUGH STANDING CAPACITANCE TO EXCEED THE TUNING RANGE OF THE SWITCH.

THE ADDITION OF AN EXTERNAL PADDING CAPACITOR WILL INCREASE THE TUNING RANGE OF THE UNIT. TUNING RANGES AND EXAMPLES OF INCREASES CAN BE FOUND FOR EACH TYPE OF POINT LEVEL ELECTRONIC SWITCH ON SHEET THREE.

WHEN A PADDING CAPACITOR IS REQUIRED, AN NPO CAPACITOR SHOULD BE ADDED TO THE PADDING TERMINALS AS INDICATED ON SHEET 2. ADDITIONAL PADS CAN BE ADDED IN PARALLEL UNIT A SATISFACTORY TUNING RANGE IS REACHED. IF A TUNING RANGE CANNOT BE REACHED, OR, IF PADDING IS IN EXCESS OF THE MAXIMUM RECOMMENDED TUNING RANGE AS INDICATED IN THE TABLE ON SHEET 3, PLEASE CONTACT THE FACTORY SERVICE DEPARTMENT.




NOTE: ON SOME TRANSMITTERS, THE PAD CAPACITOR IS SOLDERED TO TURRETS. OTHER TRANSMITTERS ATTACH THE LEADS UNDER SCREWS.

CERTIFIED		by _____	
PO #		COPYRIGHT	2005
ENG		METEK DREXELBROOK	
USER		SCALE	NONE
		UNLESS OTHERWISE STATED	
		ALL DIMENSIONS IN INCHES (IN)	
	2	6-05-243	JET 7-6-05
	1	7-01-303	JET 8-9-01
DE #		ISS. EDO/USR NO.	APP'D
			DATE
		DR.	CDW
		CK.	JTS 7-6-05
		205 KEITH VALLEY RD. HONSHAM, PA 19044-9906	
		215-674-1234 FAX 215-674-2731	
		METEK® DREXELBROOK	
		PAD CAPACITOR KIT FOR POINT LEVEL SWITCHES	
		330-0009-022-CD	SHT. 1 OF 3
			ISS. 2

5.6 Adding a Padded Capacitor (Continued)

NO. 330-0009-022-CD

SHEET 2 OF 3

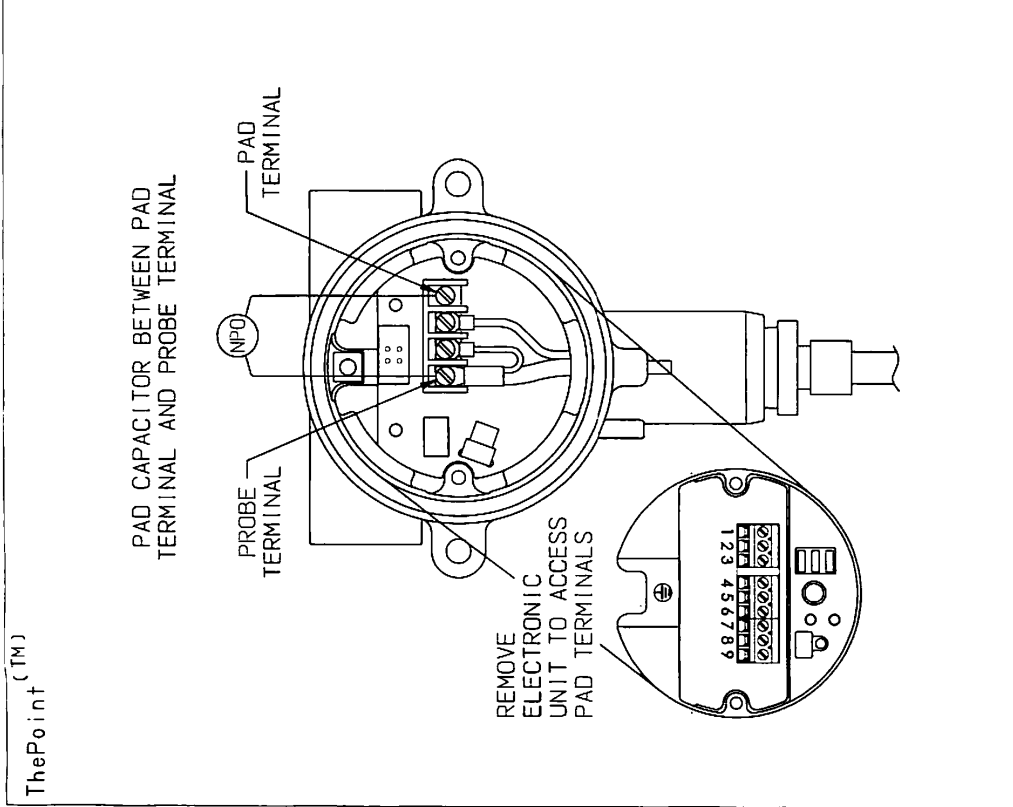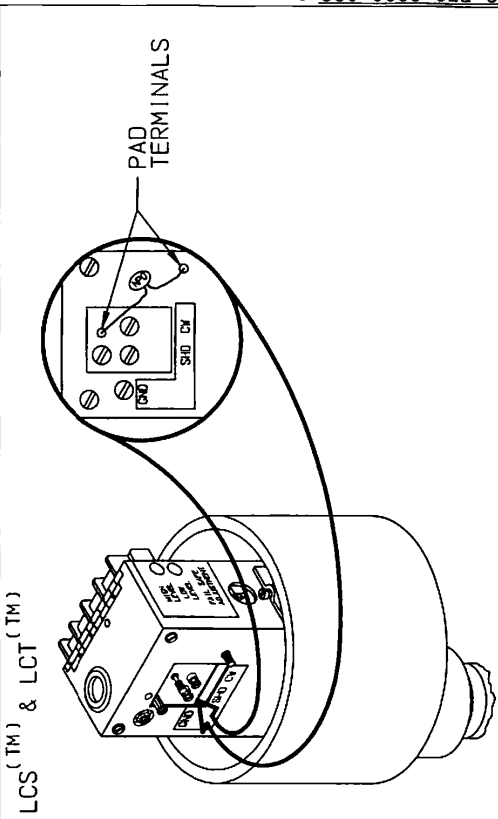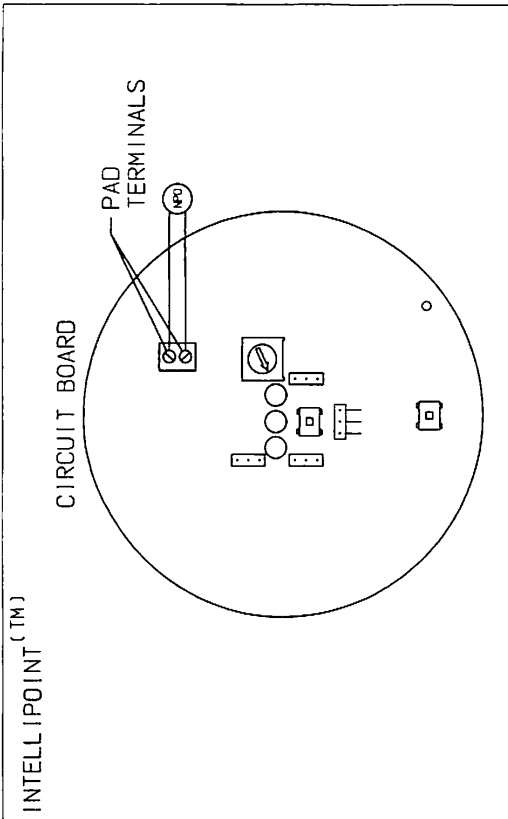

PAD CAPACITOR KIT
FOR POINT LEVEL SWITCHES

330-0009-022-CD

ISS. OF
SHEET 2 OF 3

METEK
DREXELBROOK

205 KEITH VALLEY RD
MORGANTOWN, PA 17054-9906
215-674-1234
FAX 215-674-2731

CERTIFIED	by	COPYRIGHT	2005
PO #		AMETEK	DREXELBROOK
ENG.		SCALE	NONE
USER		UNLESS OTHERWISE STATED ALL DIMENSIONS IN INCHES (MM)	
ISS. #	2	DATE	7-6-05
EDD/DSR NO.	7-01-303	DR.	DDW
APP'D	JET	CK.	JIS 7-6-05
DATE	8-9-01		

5.6 Adding a Padded Capacitor (Continued)

NO. 330-0009-022-CD

SHT 3 OF 3

PRODUCT	Sensitivity	Model Numbers	Un-padded Tuning Range	Padding Ratio	Padding Example	Max recommended tuning range
ThePoint™ Line Powered	High	PHL, PPL, PGL	0 to 25pF	1:3	Adding a 10pF cap will change the range to 3pF to 28pF	50 to 75pF
ThePoint™ Line Powered	Standard	PNL, PLL, PTL, PVL, PML	0 to 60pF	1:3	Adding a 10pF cap will change the range to 3pF to 63pF	120 to 180pF
ThePoint™ Two Wire	High	PHT, PPT, PGT	0 to 25pF	1:1	Adding a 10pF cap will change the range to 10 to 35pF	50 to 75pF
ThePoint™ Two Wire	Standard	PNT, PLT, PTT, PVT, PMT	0 to 60pF	1:1	Adding a 10pF cap will change the range to 10 to 70pF	120 to 180pF
Intellipoint™ (Line Powered and Two Wire)	High	RHL, RPL, RGL RHT, RPT, RGT	0 to 25pF	4.33:1	Adding a 10pF cap will change the range to 43pF to 68pF	50 to 75pF
Intellipoint™ (Line Powered and Two Wire)	Standard	RNL, RLL, RTL, RVL, RML RNT, RLT, RTT, RVT, RMT	0 to 100pF	4.33:1	Adding a 10pF cap will change the range to 43pF to 143pF	200 to 300pF
LCS	High	406-6020, 406-6022	0 to 8pF	1:1	Adding a 10pF cap will change the range to 10 to 18pF	16 to 24pF
LCS	Standard	406-6000, 406-6002	0 to 90pF	3:1	Adding a 10pF cap will change the range to 30 to 120pF	180 to 270pF
LCT	High	406-6220, 406-6222	0 to 8pF	1:1	Adding a 10pF cap will change the range to 10 to 18pF	16 to 24pF
LCT	Standard	406-6200, 406-6202	0 to 90 pF	3:1	Adding a 10pF cap will change the range to 30 to 120pF	180 to 270pF


CERTIFIED		by _____		COPYRIGHT 2005		AMETEK DREXELBROOK	
PO # _____	ENG _____	USER _____	ISS. _____	EDD/DSR NO. _____	APP'D _____	DATE _____	DR. _____
SCALE NONE		UNLESS OTHERWISE STATED		ALL DIMENSIONS IN INCHES (IN)		SCALE NONE	
2 6-05-243		JET 8-9-01		JET 8-9-01		JET 8-9-01	
1 7-01-303		JET 8-9-01		JET 8-9-01		JET 8-9-01	
ISS. _____		EDD/DSR NO. _____		APP'D _____		DATE _____	
DEF # _____		_____		_____		_____	
METEK®				DREXELBROOK			
PAD CAPACITOR KIT				FOR POINT LEVEL SWITCHES			
330-0009-022-CD				SHT. 3 OF 3			
215-674-1234				205 KEITH VALLEY RD			
FAX 215-674-2731				PICESHIRE, PA. 19064-0910			

Appendix A

Shortening or Lengthening Sensing Element



CAUTION:
The insulation length of either **Flush Sensing Elements** or **Insulated Sensing Elements** can **NOT** be changed. **Cable Sensing Elements** can only be shortened. Instructions are included with each unit.

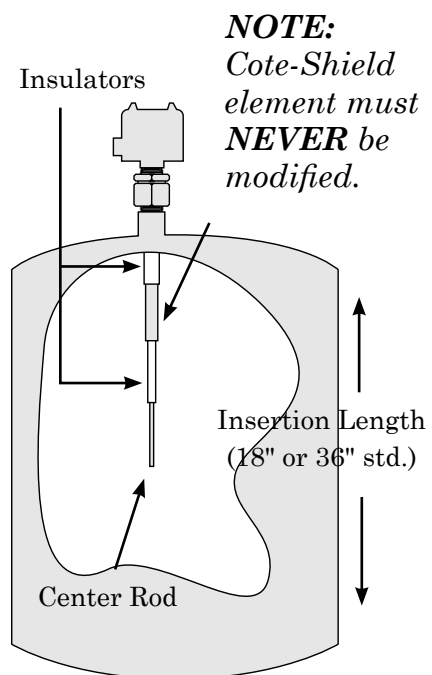

NOTE:
Cote-Shield element must **NEVER** be modified.

Note:
Any changes to probe length after calibration requires recalibration to ensure proper operation.

The Need

Sometimes your application calls for probe lengths other than the standard 18-inch or longer insertion lengths supplied. Shortening the sensing element is quite simple and can be done in the field. Lengthening the sensing element, however, is more difficult because the metal rod, typically 304 SS or 316 SS, must be welded.

Before making any Adjustments:

- 1) Read the following instructions thoroughly.
- 2) Remove power.
- 3) Disconnect the electronics.
- 4) Protect electronics from any static discharge.
- 5) Protect electronics from any heat.

Shortening

The bare metal center rod of the sensing element can be shortened with a hacksaw. Be careful not to cut either of the two insulators. See Figure on this page.

In applications using conductive or water-based materials, shortening is not a problem. Leave a minimum bare metal center rod length of two (2) inches.

For dry granular materials, such as powder, sand, clinker, etc., you must leave a minimum bare metal center rod length of eight (8) inches. Consult the factory before shortening beyond this point.

Lengthening

To lengthen the sensing element, an extension rod can be welded onto the end of the bare metal center rod. Make sure that the extension rod is the same metal as the sensing element.

An alternate option is to add a pipe coupling and a section of metal pipe after threading the tip of the sensing element. In this case, the metal pipe need not be identical to the metal of the sensing element.



TERMS AND CONDITIONS OF SALE

GENERAL: *ALL ORDERS ARE SUBJECT TO THE FOLLOWING TERMS AND CONDITIONS. ANY ACCEPTANCE OF ANY OFFER OF BUYER FOR ANY GOODS OR SERVICES IS CONDITIONED UPON THESE TERMS AND CONDITIONS, AND SELLER OBJECTS TO ANY ADDITIONAL OR DIFFERENT TERMS PROPOSED BY BUYER IN ANY DOCUMENT, WHICH SHALL NOT BE BINDING UPON SELLER.* No salesman or other party is authorized to bind the AMETEK DREXELBROOK Division of AMETEK, Inc. (hereinafter "Seller") by any agreement, warranty, statement, promise, or understanding not herein expressed, and no modifications shall be binding on Seller unless the same are in writing and signed by an executive officer of Seller or his or her duly authorized representative. Verbal orders shall not be executed until written notification has been received and acknowledged by Seller.

QUOTATIONS: Written quotations are valid for thirty (30) days unless otherwise stated. Verbal quotations expire the same day they are made.

PRICES: All prices and terms are subject to change without notice. Buyer-requested changes to its order ("Orders"), including those affecting the identity, scope and delivery of the goods or services, must be documented in writing and are subject to Seller's prior approval and adjustments in price, schedule and other affected terms and conditions. Orders requiring certified test data in excess of commercial requirements, are subject to a special charge.

ORDER ACCEPTANCE: All Orders are subject to final approval and acceptance by Seller at its office located at 205 Keith Valley Road, Horsham, Pennsylvania 19044.

TERMS OF PAYMENT: Seller's standard terms of payment for Buyers who qualify for credit are net thirty (30) days from date of invoice. All invoices must be paid in United States dollars.

CREDIT: Seller reserves the right at any time to revoke any credit extended to Buyer or otherwise modify terms of payment if Buyer fails to pay for any shipments when due or if in Seller's opinion there is a material adverse change in Buyer's financial condition. Seller may, at its option, cancel any accepted Order if Buyer fails to pay any invoices when due.

DELIVERY: Shipments are F.O.B place of manufacture ("Shipping Point") and the Buyer shall pay all freight, transportation, shipping, duties, fees, handling, insurance, storage, demurrage, or similar charges from Shipping Point. Delivery of goods to common carrier shall constitute delivery and passing of title to the Buyer, and all risk of loss or damage in transit shall be borne by Buyer. Any claims or losses for damage or destruction after such delivery shall be the responsibility of Buyer.

Seller reserves the right to make delivery in installments which shall be separately invoiced and paid for when due, without regard to subsequent deliveries. Delay in delivery of any installment shall not relieve Buyer of its obligation to accept remaining deliveries.

Acknowledged shipping dates are approximate only and based on prompt receipt of all necessary information from Buyer and Buyer's compliance with terms of payment.

TAXES: All sales, excise and similar taxes which Seller may be required to pay or collect with respect to the goods and/or services covered by any Order, shall be for the account of the Buyer except as otherwise provided by law or unless specifically stated otherwise by Seller in writing.

TERMINATION AND HOLD ORDERS: No Order may be terminated by Buyer except upon written request by Buyer and approval by Seller, and if said request is approved by Seller, under the following conditions: (1) Buyer agrees to accept delivery of all of the units completed by Seller through the workday on which Seller receives the written termination request; (2) Buyer agrees to pay to Seller all direct costs and expenses applicable to the portion of the Order that is incomplete.

WARRANTY:

A. **Hardware:** Seller warrants its goods against defects in materials and workmanship under normal use and service for one (1) year from the date of invoice.

B. **Software and Firmware:** Unless otherwise specified, Seller warrants for a period of one (1) year from date of invoice that standard software or firmware, when used with Seller specified hardware, shall perform in accordance with Seller's published specifications. Seller makes no representation or warranty, expressed or implied, that the operation of the software or firmware shall be uninterrupted or error-free, or that functions contained therein shall meet or satisfy the Buyer's intended use or requirements.

C. **Services:** Seller warrants that services, including engineering and custom application, whether provided on a fixed cost or time and material basis, shall be performed in accordance with generally accepted industry practices.

D. **Remedies:** Seller's liability under this section is restricted to replacing, repairing, or issuing credit (at Seller's option) for any returned goods and only under the following conditions: (1) Seller must be promptly notified, in writing, as soon as possible after the defects have been noted by the Buyer, but not later than (1) year from date of invoice from Seller; (2) The defective goods are to be returned to the place of manufacture, shipping charges prepaid by the Buyer; (3) Seller's inspection shall disclose to its satisfaction that the goods were defective in materials or workmanship at the time of shipment; (4) Any warranty service (consisting of time, travel and expenses related to such services) performed other than at Seller's factory, shall be at Buyer's expense.

E. **Repaired/Reconditioned Goods:** As to out-of-warranty goods which Seller has repaired or reconditioned, Seller warrants for a period of sixty (60) days from date of its invoice only new components replaced in the most recent repair/reconditioning.

F. **Returns and Adjustments:** No goods may be returned unless authorized in advance by Seller and then only upon such conditions to which Seller may agree. Buyer must obtain an RMA (Return Material Authorization) number from Seller prior to any return shipment and such RMA number must appear on the shipping label and packing slip. Buyer shall be responsible for the returned goods until such time as Seller receives the same at its plant and for all charges for packing, inspection, shipping, transportation, or insurance associated with returned goods. In the event that credit for returned goods is granted, it shall be at the lesser of the then current prices or the original purchase price. Claims for shortage or incorrect material must be made within five (5) days after receipt of shipment.

ALL OTHER WARRANTIES, FOR ANY OF SELLER'S GOODS OR SERVICES, WHETHER ORAL, WRITTEN, EXPRESS, IMPLIED, STATUTORY OR OTHERWISE, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PURPOSE ARE EXCLUDED.

INTELLECTUAL PROPERTY: Seller's sale of goods or provision of related documentation or other materials to Buyer shall not transfer any intellectual property rights to Buyer unless Seller specifically agrees to do so in writing. Seller shall retain ownership of all applicable patents, trademarks, copyrights and other intellectual property rights. Buyer shall not use, copy or transfer any such items in violation of Seller's intellectual property rights or applicable law, or for any purposes other than that for which the items were furnished.

Seller shall defend any lawsuit brought against the Buyer based on a claim that the design or construction of the goods sold hereunder by Seller infringe any United States or Canadian Patent, Copyright or Mask Work Registration, provided that Buyer promptly notifies Seller of such claim in writing and further provided that, at Seller's expense, (1) Buyer gives Seller the sole right to defend or control the defense of the suit or proceeding, including settlement, and (2) Buyer provides all necessary information and assistance for that defense. In the event of a charge of infringement, Seller's obligation under the agreement shall be fulfilled if Seller, at its option and expense, either (i) settles such claim; (ii) procures for Buyer the right to continue using such goods; (iii) replaces or modifies goods to avoid infringement; or (iv) accepts the return of any infringing goods and refunds their purchase price; or (iv) defends against such claim.

If Buyer furnishes specifications or designs to Seller, the obligations of Seller set forth above shall not apply to goods made by Seller using such specifications or designs, and Buyer shall defend, indemnify and hold Seller harmless against any third party claims for infringement which arise out of Seller's use of specifications or designs furnished by Buyer.

SOFTWARE LICENSE: If goods purchased hereunder include software ("Software"), Buyer may use the Software only as part of the goods. Buyer may not use, copy, or transfer any of the Software except as may be permitted under the applicable License Agreement provided with the goods. Buyer's right to use, copy or transfer the Software shall terminate upon termination of Buyer's right to use the goods.

PACKAGING/WEIGHTS AND DIMENSIONS: Buyer specified packing or marking may be subject to additional charges not otherwise included in the price of the goods. Published weights and dimensions are estimates or approximate only and are not warranted.

FORCE MAJEURE: Seller shall not be responsible for delays in delivery or any failure to deliver due to causes beyond Seller's control, including but not limited to the following items: acts of God, war, terrorism, mobilization, civil commotion, riots, embargoes, domestic or foreign governmental regulations or orders, governmental priorities, port congestion, acts of the Buyer, its agents or employees, fires, floods, strikes, lockouts and other labor difficulties, shortages of or inability to obtain shipping space or transportation, inability to secure fuel, supplies or power at current prices or on account of shortages thereof, or due to limitations imposed by the extent of availability of Seller's normal manufacturing facilities.

If a delay excused per the above extends for more than ninety (90) days and the parties have not agreed upon a revised basis for continuing providing the goods or services at the end of the delay, including adjustment of the price, then Buyer, upon thirty (30) days' prior written notice to Seller may terminate the Order with respect to the unexecuted portion of the goods or services, whereupon Buyer shall promptly pay Seller its reasonable termination charges upon submission of Seller's invoices thereof.

LIMITATION OF LIABILITY: Seller's liability for any claim of any kind, except infringement of intellectual property rights, shall not exceed the purchase price of any goods or services which give rise to the claim. **SELLER SHALL IN NO EVENT BE LIABLE FOR BUYER'S MANUFACTURING COSTS, LOST PROFITS, LOSS OF USE OF THE GOODS OR SERVICES, COST OF CAPITAL, COST OF SUBSTITUTE GOODS, FACILITIES, SERVICES OR REPLACEMENT POWER, DOWNTIME COSTS, CLAIMS OF BUYER'S CUSTOMERS FOR DAMAGES, OR OTHER SPECIAL, PROXIMATE, INCIDENTAL, INDIRECT, EXEMPLARY OR CONSEQUENTIAL DAMAGES.** Any action against Seller must be brought within eighteen (18) months after the cause of action accrues. These disclaimers and limitations of liability shall apply regardless of the form of action, whether in contract, tort or otherwise, and further shall extend to the benefit of Seller's vendors, appointed distributors and other authorized resellers as third-party beneficiaries.

PROHIBITION FOR HAZARDOUS USE: Goods sold hereunder generally are not intended for application in and shall not be used by Buyer in the construction or operation of a nuclear installation or in connection with the use or handling of nuclear material, or for any hazardous activity or critical application, where failure of a single component could cause substantial harm to persons or property, unless the goods have been specifically approved for such a use or application. Seller disclaims all liability for any loss or damage resulting from such unauthorized use and Buyer shall defend, indemnify and hold harmless the Seller against any such liability, whether as a result of breach of contract, warranty, tort (regardless of the degree of fault or negligence), strict liability or otherwise.

EXPORT CONTROL: Buyer shall comply with all export control laws and regulations of the United States, and all sales hereunder are subject to those laws and regulations. Seller shall not be named as shipper or exporter of record for any goods sold hereunder unless specifically agreed to in writing by Seller. At Seller's request, Buyer shall furnish Seller with end-user and end-user information to determine export license applicability. Buyer warrants, in accordance with U.S. Export Law, that goods sold hereunder shall not be destined for facilities or activities involving nuclear, chemical or biological weapons, or related missile delivery systems in named prohibited regions or countries.

GOVERNING LAW: Seller intends to comply with all laws applicable to its performance under any order. All matters relating to interpretation and effect of these terms and any authorized changes, modifications or amendments thereto shall be governed by the laws of the Commonwealth of Pennsylvania. No government contract regulations or clauses shall apply to the goods or services, this agreement, or act to bind Seller unless specifically agreed to by Seller in writing.

NON-WAIVER BY SELLER: Waiver by Seller of a breach of any of these terms and conditions shall not be construed as a waiver of any other breach.

SEVERABILITY AND ENTIRE AGREEMENT: If any provision of these terms and conditions is unenforceable, the remaining terms shall nonetheless continue in full force and effect. This writing, together with any other terms and conditions Seller specifically agrees to in writing, constitutes the entire terms and conditions of sale between Buyer and Seller and supercedes any and all prior discussions, and negotiations on its subject matter.

AMETEK[®]
DREXELBROOK
An ISO 9001 Certified Company

205 Keith Valley Road, Horsham, PA 19044
U.S. and Canada: 1-800-553-9092
24-Hour Service: 1-800-527-6297
International: +1 215-674-1234
Fax: +1 215-674-2731
E-mail: drexelbrook.info@ametek.com
Website: www.drexelbrook.com